



Owner's Manual

Original Instructions

Commercial Air Conditioners

Photovoltaic Direct-driven Inverter VRF

Models:

GMV-Y72WM/C-F(U)

GMV-Y96WM/C-F(U)

GMV-Y120WM/C-F(U)


.....

GMV-Y360WM/C-F(U)

Thank you for choosing commercial air conditioners. Please read this Owner's Manual carefully before operation and retain it for future reference.


If you have lost the Owner's Manual, please contact the local agent or visit www.gree.com or send an email to global@gree.com.cn for the electronic version.

GREE ELECTRIC APPLIANCES, INC. OF ZHUHAI

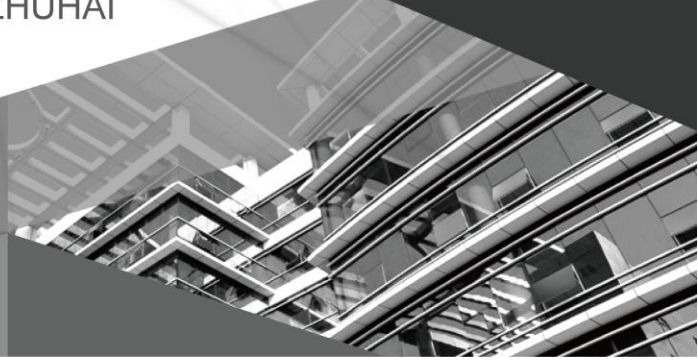

Preface

Gree Photovoltaic Direct-driven Inverter VRF System, with the most advanced technologies in the world, uses eco-friendly refrigerant R410A as its cooling medium. For correct installation and operation, please read this manual carefully.

| | |
|---|--|
|  | This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death. |
| ⚠ WARNING | This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user. |
| ⚠ CAUTION | This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property. |
| NOTICE | NOTICE is used to address practices not related to personal injury. |

| | |
|------------------|--|
| ⚠ WARNING | |
| (1) | Instructions for installation and use of this product are provided by the manufacturer. |
| (2) | Installation must be performed in accordance with the requirements of NEC and CEC by authorized personnel only. |
| (3) | For safety operation, please strictly follow the instructions in this manual. |
| (4) | During operation, the gross rated capacity of working IDU should be within the gross rated capacity of ODU. Otherwise, IDU's cooling/heating performance will be reduced. |
| (5) | This manual must be in the hands of direct operators or maintenance men. |
| (6) | In case of malfunction and operation failure, please examine the following items and contact our authorized service centers as soon as possible. 1) Nameplate (model, cooling capacity, product code, ex-factory date). 2) Malfunction status (detail description of conditions before and after malfunction occurs) |
| (7) | All units have been strictly tested and proved to be qualified before ex-factory. To avoid unit damage or even operation failure which may be caused by improper disassembly, please do not disassemble un its by yourself. If disassembly is needed, please contact our authorized serve centers for help. |
| (8) | All graphics and information in this manual are only for reference. Manufacturer reserves the right for changes in terms of sales or production at any time and without prior notice. |
| (9) | If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. |

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

Exception Clauses

Manufacturer will bear no responsibilities when personal injury or property loss is caused by the following reasons:

(1) Damage the product due to improper use or misuse of the product;

(2) Alter, change, maintain or use the product with other equipment without abiding by the instruction manual of manufacturer;

(3) After verification, the defect of product is directly caused by corrosive gas;

(4) After verification, defects are due to improper operation during transportation of product;

(5) Operate, repair, maintain the unit without abiding by instruction manual or related regulations;

(6) After verification, the problem or dispute is caused by the quality specification or performance of parts and components that produced by other manufacturers;

(7) The damage is caused by natural calamities, bad using environment or force majeure.

Contents

| | |
|---|-----------|
| 1 SAFETY PRECAUTIONS | 1 |
| 2 PRODUCT INTRODUCTION | 3 |
| 2.1 NAMES OF MAIN PARTS | 3 |
| 2.2 COMBINATIONS OF OUTDOOR UNITS | 3 |
| 2.3 COMBINATIONS OF INDOOR AND OUTDOOR UNITS | 4 |
| 2.4 THE RANGE OF PRODUCTION WORKING TEMPERATURE..... | 5 |
| 3 PREPARATION BEFORE INSTALLATION..... | 5 |
| 3.1 STANDARD PARTS | 5 |
| 3.2 INSTALLATION SITE..... | 6 |
| 3.3 PIPING WORK REQUIREMENTS | 11 |
| 4 INSTALLATION INSTRUCTION..... | 12 |
| 4.1 PHYSICAL DIMENSION OF THE OUTDOOR UNIT AND MOUNTING HOLE..... | 12 |
| 4.2 CONNECTION PIPE..... | 14 |
| 4.3 INSTALLATION OF THE CONNECTION PIPE..... | 24 |
| 4.4 AIR PURGING AND REFRIGERANT CHARGE | 29 |
| 4.5 ELECTRIC WIRING | 33 |
| 4.6 SYSTEM COMMUNICATION..... | 35 |
| 4.7 CONNECTION METHOD AND STEPS FOR SYSTEM COMMUNICATION | 40 |
| 4.8 EXTERNAL ELECTRICAL WIRING DIAGRAM | 45 |
| 4.9 INSTALLATION OF PHOTOVOLTAIC SYSTEM..... | 46 |
| 5 CHECK ITEMS AFTER INSTALLATION AND TRIAL RUN..... | 50 |
| 5.1 CHECK ITEMS AFTER INSTALLATION..... | 50 |
| 5.2 TRIAL RUN | 50 |
| 6 COMMON MALFUNCTION AND TROUBLESHOOTING | 66 |
| 7 ERROR INDICATION | 68 |
| 8 MAINTENANCE AND CARE | 72 |
| 8.1 OUTDOOR HEAT EXCHANGER | 72 |
| 8.2 DRAIN PIPE..... | 72 |
| 8.3 NOTICE BEFORE SEASONAL USE..... | 72 |
| 8.4 MAINTENANCE AFTER SEASONAL USE..... | 72 |
| 8.5 PARTS REPLACEMENT..... | 72 |
| 9 AFTER-SALES SERVICE..... | 73 |

1 Safety Precautions

| ⚠WARNING |
|--|
| (1) This product can't be installed at corrosive, inflammable or explosive environment or the place with special requirements, such as kitchen. Otherwise, it will affect the normal operation or shorten the service life of the unit, or even cause fire hazard or serious injury. As for above special places, please adopt special air conditioner with anti-corrosive or anti-explosion function. |
| (2) Follow this instruction to complete the installation work. Please carefully read this manual before unit startup and service. |
| (3) Wire size of power cord should be large enough. The damaged power cord and connection wire should be replaced by exclusive cable. |
| (4) After connecting the power cord, please fix the electric box cover properly in order to avoid accident. |
| (5) Never fail to comply with the nitrogen charge requirements. Charge nitrogen when welding pipes. |
| (6) Never short-circuit or cancel the pressure switch to prevent unit damage. |
| (7) Please firstly connect the wired controller before energization, otherwise wired controller cannot be used. |
| (8) Before using the unit, please check if the piping and wiring are correct to avoid water leakage, refrigerant leakage, electric shock, or fire etc.. |
| (9) Do not insert fingers or objects into air outlet/inlet grille. |
| (10) Open the door and window and keep good ventilation in the room to avoid oxygen deficit when the gas/oil supplied heating equipment is used. |
| (11) Never start up or shut off the air conditioner by means of directly plug or unplug the power cord. |
| (12) Turn off the unit after it runs at least five minutes; otherwise it will influence oil return of the compressor. |
| (13) Do not allow children operate this unit. |
| (14) Do not operate this unit with wet hands. |
| (15) Turn off the unit or cut off the power supply before cleaning the unit, otherwise electric shock or injury may happen. |
| (16) Never spray or flush water towards unit, otherwise malfunction or electric shock may happen. |
| (17) Do not expose the unit to the moist or corrosive circumstances. |
| (18) Under cooling mode, please don't set the room temperature too low and keep the temperature difference between indoor and outdoor unit within 5°C(41°F). |
| (19) User is not allowed to repair the unit. Fault service may cause electric shock or fire accidents. Please contact Gree appointed service center for help. |
| (20) Before installation, please check if the power supply is in accordance with the requirements specified on the nameplate. And also take care of the power safety. |
| (21) Installation should be conducted by dealer or qualified personnel. Please do not attempt to install the unit by yourself. Improper handling may result in water leakage, electric shock or fire disaster etc.. |
| (22) Be sure to use the exclusive accessory and part to prevent the water leakage, electric shock and fire accidents. |

- | |
|---|
| (23) Make sure the unit can be earthed properly and soundly after plugging into the socket so as to avoid electric shock. Please do not connect the ground wire to gas pipe, water pipe, lightning rod or telephone line. |
| (24) Electrify the unit 8 hours before operation. Please switch on for 8 hours before operation. Do not cut off the power when 24 hours short-time halting (to protect the compressor). |
| (25) If refrigerant leakage happens during installation, please ventilate immediately. Poisonous gas will emerge if the refrigerant gas meets fire. |
| (26) Volatile liquid, such as diluent or gas will damage the unit appearance. Only use soft cloth with a little neutral detergent to clean the outer casing of unit. |
| (27) If anything abnormal happens (such as burning smell), please power off the unit and cut off the main power supply, and then immediately contact Gree appointed service center. If abnormality keeps going, the unit might be damaged and lead to electric shock or fire. |

GREE will not assume responsibility of personal injury or equipment damage caused by improper installation and commission, unnecessary service and incapable of following the rules and instructions listed in this manual.

2 Product Introduction

Gree Photovoltaic Direct-driven Inverter VRF System adopts inverter compressor technology. According to change the displacement of compressor, stepless capacity regulation within range of 10%-100% can be realized. Gree air conditioner is absolutely your best choice.

2.1 Names of Main Parts

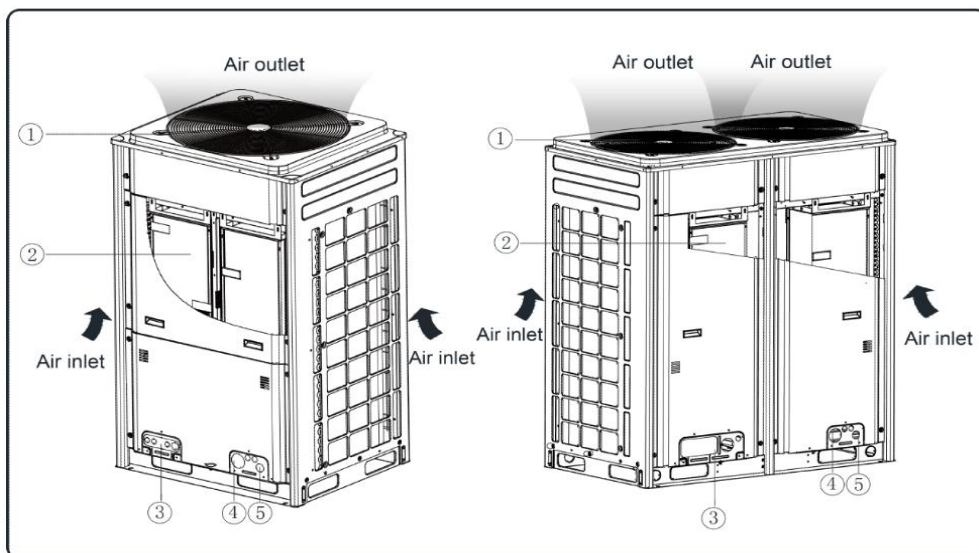


Fig. 2.1.1

| NO. | ① | ② | ③ | ④ | ⑤ |
|------|------------|-----------------------|-----------------|-------------------------|---------------------------------|
| Name | Fan, Motor | Electric Box Assembly | Valve interface | Power cord through-hole | Communication code through-hole |

NOTICE! The picture is only used for reference and the actual product prevails.

2.2 Combinations of Outdoor Units

| | | | |
|------------------|--------------------------------------|--------------------------------------|--------------------------------------|
| Model (Single) | GMV-Y144WMC-F(U) | GMV-Y168WMC-F(U) | GMV-Y192WMC-F(U) |
| Model (Combined) | GMV-Y72WMC-F(U) + GMV-Y72WMC-F(U) | GMV-Y72WMC-F(U) + GMV-Y96WMC-F(U) | GMV-Y96WMC-F(U) + GMV-Y96WMC-F(U) |

| | | | |
|------------------|---------------------------------------|--|---|
| Model (Single) | GMV-Y216WMC-F(U) | GMV-Y240WMC-F(U) | GMV-Y264WMC-F(U) |
| Model (Combined) | GMV-Y96WMC-F(U) + GMV-Y120WMC-F(U) | GMV-Y120WMC-F(U) + GMV-Y120WMC-F(U) | GMV-Y72WMC-F(U) + GMV-Y96WMC-F(U) + GMV-Y96WMC-F(U) |

| | | | |
|------------------|---|--|---|
| Model (Single) | GMV-Y288WMC-F(U) | GMV-Y312WMC-F(U) | GMV-Y336WMC-F(U) |
| Model (Combined) | GMV-Y96WMC-F(U) + GMV-Y96WMC-F(U) + GMV-Y96WMC-F(U) | GMV-Y96WMC-F(U) + GMV-Y96WMC-F(U) + GMV-Y120WMC-F(U) | GMV-Y96WMC-F(U) + GMV-Y120WMC-F(U) + GMV-Y120WMC-F(U) |

| | |
|------------------|--|
| Model (Single) | GMV-Y360WMC-F(U) |
| Model (Combined) | GMV-Y120WMC-F(U) + GMV-Y120WMC-F(U) + GMV-Y120WMC-F(U) |

2.3 Combinations of Indoor and Outdoor Units

| ODU Model | Max number of connectable IDU (unit) | ODU Model | Max number of connectable IDU (unit) |
|------------------|--------------------------------------|------------------|--------------------------------------|
| GMV-Y72WMC-F(U) | 13 | GMV-Y240WMC-F(U) | 39 |
| GMV-Y96WMC-F(U) | 16 | GMV-Y264WMC-F(U) | 46 |
| GMV-Y120WMC-F(U) | 19 | GMV-Y288WMC-F(U) | 50 |
| GMV-Y144WMC-F(U) | 23 | GMV-Y312WMC-F(U) | 53 |
| GMV-Y168WMC-F(U) | 29 | GMV-Y336WMC-F(U) | 56 |
| GMV-Y192WMC-F(U) | 33 | GMV-Y360WMC-F(U) | 59 |
| GMV-Y216WMC-F(U) | 36 | | |

The total capacity of indoor units should be within 50%~135% of that of outdoor units.

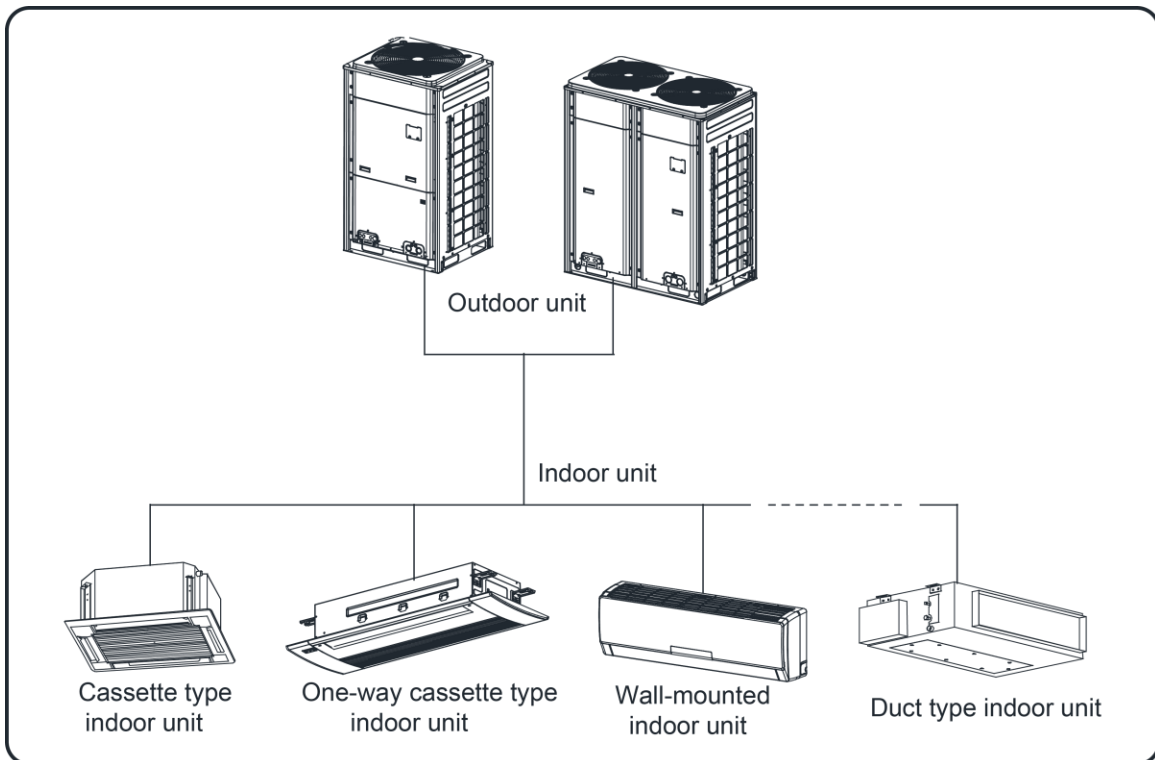


Fig.2.3.1

Fig.2.3.1 is the combination view of the ODU of Photovoltaic Direct-driven Inverter VRF and the IDU of Photovoltaic Direct-driven Inverter VRF. IDU can be four-way cassette type, one-way cassette type, wall-mounted type, duct type, etc. When any one IDU receives operation signal, ODU will start to work according to the capacity; when all IDUs stop, ODU will also stop.

2.4 The Range of Production Working Temperature

| | |
|---------|---|
| Cooling | Ambient temperature: -5° C(23° F)~52° C(125.6° F) |
| Heating | Ambient temperature: -20° C (-4° F)~24° C (75.2° F) |

When the indoor units are all VRF fresh air indoor units, the unit operating range is as follows:

| | |
|---------|---|
| Cooling | Ambient temperature: 16° C (60.8° F) ~45° C (113° F) |
| Heating | Ambient temperature: -7° C (19.4° F) ~16° C (60.8° F) |


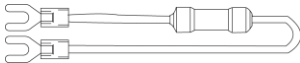

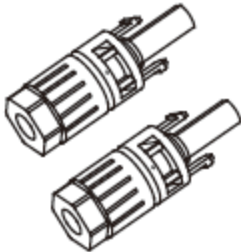
NOTICE! Out of the working Temperature Range may damage this product and will invalidate the warranty.






3 Preparation before Installation

NOTICE! The picture is only used for reference and the actual product prevails. Unit: mm(in.).

3.1 Standard Parts

Please use the following standard parts supplied by Gree.

| Parts for Outdoor Unit | | | | |
|------------------------|--|---|----------|--|
| Number | Name | Picture | Quantity | Remarks |
| 1 | Owner's Manual |  | 1 | |
| 2 | Wiring (match with resistance) |  | 1 | Must be connected to the last IDU of communication connection |
| 3 | Mark (Master) |  | 2 | Attach on the wired controller of master IDU or on the front panel |
| 4 | Photovoltaic connector (positive pole) |  | 4 | Used with the photovoltaic positive pole terminal |
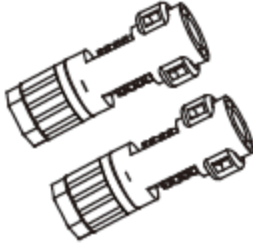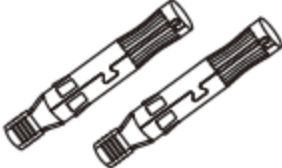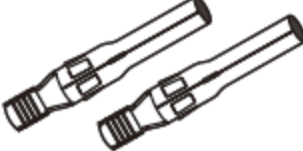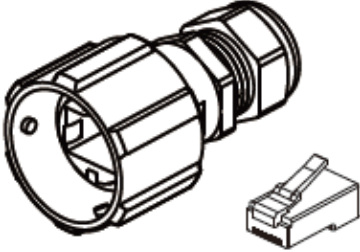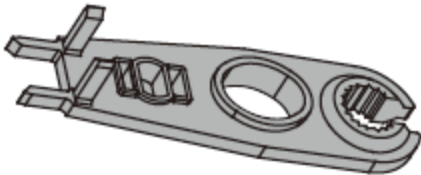
| Parts for Outdoor Unit | | | | |
|------------------------|--|---|----------|--|
| Number | Name | Picture | Quantity | Remarks |
| 5 | Photovoltaic connector (negative pole) |  | 4 | Used with the photovoltaic negative pole terminal |
| 6 | Photovoltaic positive pole terminal |  | 4 | Used with the photovoltaic connector (positive pole) |
| 7 | Photovoltaic negative pole terminal |  | 4 | Used with the photovoltaic connector (negative pole) |
| 8 | Communication terminal (plug is provided) |  | 3 | |
| 9 | Disassembly tool of photovoltaic connector |  | 1 | Use one end of the tool to lock photovoltaic cable and use the other end to disassemble the photovoltaic connector |

3.2 Installation Site

| |
|---|
| ⚠ WARNING |
| (1) Install the unit at a place where is adequate to withstand the weight of the unit and make sure the unit would not shake or fall off. |
| (2) Never expose the unit under direct sunshine and rainfall. Install the unit at a place where is against dust, typhoon and earthquake. |
| (3) Try to keep the unit away from combustible, inflammable and corrosive gas or exhaust gas. |
| (4) Leave some space for heat exchanging and servicing so as to guarantee unit normal operation. |

(5) Keep the indoor and outdoor units close to each other as much as possible so as to decrease the pipe length and bends.

(6) Never allow children to approach to the unit and take measures to prevent children touching the unit.

3.2.1 When the outdoor unit is totally surrounded by walls, please refer to following figures for space dimension.

3.2.1.1 Space dimension for single-module unit

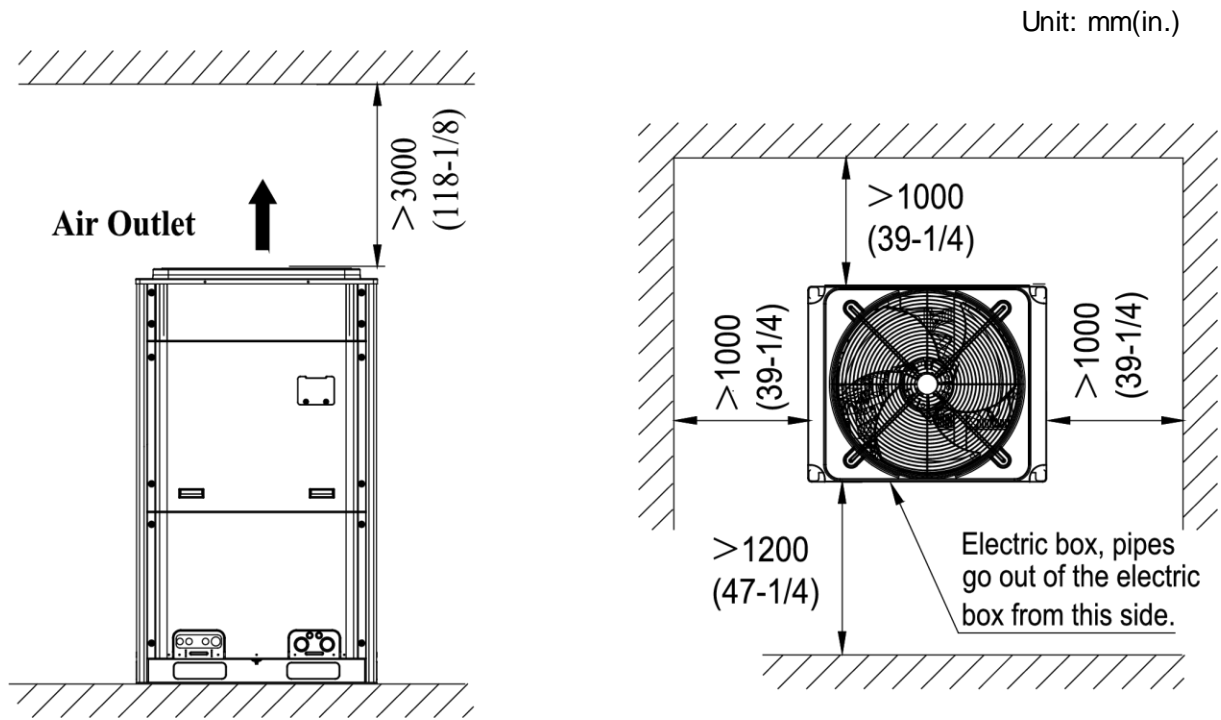


Fig.3.2.1

3.2.1.2 Space dimension for dual-module unit

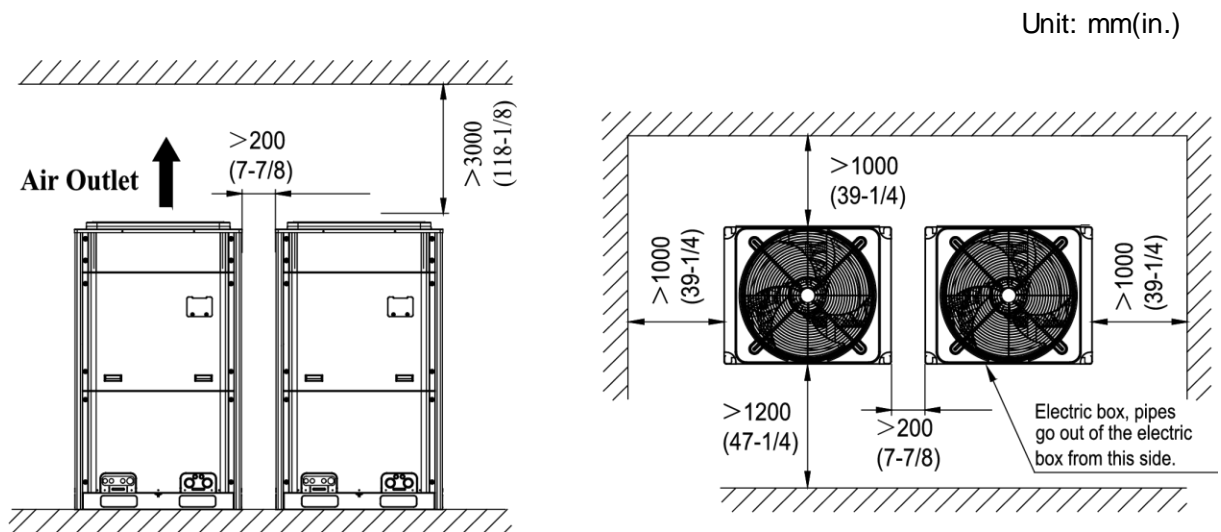


Fig.3.2.2

3.2.1.3 Space dimension for three-module unit

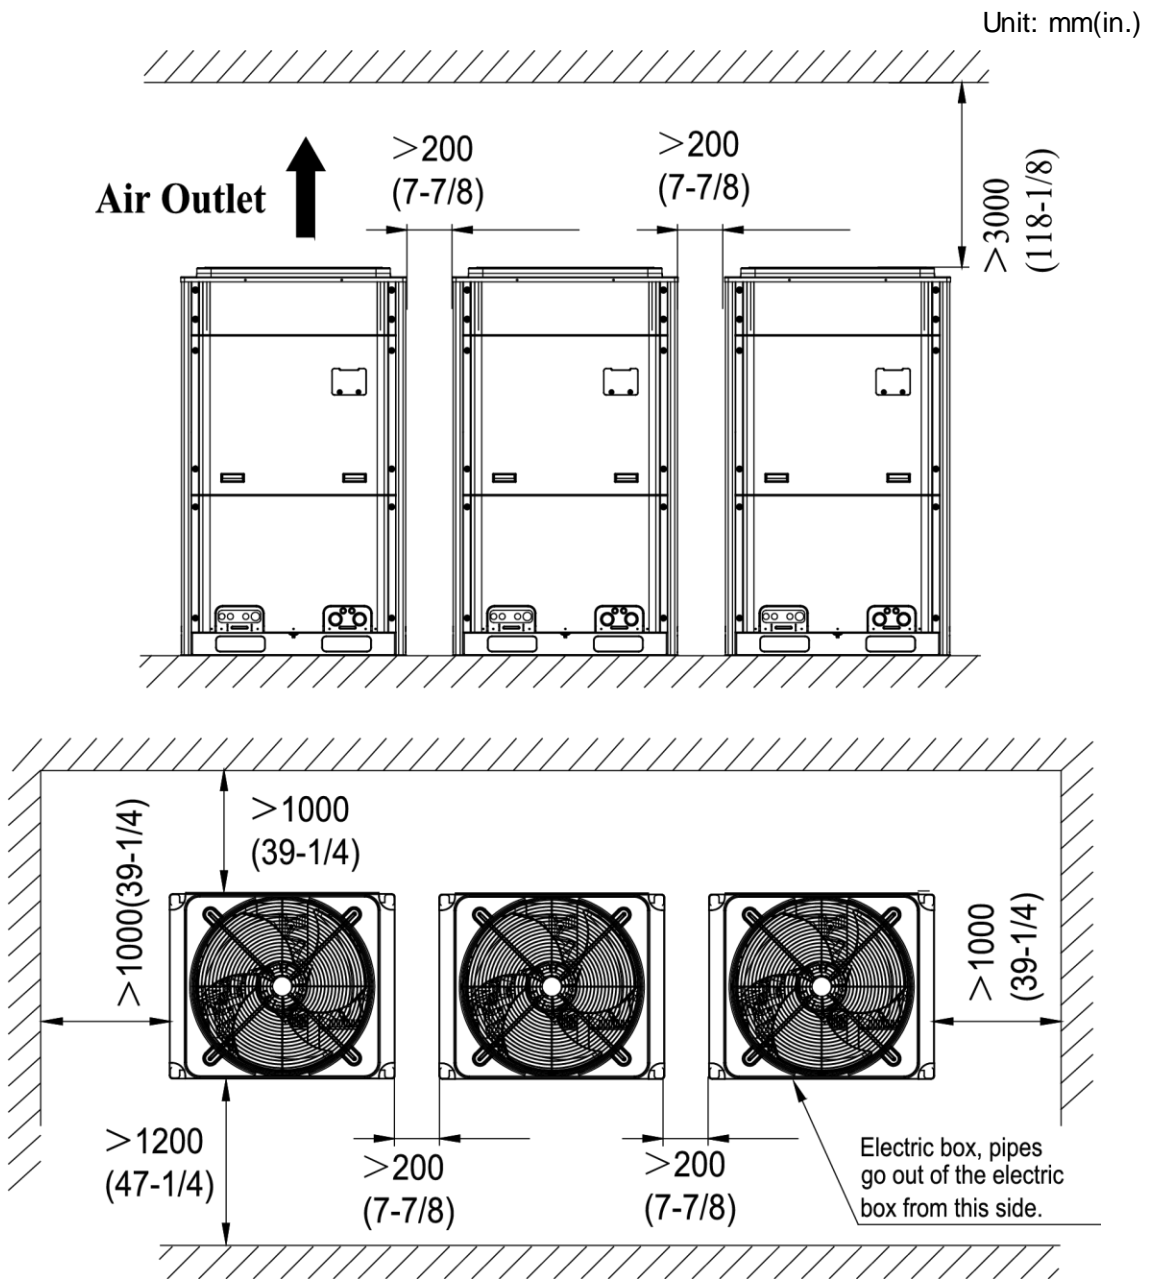


Fig.3.2.3

3.2.2 When there is wall (or similar obstruction) above the unit, keep the distance between the unit top and the wall at least 3000mm(118-1/8in.) or above. When the unit is located in a totally open space with no obstructions in four directions, keep the distance between the unit top and wall at least 1500mm(59in.) or above (See Fig. 3.2.4). When space is limited within 1500mm(59in.) or the unit is not set in an open space, air outlet pipe is required to be installed in order to keep good ventilation (See Fig. 3.2.5).

Unit: mm(in.)

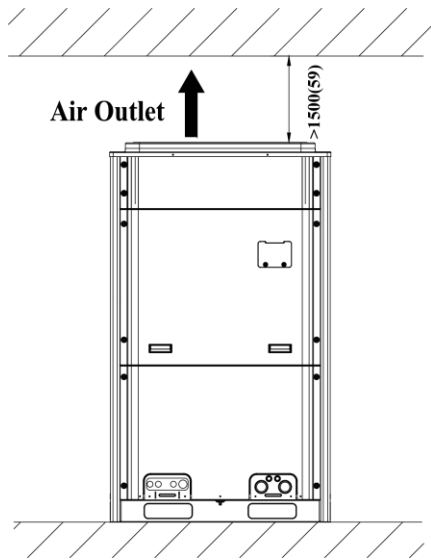


Fig.3.2.4

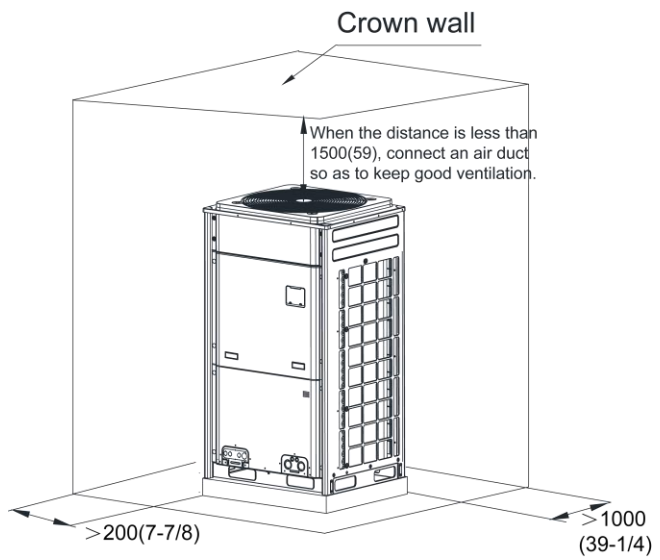


Fig.3.2.5

3.2.3 Space dimension for multiple-module unit

For keeping good ventilation, make sure there is no obstruction above the unit.

When the unit is located at a half-open space (front and left/right side is open), install the unit as per the same or opposite direction.

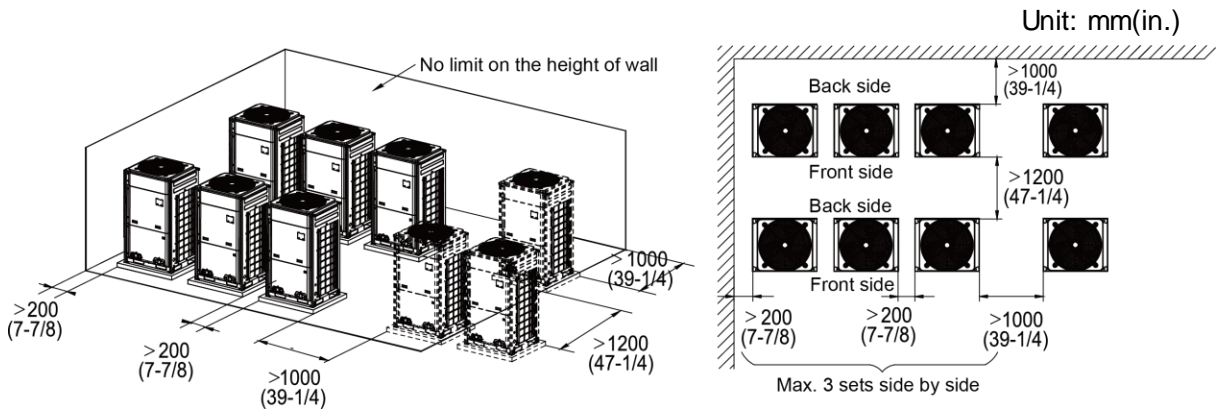


Fig.3.2.6

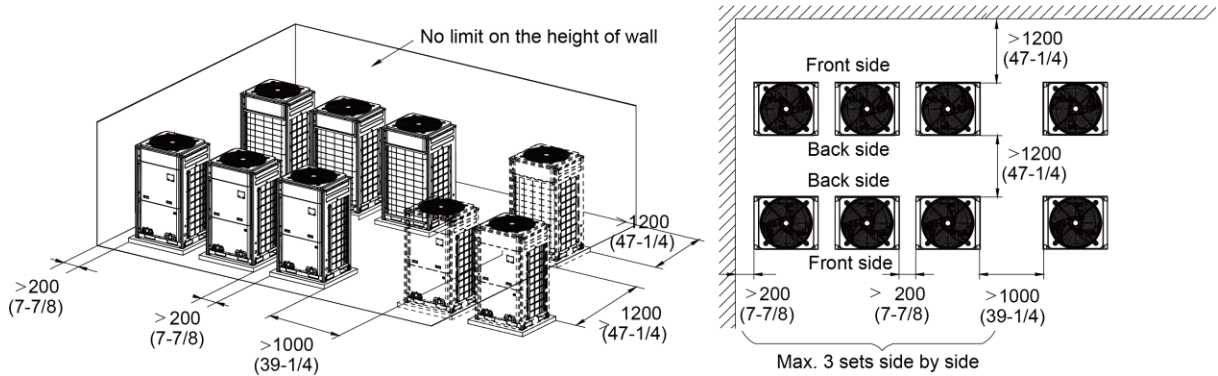


Fig.3.2.7

3.2.4 Considering the seasonal wind in outdoor unit installation

Anti-monsoon installation requirement for unit not connecting exhaust duct

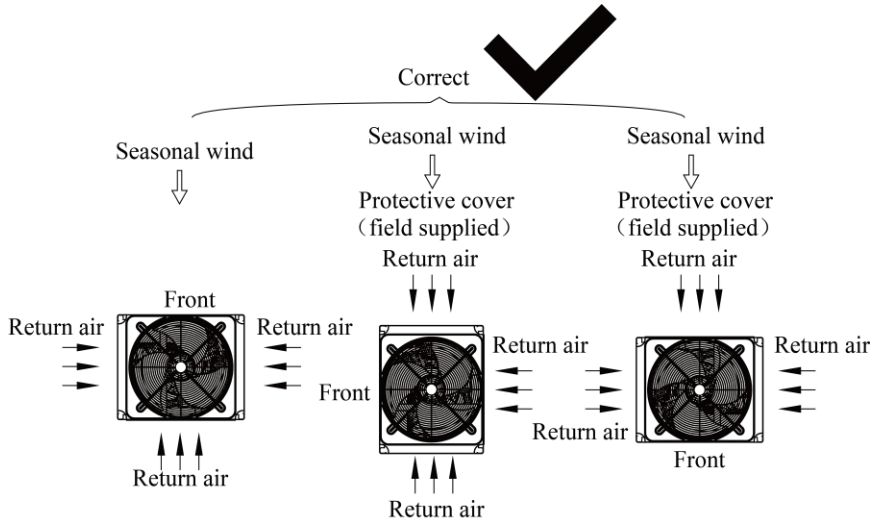


Fig.3.2.8

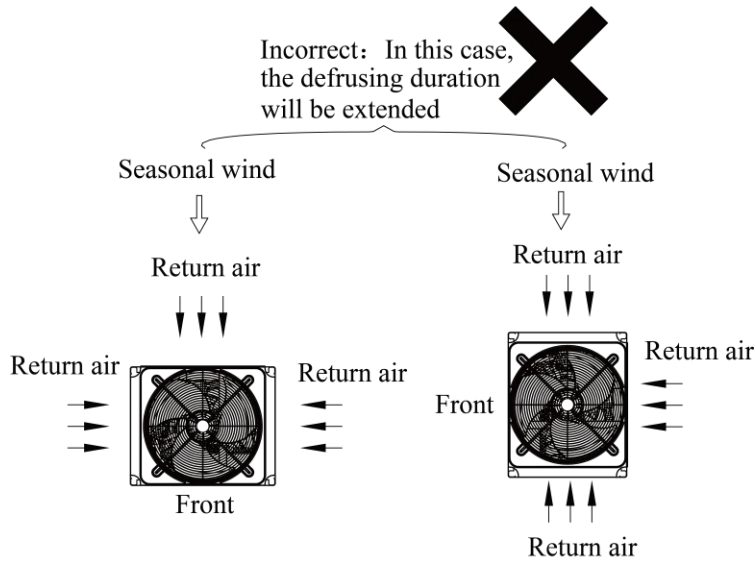


Fig.3.2.9

Anti-monsoon installation requirement for unit connecting exhaust duct

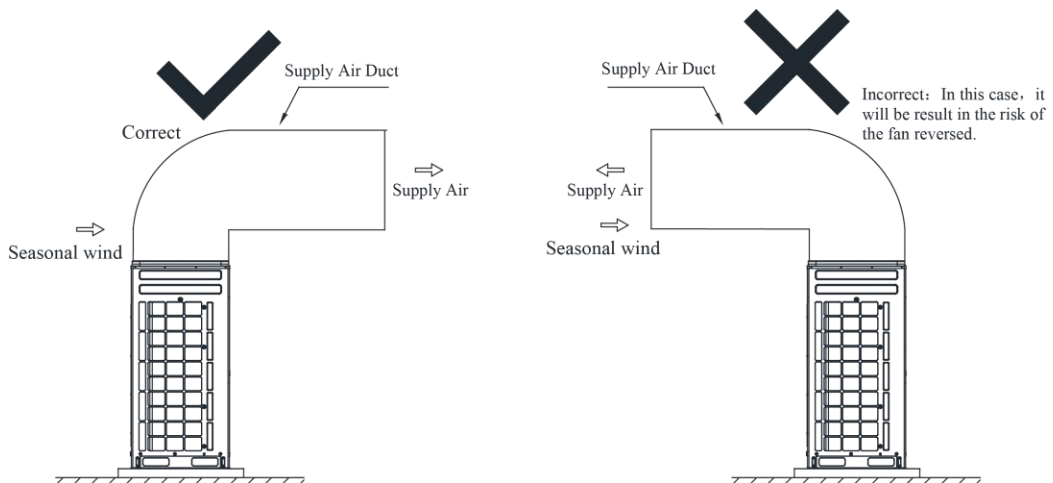


Fig.3.2.10

3.2.5 Considering snow in outdoor unit installation

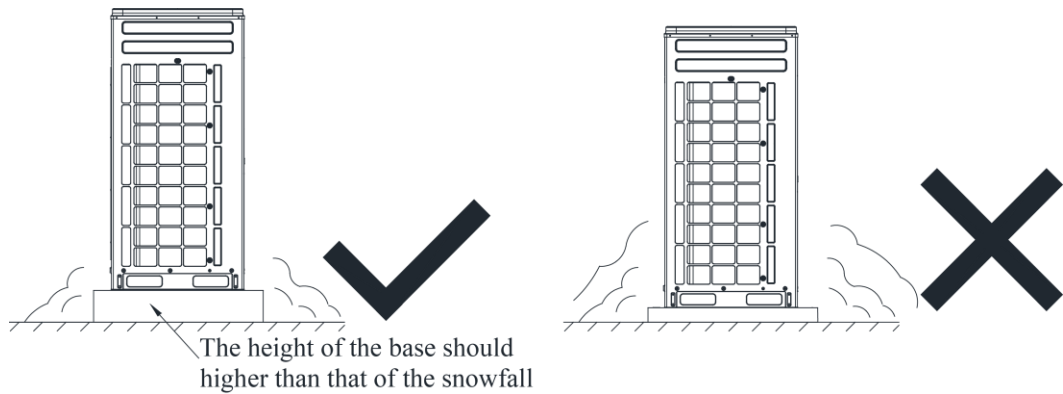


Fig.3.2.11

3.3 Piping Work Requirements

There should be no fall among outdoor modules. Refer to the table below for piping work requirements.

| R410A Refrigerant System | | |
|--------------------------|------------------------|------|
| Outer Diameter mm(in.) | Wall Thickness mm(in.) | Type |
| Φ6.35(1/4) | ≥0.8(1/32) | O |
| Φ9.52(3/8) | ≥0.8(1/32) | O |
| Φ12.7(1/2) | ≥0.8(1/32) | O |
| Φ15.9(5/8) | ≥1.0(3/76) | O |
| Φ19.05(3/4) | ≥1.0(3/76) | 1/2H |
| Φ22.2(7/8) | ≥1.2(1/21) | 1/2H |
| Φ28.6(1-1/8) | ≥1.2(1/21) | 1/2H |
| Φ34.9(1-3/8) | ≥1.3(2/39) | 1/2H |
| Φ41.3(1-5/8) | ≥1.5(1/17) | 1/2H |

4 Installation Instruction

4.1 Physical Dimension of the Outdoor Unit and Mounting Hole

Outline and Physical Dimension of GMV-Y72WM/C-F(U).

Unit: mm(in.)

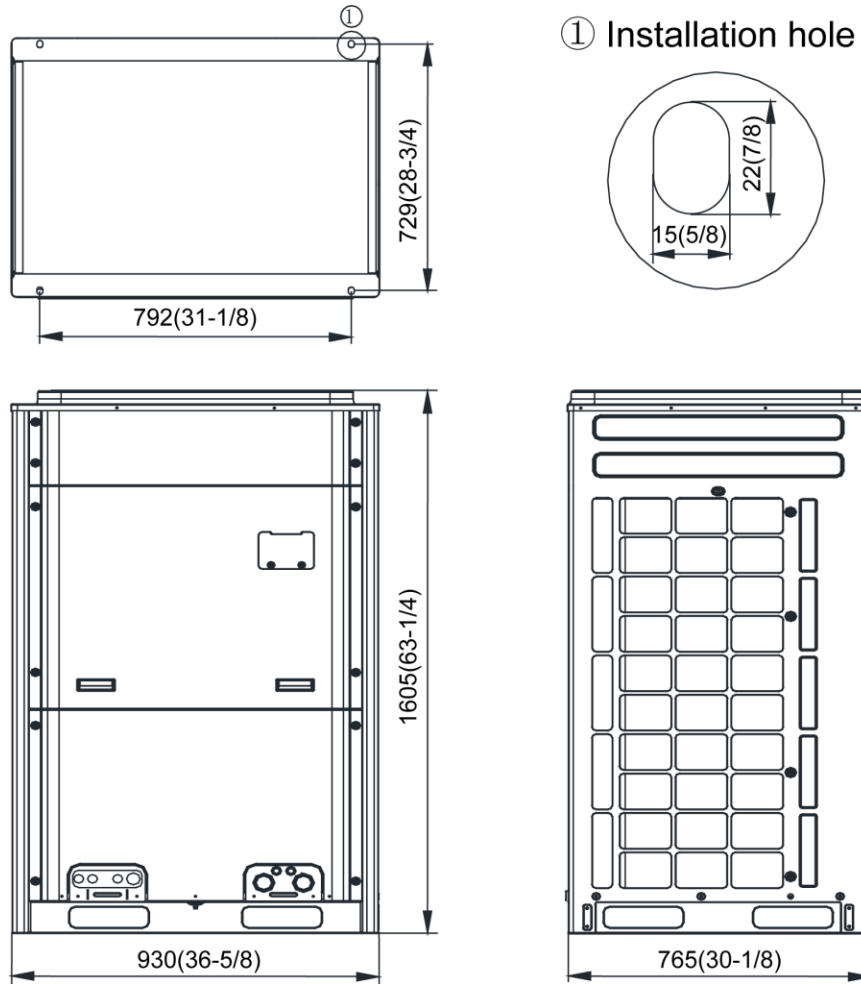


Fig.4.1.1

Outline and Physical Dimension of GMV-Y96WM/C-F(U) and GMV-Y120WM/C-F(U).

Unit: mm(in.)

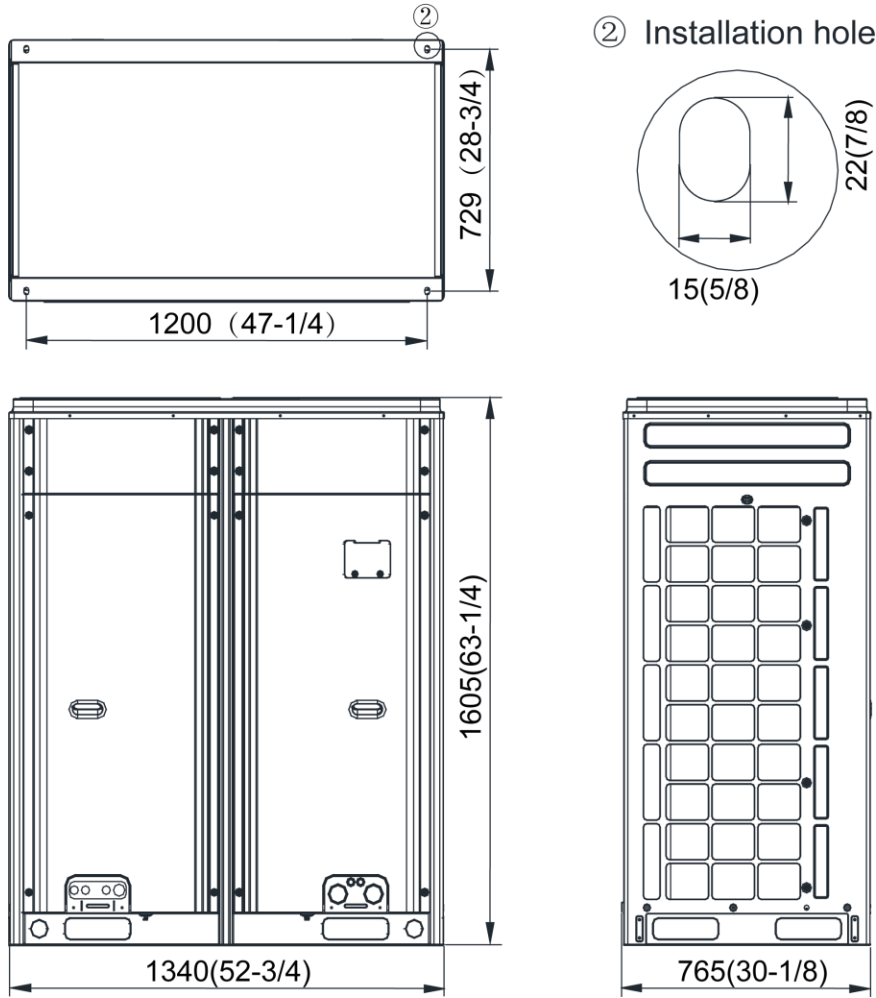


Fig.4.1.2

4.2 Connection Pipe

4.2.1 Schematic Diagram of Piping Connection

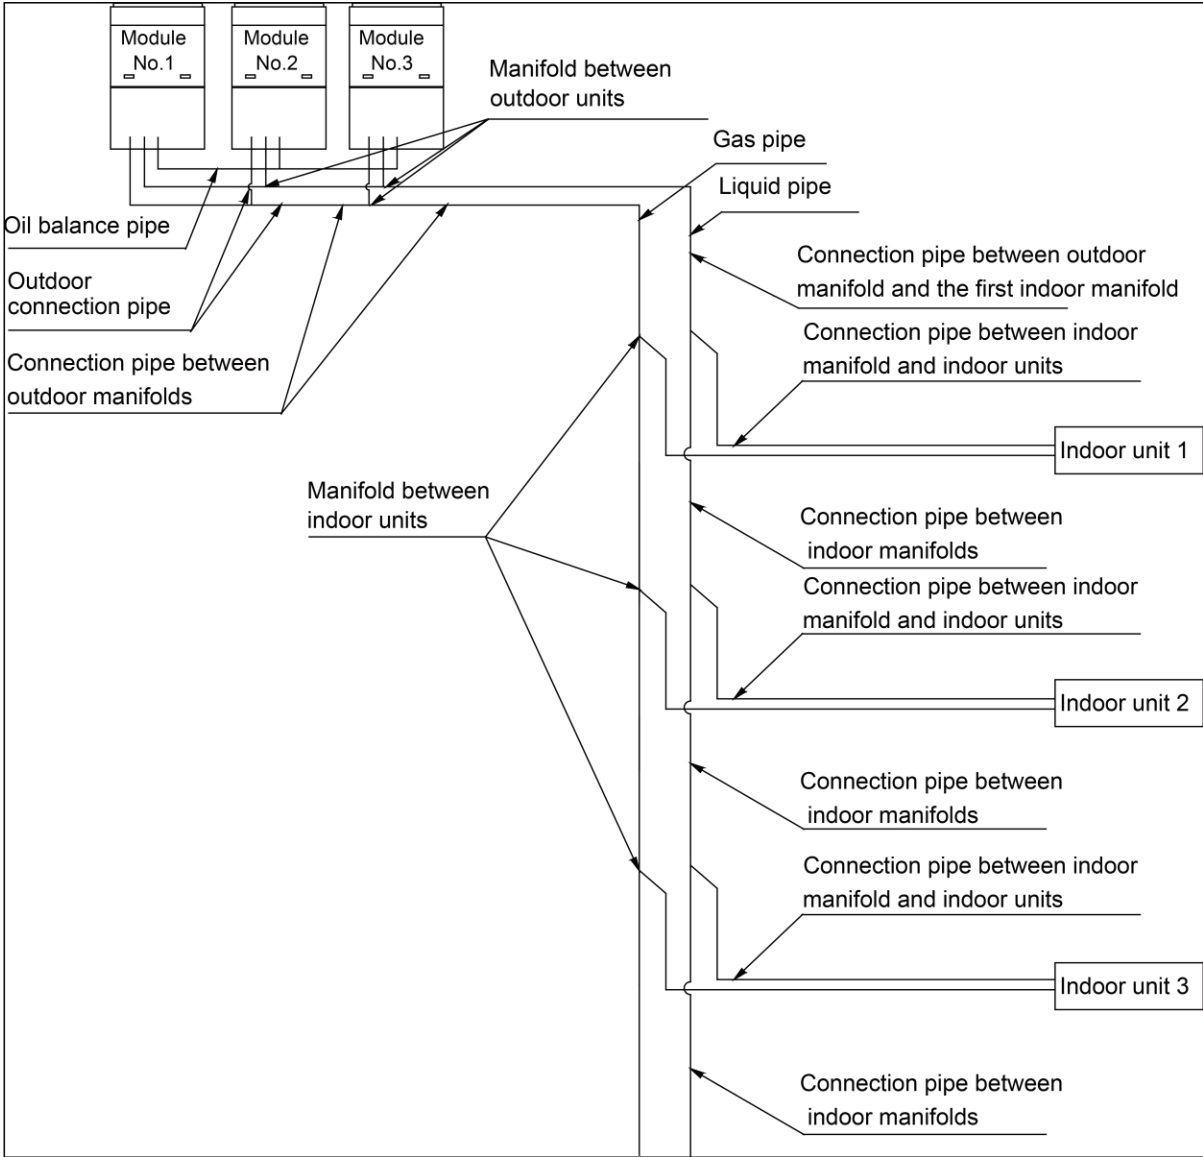


Fig.4.2.1

4.2.2 Schematic Diagram of Piping Sequence

GMV-Y72WM/C-F(U)

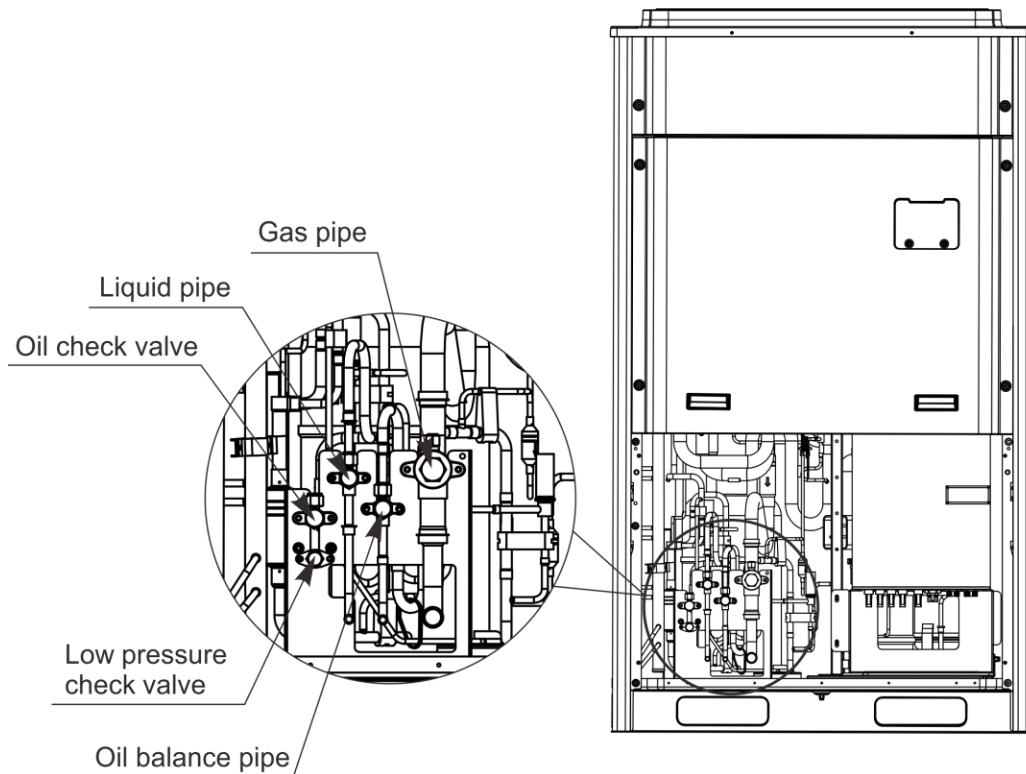


Fig.4.2.2

GMV-Y96WM/C-F(U) and GMV-Y120WM/C-F(U).

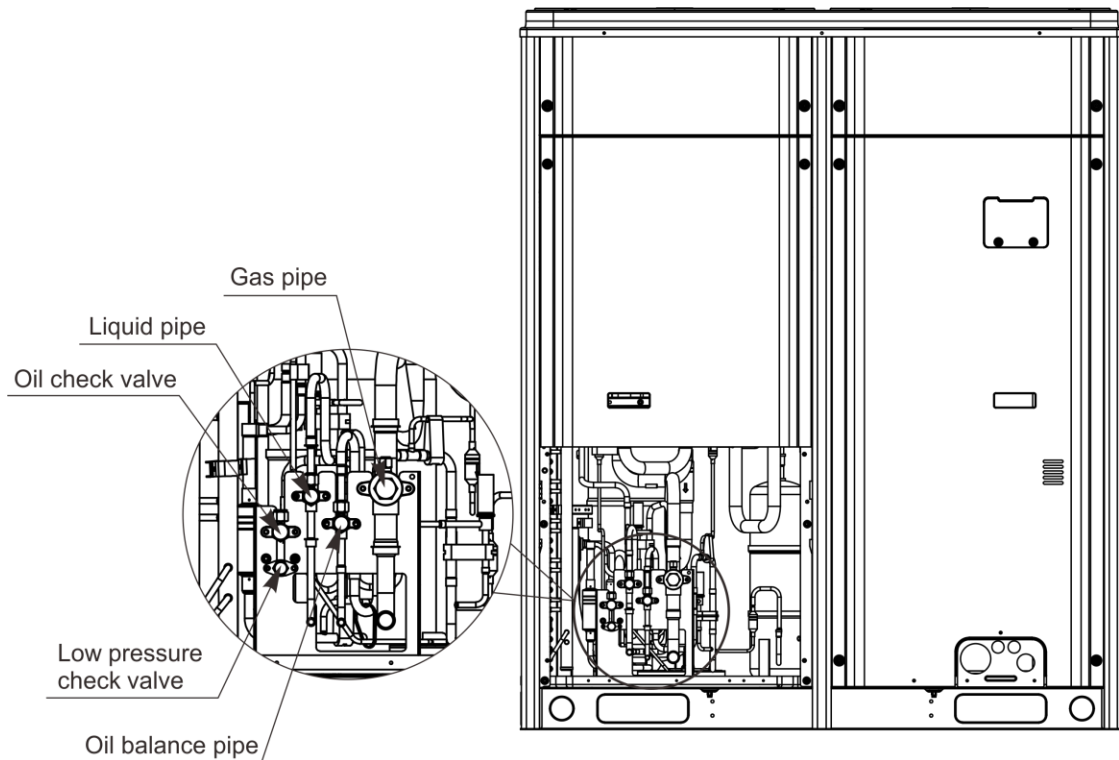


Fig.4.2.3

4.2.3 Allowable pipe length and drop height among indoor and outdoor units

Y type branch joint is adopted to connect indoor and outdoor units. Connecting method is shown in the figure below.

Remark: Equivalent length of one Y-type manifold is about 0.5m(1-3/4ft.).

Unit: m(ft.)

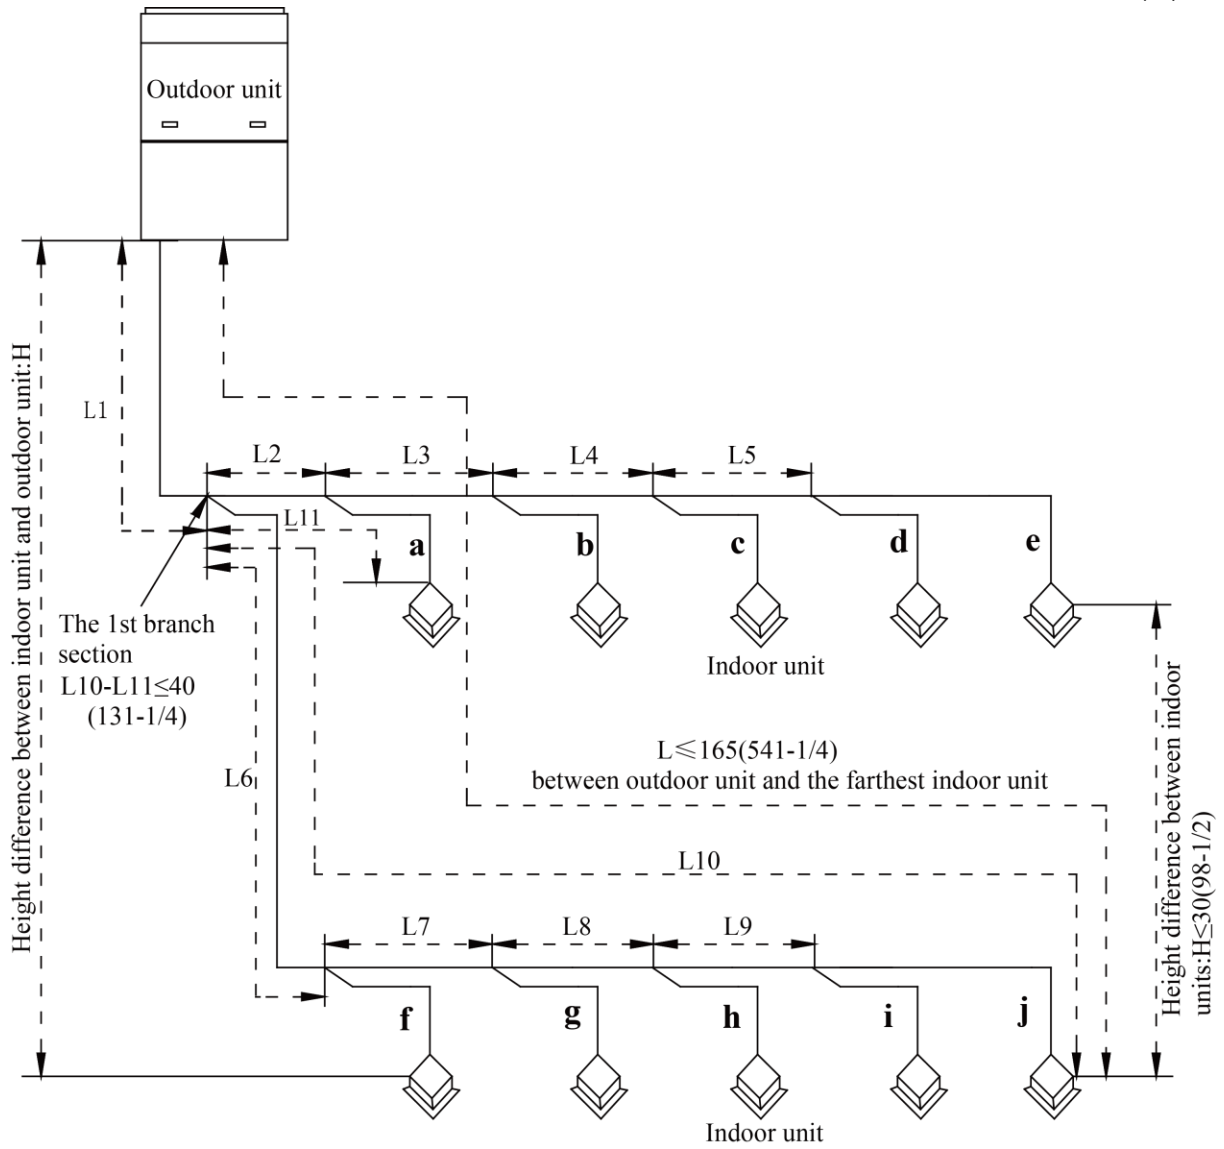


Fig.4.2.4

L10: Length from the first branch to the farthest IDU;

L11: Length from the first branch to the nearest IDU;

Equivalent length of branch of IDU is 0.5m(1-3/4ft.).

| R410A Refrigerant System | | Allowable Value m(ft.) | Fitting Pipe |
|--|-------------------|---------------------------|--------------------------------|
| Total length (actual length) of fitting pipe | | ≤1000(3280-3/4) | L1+L2+L3+L4+...+L9+a+b+...+i+j |
| Length of farthest fitting pipe m(ft.) | Actual length | ≤165(541-1/4) | L1+L6+L7+L8+L9+j |
| | Equivalent length | ≤190(623-1/4) | |

| R410A Refrigerant System | | Allowable Value m(ft.) | Fitting Pipe |
|---|--------------------------|---------------------------|---------------------|
| Difference between the pipe length from the first branch of IDU to the farthest IDU and the pipe length from the first branch of IDU to the nearest IDU | | ≤40(131-1/4) | L10-L11 |
| Equivalent length from the first branch to the furthest piping (1) | | ≤40(131-1/4) | L6+L7+L8+L9+j |
| Height difference between outdoor unit and indoor unit | Outdoor unit at upper(2) | ≤90(295-1/4) | — |
| | Outdoor unit at lower(2) | ≤90(295-1/4) | — |
| Height difference between indoor units | | ≤30(98-2/4) | — |
| Maximum length of Main pipe(3) | | <90(295-1/4) | L1 |
| From IDU to its nearest branch (4) | | ≤40(131-1/4) | a,b,c,d,e,f,g,h,i,j |

NOTICE

(1) Normally, the pipe length from the first branch of IDU to the farthest IDU is 40m(131-1/4ft.). Under the following conditions, the length can reach 90m(295-1/4ft.).

1) Actual length of pipe in total: $L1+L2x2+L3x2+L4x2+...+L9x2+a+b+...+i+j \leq 1000m(3280-3/4ft.)$.

2) Length between each IDU and its nearest branch a, b, c, d, e, f, g, h, i, $j \leq 40m(131-1/4ft.)$.

3) Difference between the pipe length from the first branch of IDU to the farthest IDU and the pipe length from the first branch of IDU to the nearest IDU: $L10-L11 \leq 40m(131-1/4ft.)$.

(3) When the maximum length of the main pipe from ODU to the first branch of IDU is $\geq 90m(295-1/4ft.)$, then adjust the pipe size of the gas pipe and liquid pipe of main pipe according to the following table.

| Outdoor Model | Gas pipe size mm(in.) | Liquid pipe size mm(in.) |
|------------------|------------------------------|------------------------------|
| GMV-Y72WMC-F(U) | No need to enlarge pipe size | No need to enlarge pipe size |
| GMV-Y96WMC-F(U) | No need to enlarge pipe size | Φ12.7(1/2) |
| GMV-Y120WMC-F(U) | No need to enlarge pipe size | Φ15.9(5/8) |
| GMV-Y144WMC-F(U) | Φ34.9(1-3/8) | Φ15.9(5/8) |
| GMV-Y168WMC-F(U) | Φ34.9(1-3/8) | Φ19.05(3/4) |
| GMV-Y192WMC-F(U) | Φ34.9(1-3/8) | Φ19.05(3/4) |
| GMV-Y216WMC-F(U) | Φ34.9(1-3/8) | Φ19.05(3/4) |
| GMV-Y240WMC-F(U) | No need to enlarge pipe size | Φ19.05(3/4) |
| GMV-Y264WMC-F(U) | No need to enlarge pipe size | Φ22.2(7/8) |
| GMV-Y288WMC-F(U) | No need to enlarge pipe size | Φ22.2(7/8) |
| GMV-Y312WMC-F(U) | No need to enlarge pipe size | Φ22.2(7/8) |
| GMV-Y336WMC-F(U) | No need to enlarge pipe size | Φ22.2(7/8) |
| GMV-Y360WMC-F(U) | No need to enlarge pipe size | Φ22.2(7/8) |

(4) If the length between an IDU and its nearest branch is above 10m(32-4/5ft.), then increase the size of the liquid pipe of IDU (only for the pipe size that is $\leq 6.35\text{mm}(1/4\text{in.})$).

4.2.4 Connection Pipe among Outdoor Modules

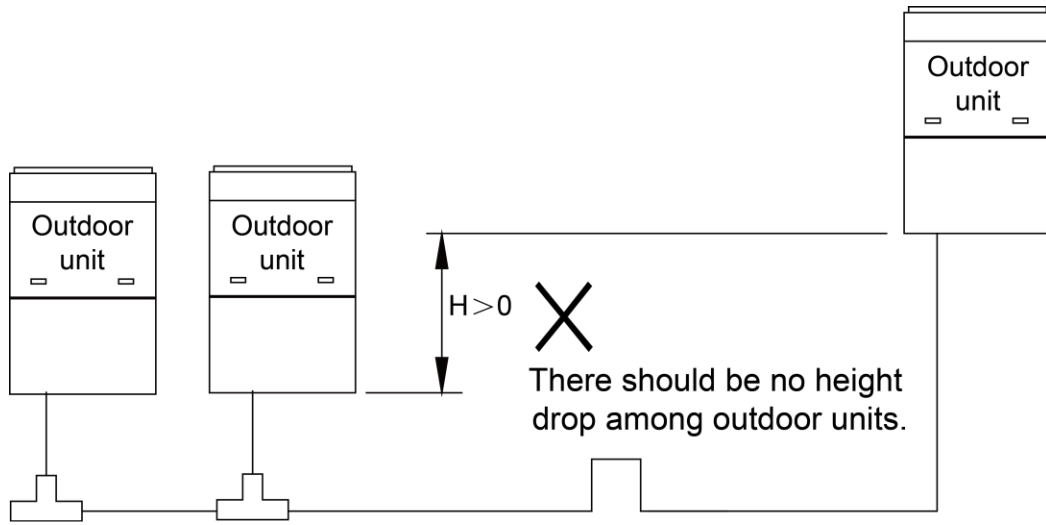


Fig.4.2.5

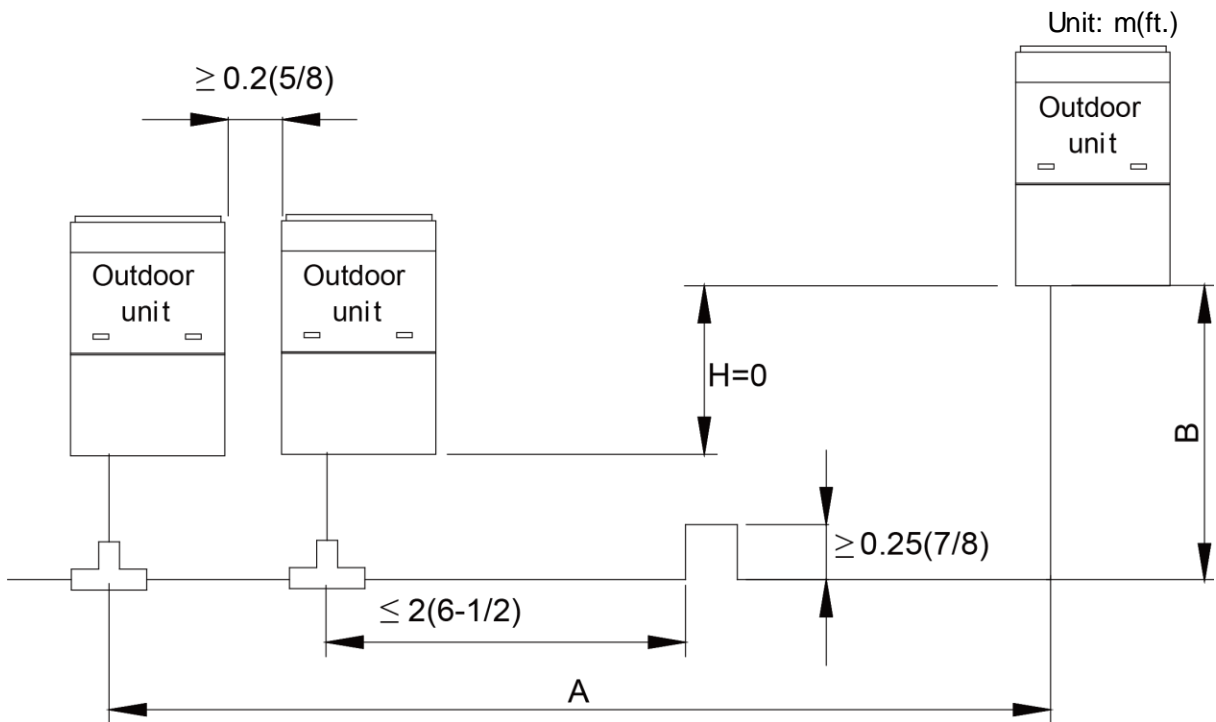


Fig.4.2.6

NOTICE! When the distance between outdoor units exceeds 2m (6-1/2ft.), U-type oil trap should be added at low-pressure gas pipe. $A+B \leq 10\text{m} (32-7/8\text{ft.})$.

4.2.5 Fitting pipe between Outdoor Unit and the First Manifold

4.2.5.1 For single module system, pipe size (between outdoor unit and the first manifold) is determined by that of outdoor unit.

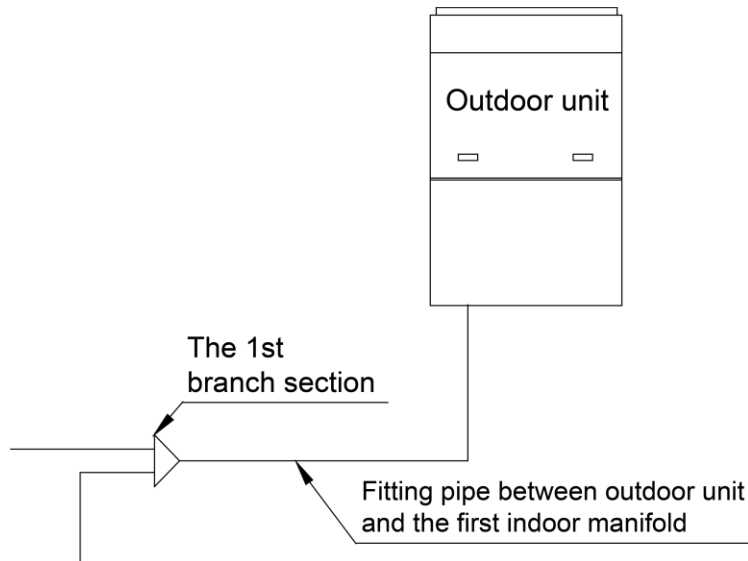


Fig.4.2.7

Pipe size of basic outdoor module is shown as follows:

| Basic Module | Pipe between ODU and the first branch of IDU | |
|------------------|--|---------------------|
| | Gas Pipe mm(in.) | Liquid Pipe mm(in.) |
| GMV-Y72WMC-F(U) | Φ19.05(3/4) | Φ9.52(3/8) |
| GMV-Y96WMC-F(U) | Φ22.2(7/8) | Φ9.52(3/8) |
| GMV-Y120WMC-F(U) | Φ28.6(1-1/8) | Φ12.7(1/2) |

4.2.5.2 For multi-module unit, select appropriate manifold connected to outdoor module as per the pipe size of basic module. Pipe size of basic outdoor module is shown as follows:

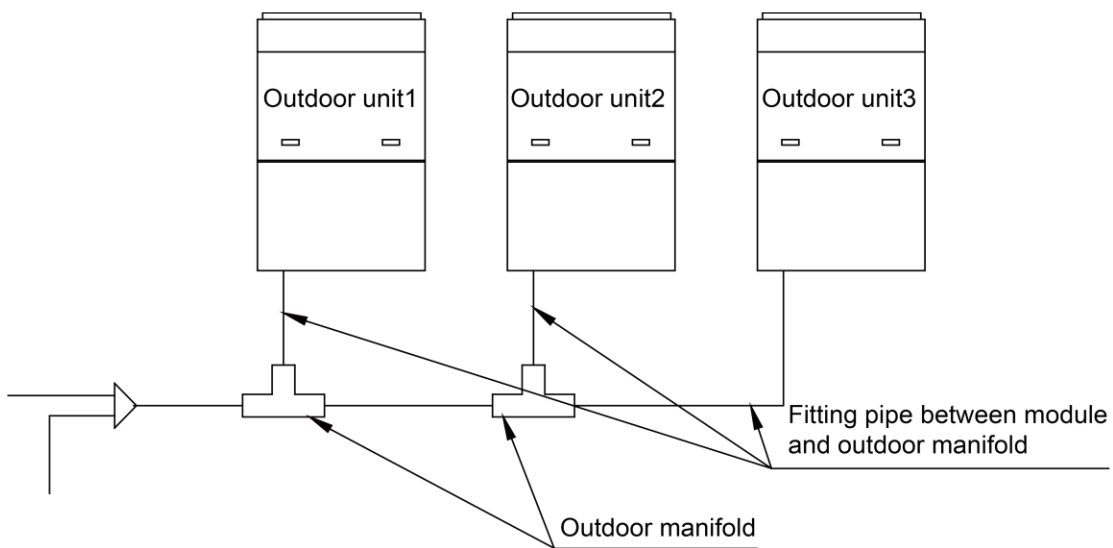


Fig.4.2.8

| Basic Module | Pipe between module and branch of ODU | |
|------------------|---------------------------------------|---------------------|
| | Gas Pipe mm(in.) | Liquid Pipe mm(in.) |
| GMV-Y72WMC-F(U) | Φ19.05(3/4) | Φ9.52(3/8) |
| GMV-Y96WMC-F(U) | Φ22.2(7/8) | Φ9.52(3/8) |
| GMV-Y120WMC-F(U) | Φ28.6(1-1/8) | Φ12.7(1/2) |

Select the branch of outdoor module

| | |
|-------------------------------------|--------|
| Select the branch of outdoor module | Model |
| | ML01/A |

4.2.5.3 Fitting pipe between two manifolds from basic modules

Pipe size (between two manifolds from basic modules) is based on the total capacity of upstream modules.

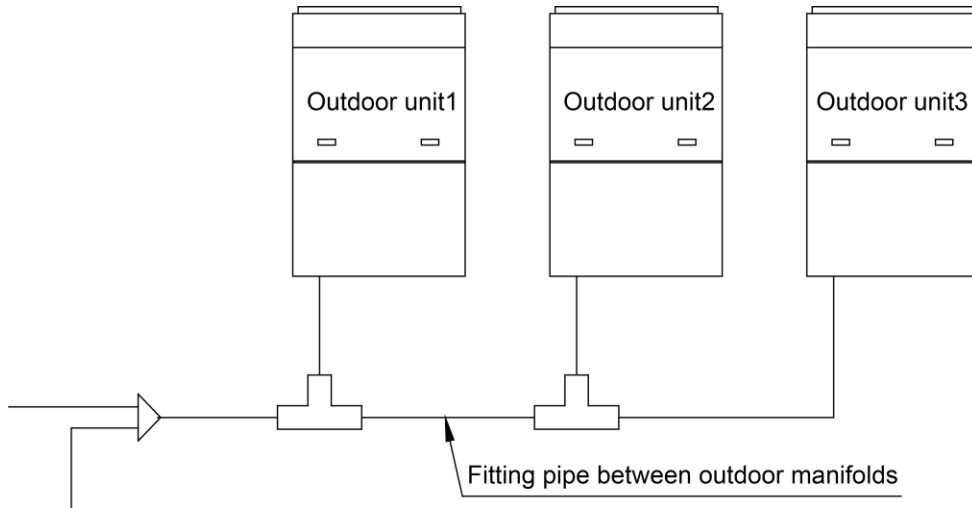


Fig.4.2.9

| Total capacity of upstream modules C(Btu/h) | Pipe size between manifolds | |
|--|-----------------------------|--------------------------|
| | Gas pipe size mm(in.) | Liquid pipe size mm(in.) |
| 144000 | Φ28.6(1-1/8) | Φ12.7(1/2) |
| 168000 | Φ28.6(1-1/8) | Φ15.9(5/8) |
| 192000 | Φ28.6(1-1/8) | Φ15.9(5/8) |
| 216000 | Φ28.6(1-1/8) | Φ15.9(5/8) |
| 240000 | Φ34.9(1-3/8) | Φ15.9(5/8) |

4.2.5.4 Fitting pipe between the first manifold from indoor unit and the end manifold from outdoor unit

Single module unit

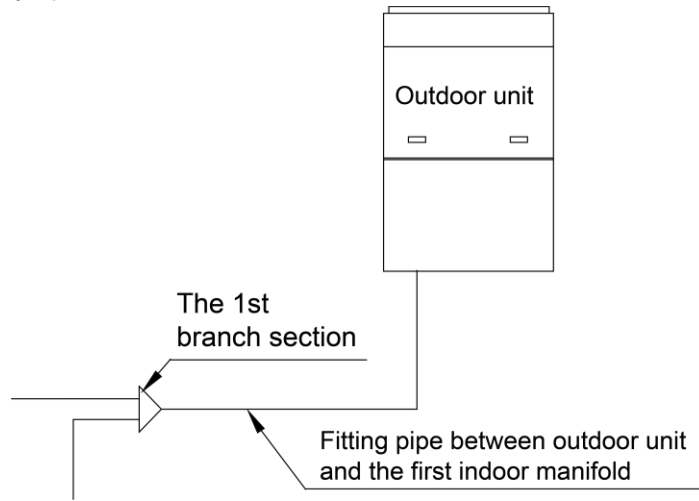


Fig.4.2.10

| Basic Module | Pipe between ODU and the first branch of IDU | |
|------------------|--|---------------------|
| | Gas Pipe mm(in.) | Liquid Pipe mm(in.) |
| GMV-Y72WMC-F(U) | Φ19.05(3/4) | Φ9.52(3/8) |
| GMV-Y96WMC-F(U) | Φ22.2(7/8) | Φ9.52(3/8) |
| GMV-Y120WMC-F(U) | Φ28.6(1-1/8) | Φ12.7(1/2) |

For multiple modules, the piping from ODU to the first branch of IDU is based on the total rated capacity of outdoor modules.

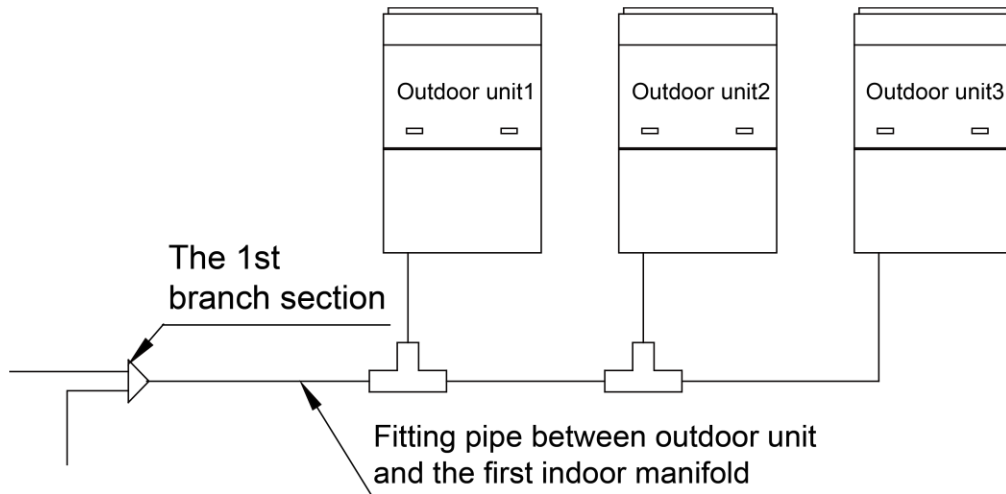


Fig.4.2.11

| Total rated capacity of outdoor modules (multi-modular system) | Pipe between ODU and the first branch of IDU | |
|--|--|--------------------------|
| | Gas pipe size mm(in.) | Liquid pipe size mm(in.) |
| GMV-Y144WMC-F(U) | Φ28.6(1-1/8) | Φ12.7(1/2) |
| GMV-Y168WMC-F(U) | Φ28.6(1-1/8) | Φ15.9(5/8) |
| GMV-Y192WMC-F(U) | Φ28.6(1-1/8) | Φ15.9(5/8) |

| Total rated capacity of outdoor modules (multi-modular system) | Pipe between ODU and the first branch of IDU | |
|--|--|--------------------------|
| | Gas pipe size mm(in.) | Liquid pipe size mm(in.) |
| GMV-Y216WMC-F(U) | Φ28.6(1-1/8) | Φ15.9(5/8) |
| GMV-Y240WMC-F(U) | Φ34.9(1-3/8) | Φ15.9(5/8) |
| GMV-Y264WMC-F(U) | Φ34.9(1-3/8) | Φ19.05(3/4) |
| GMV-Y288WMC-F(U) | Φ34.9(1-3/8) | Φ19.05(3/4) |
| GMV-Y312WMC-F(U) | Φ34.9(1-3/8) | Φ19.05(3/4) |
| GMV-Y336WMC-F(U) | Φ34.9(1-3/8) | Φ19.05(3/4) |
| GMV-Y360WMC-F(U) | Φ41.3(1-5/8) | Φ19.05(3/4) |

4.2.5.5 Manifold at indoor unit side

Manifold at indoor unit side can be selected as per total capacity of downstream indoor unit(s). Refer to the following table.

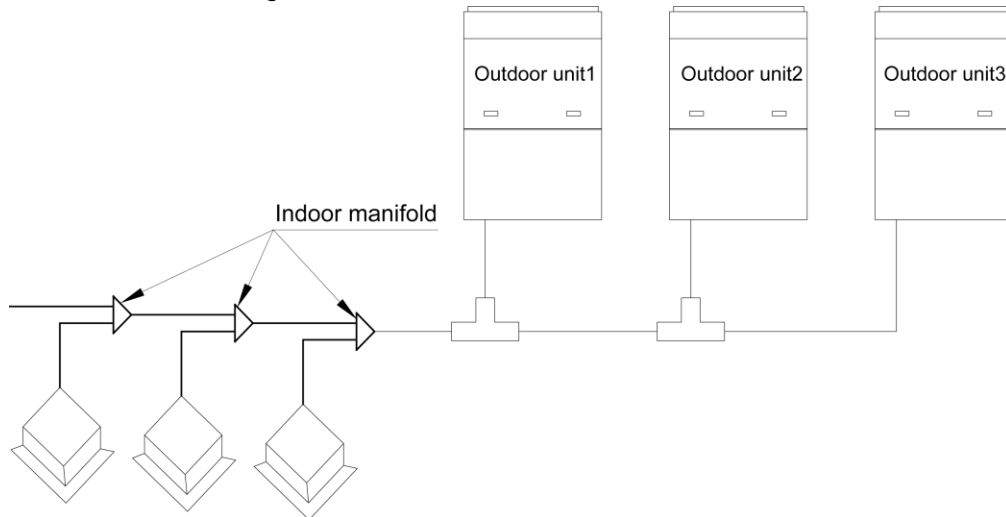


Fig. 4.2.12(a)

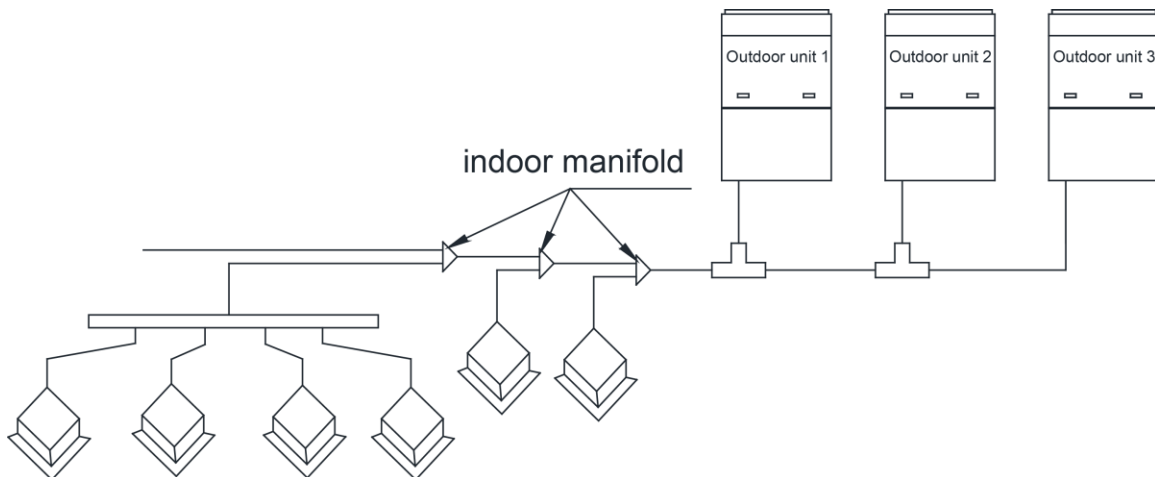


Fig. 4.2.12(b)

| R410A Refrigerant System | Total capacity of downstream indoor unit(s) C (KBtu/h) | Model |
|--------------------------|--|---------|
| Y-type Manifold | $C < 68$ | FQ01A/A |
| | $68 \leq C \leq 102$ | FQ01B/A |
| | $102 < C \leq 239$ | FQ02/A |
| | $239 < C$ | FQ03/A |
| T- type Manifold | $C \leq 136$ | FQ14/H1 |
| | $C \leq 232$ | FQ18/H1 |
| | $232 < C$ | FQ18/H2 |

4.2.5.6 Fitting pipe between manifolds

Pipe size (between two manifolds at indoor unit side) is based on the total capacity of upstream indoor unit(s).

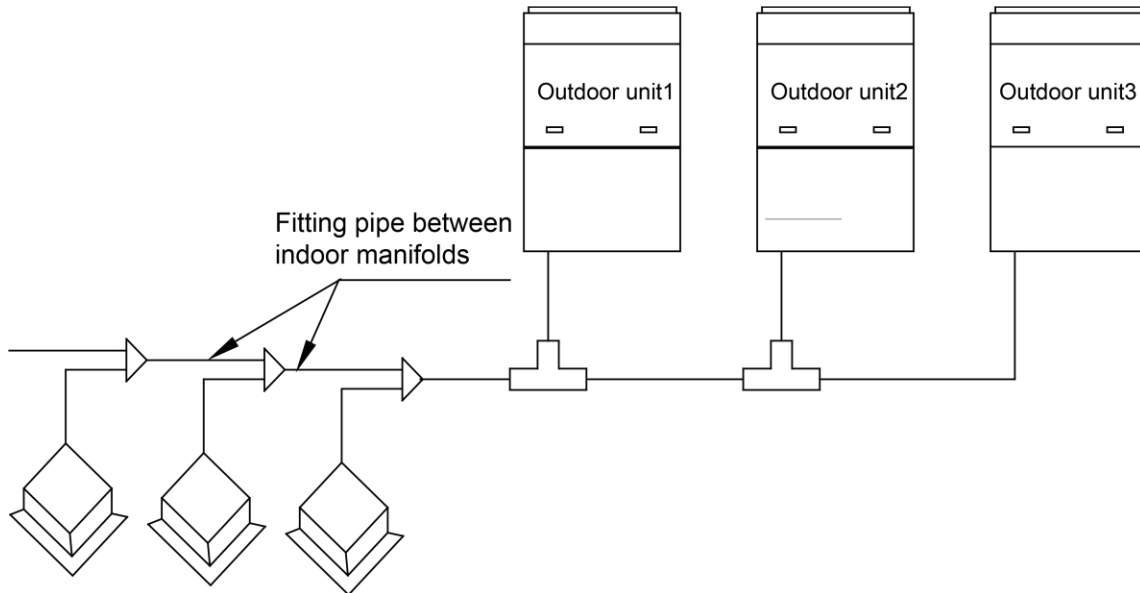


Fig.4.2.13

| Total capacity of downstream indoor unit(s) C(Btu/h) | Dimension of the pipe of indoor branch | |
|--|--|---------------------|
| | Gas Pipe mm(in.) | Liquid Pipe mm(in.) |
| $C \leq 17100$ | $\Phi 12.7(1/2)$ | $\Phi 6.35(1/4)$ |
| $17100 < C \leq 48500$ | $\Phi 15.9(5/8)$ | $\Phi 9.52(3/8)$ |
| $48500 < C \leq 72000$ | $\Phi 19.05(3/4)$ | $\Phi 9.52(3/8)$ |
| $72000 < C \leq 96000$ | $\Phi 22.2(7/8)$ | $\Phi 9.52(3/8)$ |
| $96000 < C \leq 144000$ | $\Phi 28.6(1-1/8)$ | $\Phi 12.7(1/2)$ |
| $144000 < C \leq 216000$ | $\Phi 28.6(1-1/8)$ | $\Phi 15.9(5/8)$ |
| $216000 < C \leq 240000$ | $\Phi 34.9(1-3/8)$ | $\Phi 15.9(5/8)$ |
| $240000 < C \leq 336000$ | $\Phi 34.9(1-3/8)$ | $\Phi 19.05(3/4)$ |
| $336000 < C$ | $\Phi 41.3(1-5/8)$ | $\Phi 19.05(3/4)$ |

4.2.5.7 Fitting pipe between indoor unit and manifold

Manifold should be matched with fitting pipe of indoor unit.

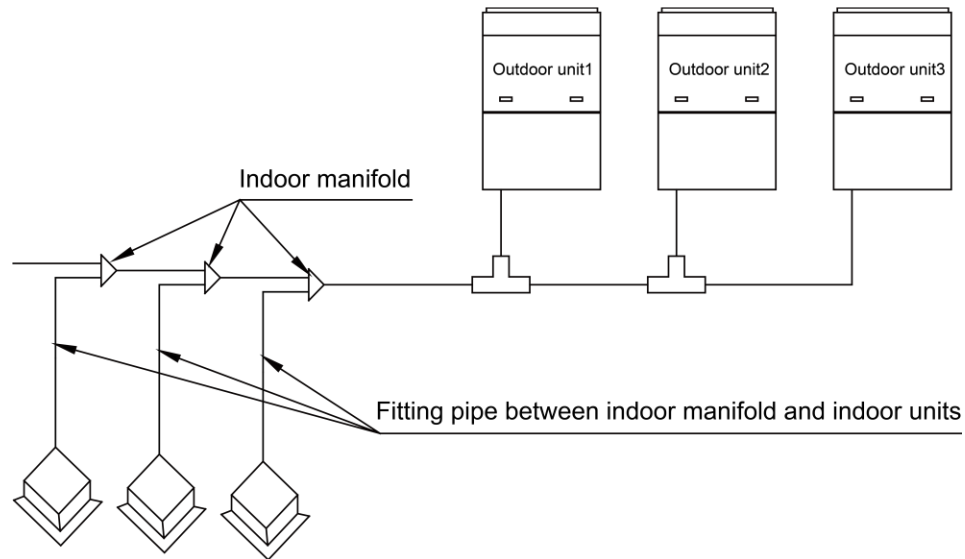


Fig.4.2.14

| Rated capacity of indoor unit C(Btu/h) | Pipe between indoor branch and IDU | |
|---|------------------------------------|---------------------|
| | Gas Pipe mm(in.) | Liquid Pipe mm(in.) |
| $C \leq 9500$ | $\Phi 9.52(3/8)$ | $\Phi 6.35(1/4)$ |
| $9500 < C \leq 17100$ | $\Phi 12.7(1/2)$ | $\Phi 6.35(1/4)$ |
| $17100 < C \leq 48500$ | $\Phi 15.9(5/8)$ | $\Phi 9.52(3/8)$ |
| $48500 < C \leq 72000$ | $\Phi 19.05(3/4)$ | $\Phi 9.52(3/8)$ |
| $72000 < C$ | $\Phi 22.2(7/8)$ | $\Phi 9.52(3/8)$ |

4.3 Installation of the Connection Pipe

4.3.1 Precautions when installing the connection pipe

NOTICE!

Before welding the pipeline sealing cap, please make sure there's no refrigerant in pipeline. If welding it directly, it may cause unnecessary property damage or personal injury.

- (1) Conform to the following principles during piping connection: Connection pipeline should be as short as possible. The height difference between indoor and outdoor units should be as short as possible. Keep number of bends as little as possible. The radius of curvature should be as large as possible.
- (2) Weld the connection pipes between indoor and outdoor unit. Please strictly conform to the requirements for welding process. Rosin joints and pin holes are not allowable.
- (3) When laying the pipes, be careful not to deform them. The radius of bending parts should be more than 200mm(7-7/8in.). The pipes cannot be repeatedly bent or stretched, otherwise the material will get harden. Do not bend or stretch the pipe over three times at the same position.
- (4) Please use a torque wrench to connect union nut on the indoor unit. See Fig. 4.3.1.

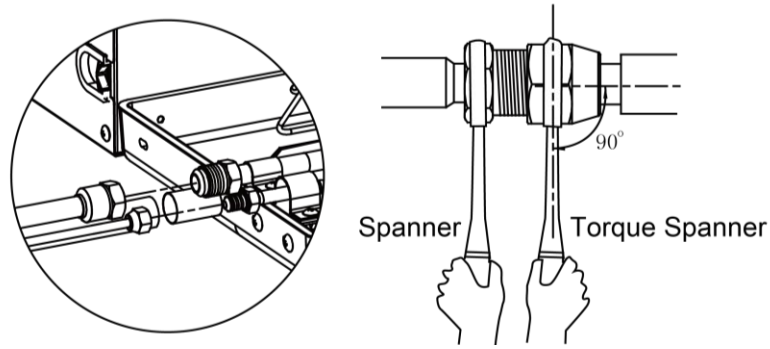


Fig.4.3.1

- 1) Align the expansion end of copper pipe with the center of threaded joint. Tighten the flare nuts with your hands.
- 2) Tighten the flare nuts with torque wrench until you hear "click" sound.
- 3) Use sponge to wrap the connecting pipe and joints without thermal insulation and tie it up with plastic tape.
- 4) A mounting support for the connection pipe is required.
- 5) The curvature degree of connection pipe should not be small, otherwise the pipe might crack. Installation personnel should use tube bender when bending the pipe.
- 6) Don't forcibly stretch the pipe joint, otherwise indoor capillary or other pipes might be damaged and lead to refrigerant leakage.

4.3.2 Manifold

- (1) Y-type manifold, See the Fig. 4.3.2(a). T-type manifold, See the Fig. 4.3.2(b).

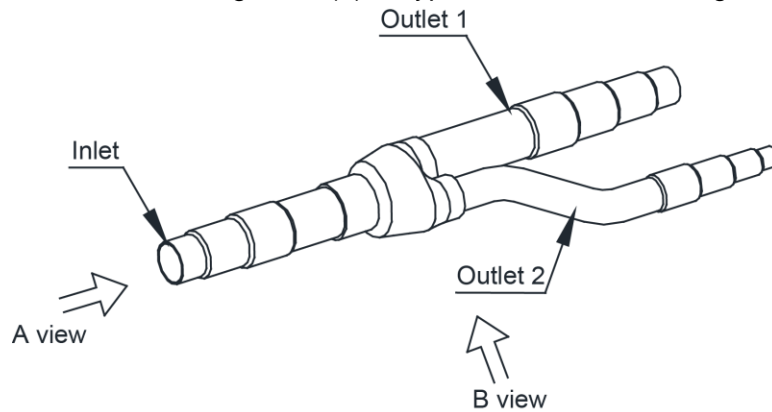


Fig. 4.3.2(a)


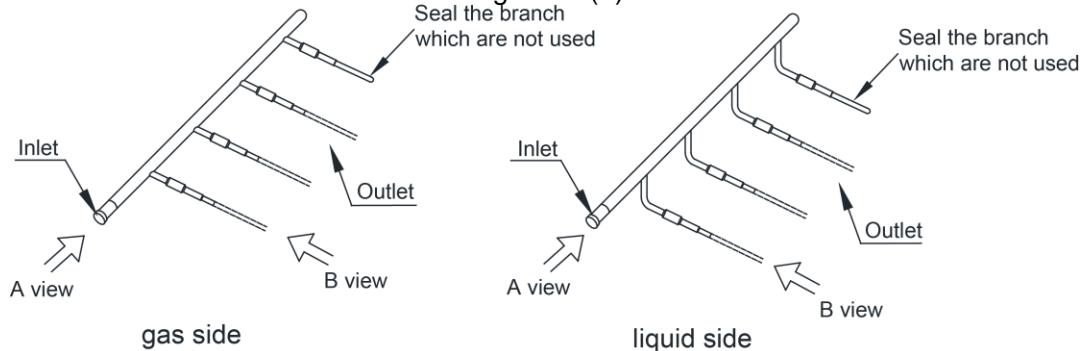


Fig. 4.3.2(b)


- (2) Manifold has several pipe sections with different pipe size, which facilitates to match with various copper pipe. Use pipe cutter to cut in the middle of the pipe section with different pipe size and deburr as well. See Fig. 4.3.3.

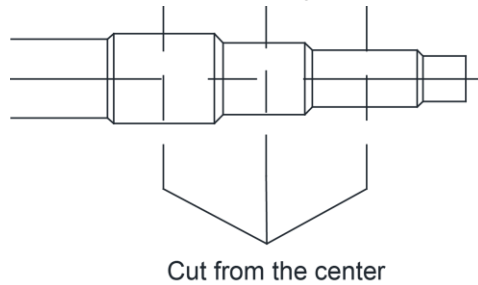

Cut from the center

Fig. 4.3.3

- (3) Y-type manifold can be installed vertically or horizontally. Confirm the position and then weld the manifold pipe. See the Fig. 4.3.4(a). T-type manifold must be installed horizontally with inclination, see the Fig. 4.3.4(b).

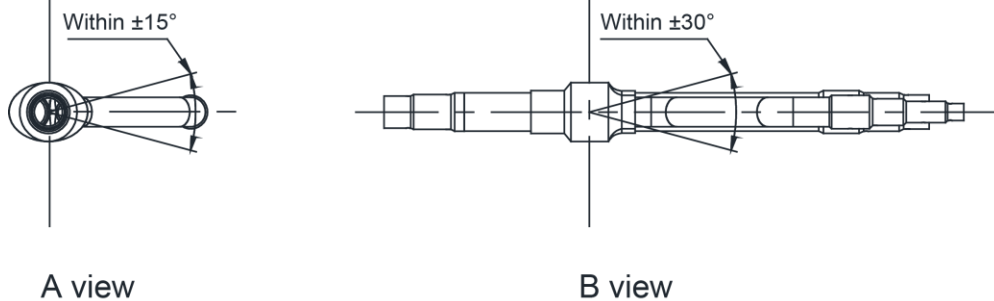


A view


B view

Fig. 4.3.4(a)

A view

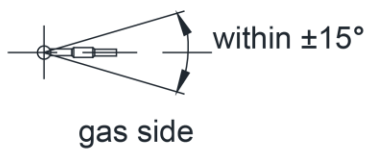


gas side

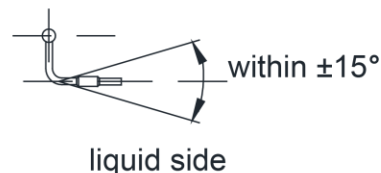

liquid side

B view



gas side



liquid side

Fig. 4.3.4(b)

- (4) Manifold is isolated by insulating material that can bear 120 °C(248 °F) or higher temperature. Manifold attached foam cannot be taken as insulating material.

4.3.3 Installation and thermal insulation for pipeline

- (1) For multi VRF system, every copper pipe should be labeled so as to avoid misconnection.
- (2) Manifolds can be laid in the following ways:

The length of a straight pipe between two manifolds cannot be less than 500 mm

(19-11/16in.). The length of a straight pipe before the main pipe port of the manifold cannot be less than 500mm (19-11/16in.). The length of a straight pipe between the branch of the manifold and the IDU cannot be less than 500mm(19-11/16in.). See Fig.4.3.5.

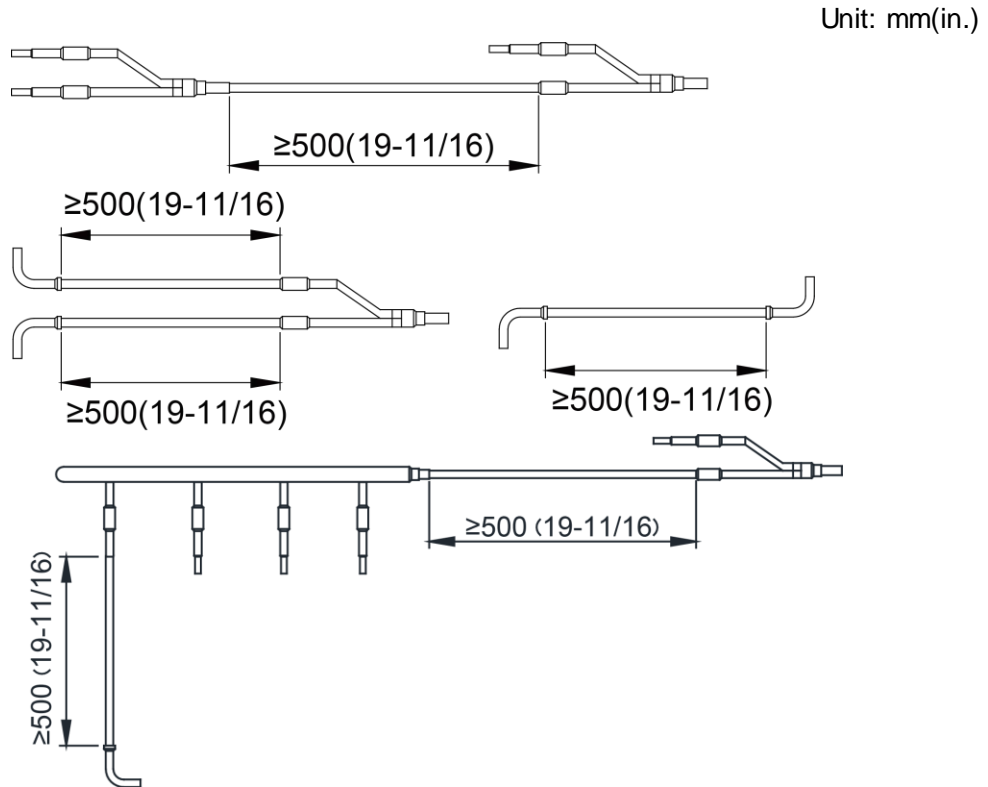


Fig.4.3.5

(3) There must be three fixing point for both horizontal and vertical installation of the Y-type manifold. See Fig.4.3.6.

Fixing point 1: 100mm(4in) on the main inlet manifold from the welding point

Fixing point 2: 200mm(7-7/8in.) on the main branched pipe from the welding point

Fixing point 3: 250mm(9-5/6in.) on the branched pipe from the welding point

Unit: mm(in.)

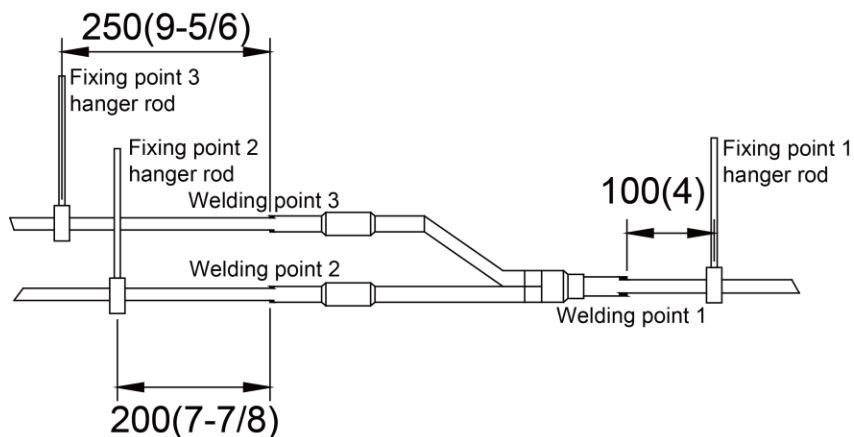


Fig.4.3.6

(4) Suspend the header to the ceiling, and be sure to install the T-type manifold so that the

outlet pipes are horizontal at the lower side. See Fig.4.3.7.

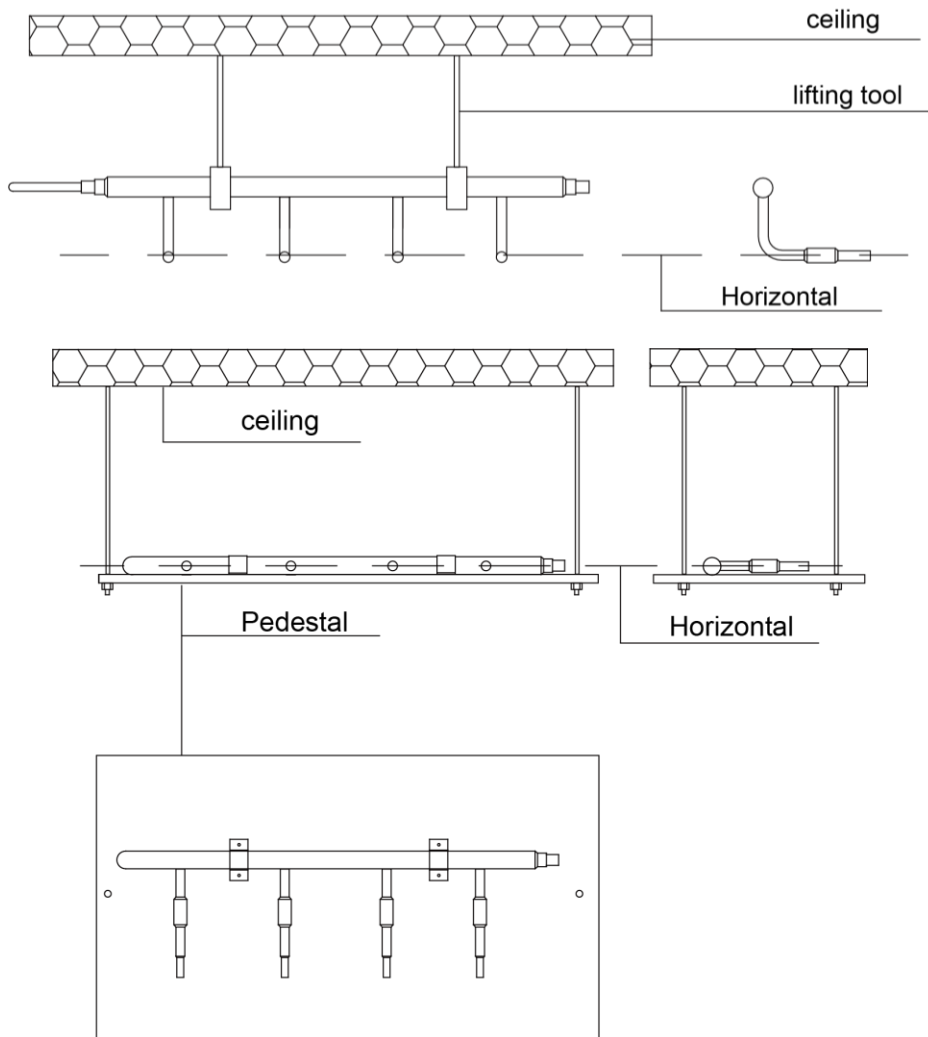


Fig.4.3.7

(5) Thermal insulation for pipeline

- 1) To avoid condensate or water leakage on connecting pipe, the gas pipe and liquid pipe must be wrapped with thermal insulating material and adhesive pipe for insulation from the air.
- 2) For heat pump unit, liquid pipe should bear 70°C (158°F) or above, and gas pipe should bear 120°C (248°F) or above. For cooling only unit, both liquid pipe and gas pipe should bear 70°C (158°F) or above. Example: Polyethylene foam can bear 120°C (248°F) above and foaming polyethylene can bear 100°C (212°F) above.
- 3) Joints at indoor and outdoor units should be wrapped with insulating material and leave no clearance between pipe and wall. See Fig.4.3.8.

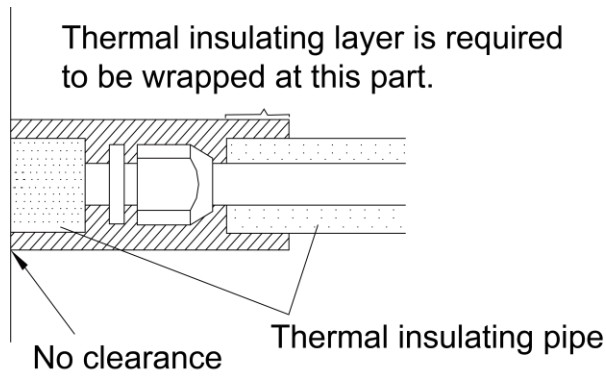


Fig.4.3.8

- 4) Manifold attached foam can not be taken as insulating material.
- 5) When wrapping the tape, the later circle should cover half of the former one. Don't wrap the tape so tightly, otherwise the insulation effect will be weakened.
- 6) After wrapping the pipe, adopt sealing material to completely fill the hole so as to prevent wind and rain from entering the room.
- 7) Thickness of thermal insulating layer. The thermal insulating material adopted by outdoor pipeline should be windproof, anti-weathering and anti-rimous.

| | | |
|--|-------|--------|
| External diameter of copper pipe (mm) | ≤12.7 | ≥15.88 |
| Thickness of thermal insulating layer (mm) | ≥ 15 | ≥ 20 |

4.3.4 Support and protection for pipeline

- (1) Support should be made for hanging connection pipe. Distance between each support can not be over 1m(39-3/8in.).
- (2) Protection towards accidental damage should be made for outdoor pipeline. When the pipeline exceeds 1m(39-3/8in.), a pin. board should be added for protection.

4.4 Air Purging and Refrigerant Charge

4.4.1 Air purging

- (1) Confirm outdoor liquid and gas valves are closed. Air purging from the nozzle located on liquid and gas valves by vacuum pump See Fig. 4.4.1.
- (2) When there are more than 2 outdoor units, air purging from the nozzle located on the oil balance valve. Confirm outdoor oil balance valves are closed See Fig. 4.4.2.

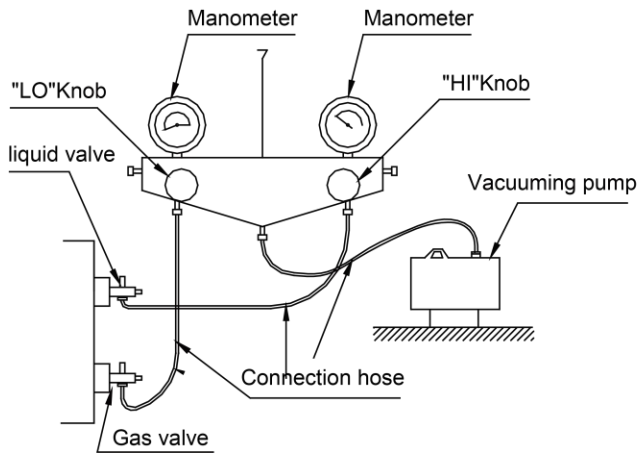


Fig.4.4.1

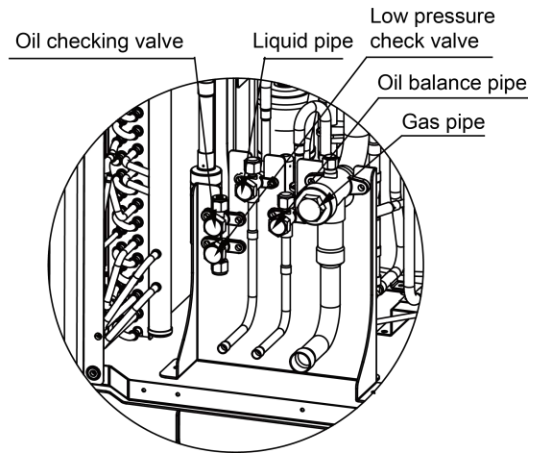


Fig.4.4.2

4.4.2 Additional refrigerant charging

Outdoor unit has been charged refrigerant before delivery.

Charge additional refrigerant for field-installed connecting pipe. If the pipeline is longer than 1m(39-3/8in.), please refer to the following table for charging amount of refrigerant. (Liquid pipe prevails)

How much additional refrigerant should be charged.

Total refrigerant charging amount $R = \text{Pipeline charging amount } A + \sum \text{charging amount } B$ of every module.

(1) Pipeline charging amount

Added refrigerant quantity A for piping = $\sum \text{Liquid pipe length} \times \text{Added refrigerant quantity for each meter(in.) of liquid pipe.}$

| | Diameter of liquid pipe | | | | | | | |
|--------|-------------------------|---------|-----------|------------|-----------|-----------|-----------|-----------|
| | mm(in.) | | | | | | | |
| | 28.6(1-1/8) | 25.4(1) | 22.2(7/8) | 19.05(3/4) | 15.9(5/8) | 12.7(1/2) | 9.52(3/8) | 6.35(1/4) |
| kg/m | 0.680 | 0.520 | 0.350 | 0.250 | 0.170 | 0.110 | 0.054 | 0.022 |
| OZ/in. | 0.61 | 0.47 | 0.31 | 0.22 | 0.15 | 0.10 | 0.05 | 0.02 |

(2) \sum Refrigerant charging amount B of every module.

| Refrigerant charging amount B of every module kg(Pounds) | | Rated Capacity(1000Btu/h) | | |
|--|------------------------------|---------------------------|----------|----------|
| IDU/ODU rated capacity collocation ratio C | Quantity of included IDUs(N) | 72 | 96 | 120 |
| 50% \leq C \leq 90% | N<4 | 0 | 0 | 0 |
| | N \geq 4 | 0.5(1.1) | 0.5(1.1) | 0.5(1.1) |
| 90%<C \leq 105% | N<4 | 1(2.2) | 1(2.2) | 1.5(3.3) |
| | 8>N \geq 4 | 2(4.4) | 2(4.4) | 3(6.6) |
| | N \geq 8 | 4(8.8) | 3.5(7.7) | 4(8.8) |
| 105%<C \leq 135% | N<4 | 2(4.4) | 2(4.4) | 2.5(5.5) |
| | 8>N \geq 4 | 4(8.8) | 3.5(7.7) | 4(8.8) |
| | N \geq 8 | 4.5(9.9) | 4.5(9.9) | 5(11.0) |

NOTICE

(1) IDU/ODU rated capacity collocation ratio $C = \text{Sum of rated cooling capacity of indoor unit} / \text{Sum of rated cooling capacity of outdoor unit}$.

(2) If all of the indoor units are fresh air indoor units, the quantity of refrigerant added to each module is 0kg.

(3) If outdoor air processor is connected with normal VRF indoor unit, adopt the perfusion method for normal indoor unit for perfusion.

For example 1:

The OUD is composed of 3 modules: 72kBTu/h, 120 kBTu/h and 120 kBTu/h. The IDUs are made up of 7sets of 48 kBTu/h.

IDU/ODU rated capacity collocation ratio $C = 48 \times 7 / (72 + 120 + 120) = 108\%$. The quantity of included IDUs is more than 4 sets. Please refer to the above table.

Refrigerant charging amount B for 72kBTu/h module is 4.0kg(8.8pounds).

Refrigerant charging amount B for 120 kBTu/h module is 4.0kg(8.8pounds).

Refrigerant charging amount B for 120 kBTu/h module is 4.0kg(8.8pounds).

So, Σ Refrigerant charging amount B of every module = $4.0 + 4.0 + 4.0 = 12\text{kg}$ (8.8+8.8+8.8 = 26.4pounds).

Suppose the Pipeline charging amount $A = \Sigma \text{Liquid pipe length} \times \text{refrigerant charging amount of every 1m (or 1in.) liquid pipe} = 25\text{kg}$ (55.1 pounds)

Total refrigerant charging amount $R = 25 + 12 = 37\text{kg}$ (55.1+26.4=81.5pounds).

For example 2:

Outdoor unit is a 72kBTu/h module and the indoor unit is a 72kBTu/h fresh air unit. The quantity (B) of refrigerant added to this module is 0kg (0pounds).

So, ΣB (Quantity of refrigerant added to each module) = 0kg (0pounds).

Suppose that A (Quantity of refrigerant added to connection pipe) = $\Sigma \text{Length of liquid pipe} \times \text{Quantity of refrigerant added to liquid pipe per meter} = 5\text{kg}$ (11pounds).

R (Quantity of added refrigerant in total) = $5 + 0 = 5\text{kg}$ (11+0=11pounds).

Modular combination of outdoor unit subjects to combinations that is currently available.

After confirming that there is no leakage from the system, when the compressor is not in operation, charge additional R410A with specified amount to the unit through the filling opening of the liquid pipe valve of the outdoor unit. If required additional refrigerant cannot be quickly filled for increase of pressure in the pipe, set the unit at cooling startup and then fill the refrigerant from gas valve of outdoor unit. If ambient temperature is low, the unit can't be set to cooling mode but heating mode.

4.4.3 Precautions on Refrigerant Leakage

(1) Personnel related to air conditioning engineering design and installation operators must abide by the safety requirement for preventing refrigerant leakage specified in local laws and regulations.

(2) The units adopt the R410A refrigerant, which is nonflammable and nontoxic. However, the space for refrigerant leakage must be sufficient to ensure that the refrigerant concentration does not exceed that specified in the safety requirement; otherwise, people involved can be stifled by the refrigerant. For example the maximum allowed concentration level of refrigerant to a humanly space for R410A according to the appropriate European Standard is limited to 0.44 kg/m³.

The maximum amount of refrigerant (kg) in the system = The volume of the room (m³) × The maximum allowed concentration level of refrigerant (kg/m³)

Total amount of refrigerant (kg) in the system = Total additional charging amount (kg) + Amount of refrigerant (kg) which is charged before leaving the factory (for the system consisting of multiple modules in parallel, the accumulative charge quantity of modules before leaving the factory is used)

Total amount of refrigerant (kg) in the system ≤ The maximum amount of refrigerant (kg) in the system

(3) When the total amount of refrigerant in the system is more than the maximum amount of refrigerant, the cooling system should be designed again. In this case, the cooling system can also be separated into several cooling systems with small capacity, or add corresponding ventilation measures or alarming display.

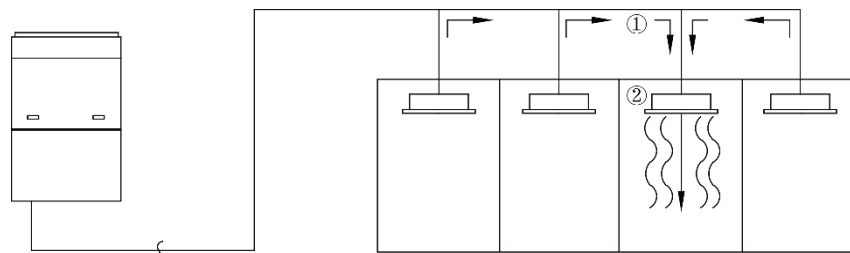


Fig. 4.4.3

① Flow direction of refrigerant leakage.

② Room for refrigerant leakage. Since the concentration of refrigerant is greater than that of air, pay attention to the spaces where the refrigerant may residue, for example, the basement.

4.5 Electric Wiring

4.5.1 Wiring precautions

| ⚠WARNING |
|---|
| (1) Wiring should conform to national rules. All the parts, materials, electric work should be in accordance with local codes. |
| (2) Rated voltage and exclusive power supply should be used. |
| (3) Power cord should be fixed soundly and reliable. Never forcibly pull the power cord. |
| (4) Wire size of power cord should be large enough. The damaged power cord and connecting wire should be replaced by exclusive cable. |
| (5) All the electrical work should be performed by professional personnel as per local law, regulation and this manual. |
| (6) Connect the unit to the special earthing device and make sure the unit is earthed soundly. |
| (7) Air switch and circuit breaker is required to be set. Air switch should have both magnetic trip and thermal trip functions so as to protect the unit when short-circuit and overload happens. D-type breaker is advised to be used. |
| (8) Wiring diagram attached on the unit is prevailed. |

4.5.2 Wiring of power cord

Every unit should have corresponding short-circuit and overload protection. And also a main switch is required to control power supply or disconnection. See Fig.4.5.1.

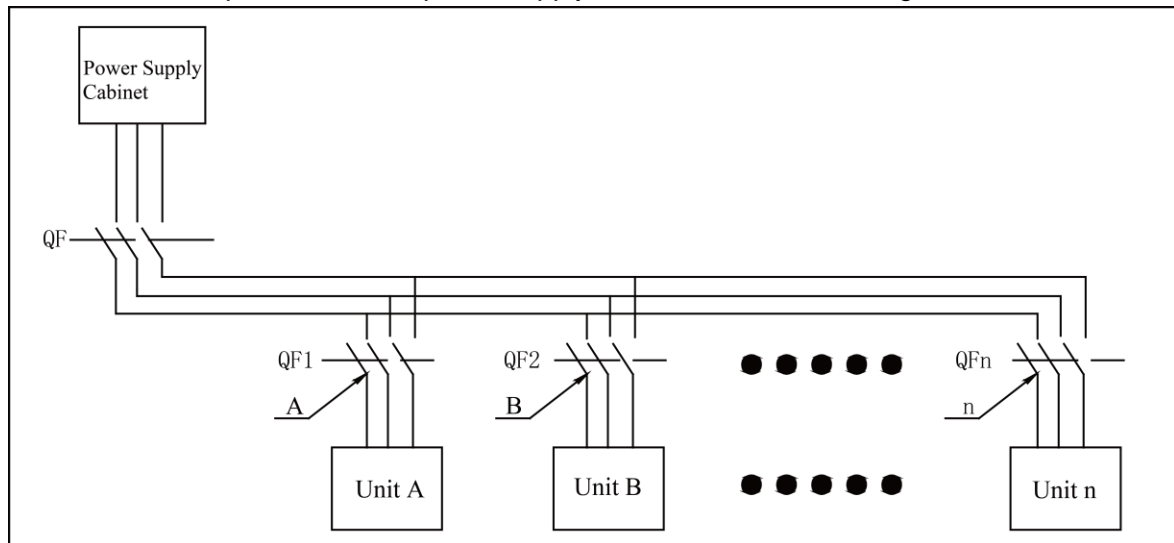


Fig.4.5.1

Outdoor Unit (208V)

| Outdoor units | Power Supply | Fuse Capacity | Minimum Circuit Ampacity | Maximum Overcurrent Protection |
|------------------|--------------|---------------|--------------------------|--------------------------------|
| | V/ Ph /Hz | A | A | A |
| GMV-Y72WMC-F(U) | 208V 3~ 60Hz | 45 | 35.3 | 45 |
| GMV-Y96WMC-F(U) | 208V 3~ 60Hz | 45 | 43.6 | 45 |
| GMV-Y120WMC-F(U) | 208V 3~ 60Hz | 45 | 44.8 | 45 |
| GMV-Y144WMC-F(U) | 208V 3~ 60Hz | 45+45 | 35.3+35.3 | 45+45 |
| GMV-Y168WMC-F(U) | 208V 3~ 60Hz | 45+45 | 35.3+43.6 | 45+45 |
| GMV-Y192WMC-F(U) | 208V 3~ 60Hz | 45+45 | 43.6+43.6 | 45+45 |
| GMV-Y216WMC-F(U) | 208V 3~ 60Hz | 45+45 | 43.6+44.8 | 45+45 |
| GMV-Y240WMC-F(U) | 208V 3~ 60Hz | 45+45 | 44.8+44.8 | 45+45 |

| Outdoor units | Power Supply | Fuse Capacity | Minimum Circuit Ampacity | Maximum Overcurrent Protection |
|------------------|--------------|---------------|--------------------------|--------------------------------|
| | V/ Ph /Hz | A | A | A |
| GMV-Y264WMC-F(U) | 208V 3~ 60Hz | 45+45+45 | 35.3+43.6+43.6 | 45+45+45 |
| GMV-Y288WMC-F(U) | 208V 3~ 60Hz | 45+45+45 | 43.6+43.6+43.6 | 45+45+45 |
| GMV-Y312WMC-F(U) | 208V 3~ 60Hz | 45+45+45 | 43.6+43.6+44.8 | 45+45+45 |
| GMV-Y336WMC-F(U) | 208V 3~ 60Hz | 45+45+45 | 43.6+44.8+44.8 | 45+45+45 |
| GMV-Y360WMC-F(U) | 208V 3~ 60Hz | 45+45+45 | 44.8+44.8+44.8 | 45+45+45 |

Outdoor Unit (240V)

| Outdoor units | Power Supply | Fuse Capacity | Minimum Circuit Ampacity | Maximum Overcurrent Protection |
|------------------|--------------|---------------|--------------------------|--------------------------------|
| | V/ Ph /Hz | A | A | A |
| GMV-Y72WMC-F(U) | 240V 3~ 60Hz | 40 | 30.3 | 40 |
| GMV-Y96WMC-F(U) | 240V 3~ 60Hz | 40 | 37.3 | 40 |
| GMV-Y120WMC-F(U) | 240V 3~ 60Hz | 40 | 39.8 | 40 |
| GMV-Y144WMC-F(U) | 240V 3~ 60Hz | 40+40 | 30.3+30.3 | 40+40 |
| GMV-Y168WMC-F(U) | 240V 3~ 60Hz | 40+40 | 30.3+37.3 | 40+40 |
| GMV-Y192WMC-F(U) | 240V 3~ 60Hz | 40+40 | 37.3+37.3 | 40+40 |
| GMV-Y216WMC-F(U) | 240V 3~ 60Hz | 40+40 | 37.3+39.8 | 40+40 |
| GMV-Y240WMC-F(U) | 240V 3~ 60Hz | 40+40 | 39.8+39.8 | 40+40 |
| GMV-Y264WMC-F(U) | 240V 3~ 60Hz | 40+40+40 | 30.3+37.3+37.3 | 40+40+40 |
| GMV-Y288WMC-F(U) | 240V 3~ 60Hz | 40+40+40 | 37.3+37.3+37.3 | 40+40+40 |
| GMV-Y312WMC-F(U) | 240V 3~ 60Hz | 40+40+40 | 37.3+37.3+39.8 | 40+40+40 |
| GMV-Y336WMC-F(U) | 240V 3~ 60Hz | 40+40+40 | 37.3+39.8+39.8 | 40+40+40 |
| GMV-Y360WMC-F(U) | 240V 3~ 60Hz | 40+40+40 | 39.8+39.8+39.8 | 40+40+40 |

⚠WARNING

- (1) Specification of circuit breaker and power cord is selected on the basis of unit's maximum power (max. current).
- (2) Specification of power cord is based on the working condition where ambient temperature is 40° C (104° F) and multi-core cable with copper conductor(working temperature is 90° C (194° F), e.g. power cable with YJV cross-linked copper, insulated PE and PVC sheath) is lying on the surface of slot. If working condition is different, please adjust the specification according to national standard.
- (3) Copper-core cable must be used.
- (4) The above sectional area is suitable for a maximum distance of 15m(49-1/5ft.). If it's over 15m(49-1/5ft.), sectional area must be expanded to prevent overload current from burning the wire or causing fire hazard.
- (5) Specification of circuit breaker is based on the working condition where the ambient temperature of circuit breaker is 40° C(104° F). If working condition is different, please adjust the specification according to national standard.
- (6) The air switch should include magnetic trip function and thermal trip function so that system can be protected from short circuit and overload.
- (7) An all-pole disconnection switch having a contact separation of at least 3mm(1/8 in.) in all poles should be connected in fixed wiring.

4.5.3 Connection of power cord

| ⚠WARNING |
|---|
| (1) Before obtaining access to terminals, all supply circuits must be disconnected. |
| (2) If units are type I electrical appliances, they must be reliably grounded. |
| (3) Ground resistance must be in accord with requirements of local standard. |
| (4) The green-yellow wire within units are ground wire. Do not use it for other purposes. Nor should it be cut off or secured by tapping screws. Otherwise, it may cause electric shock. |
| (5) Power supply at user side must have reliable ground terminal. Do not connect ground wire to the following places: 1) Water pipe. 2) Gas pipe. 3) Drainage pipe. 4) Other places that are considered by professionals as unreliable. |
| (6) Power cord and communication wire should be separated, with a distance of more than 20cm (7-7/8in.). Otherwise, system's communication may not work well. |

Steps of power cord connection:

- (1) Knock off the cross-through opening that's used for leading the external power cord, with the cross-through rubber ring on the opening. Then lead the cable through the opening. Connect L1, L2, L3 of power cord and ground wire separately to the positions on wiring board (for power supply) that are marked with L1, L2, L3 and the ground screw nearby.
- (2) Fasten the power cord with cable tie.
- (3) Lay the power cable and communication cable for the ODU according to the marker of external connection circuit diagram.

4.6 System Communication

4.6.1 Communication system include:

- (1) Communication among outdoor basic modules.
- (2) Communication between ODU and IDU.
- (3) Communication among IDUs.
- (4) Communication between IDU and wired controller.
- (5) Connection between IDU and light board receiver.
- (6) Communication between different refrigeration systems.
- (7) Graphics of general communication connection.
- (8) Communication among ODU's Convertor unit

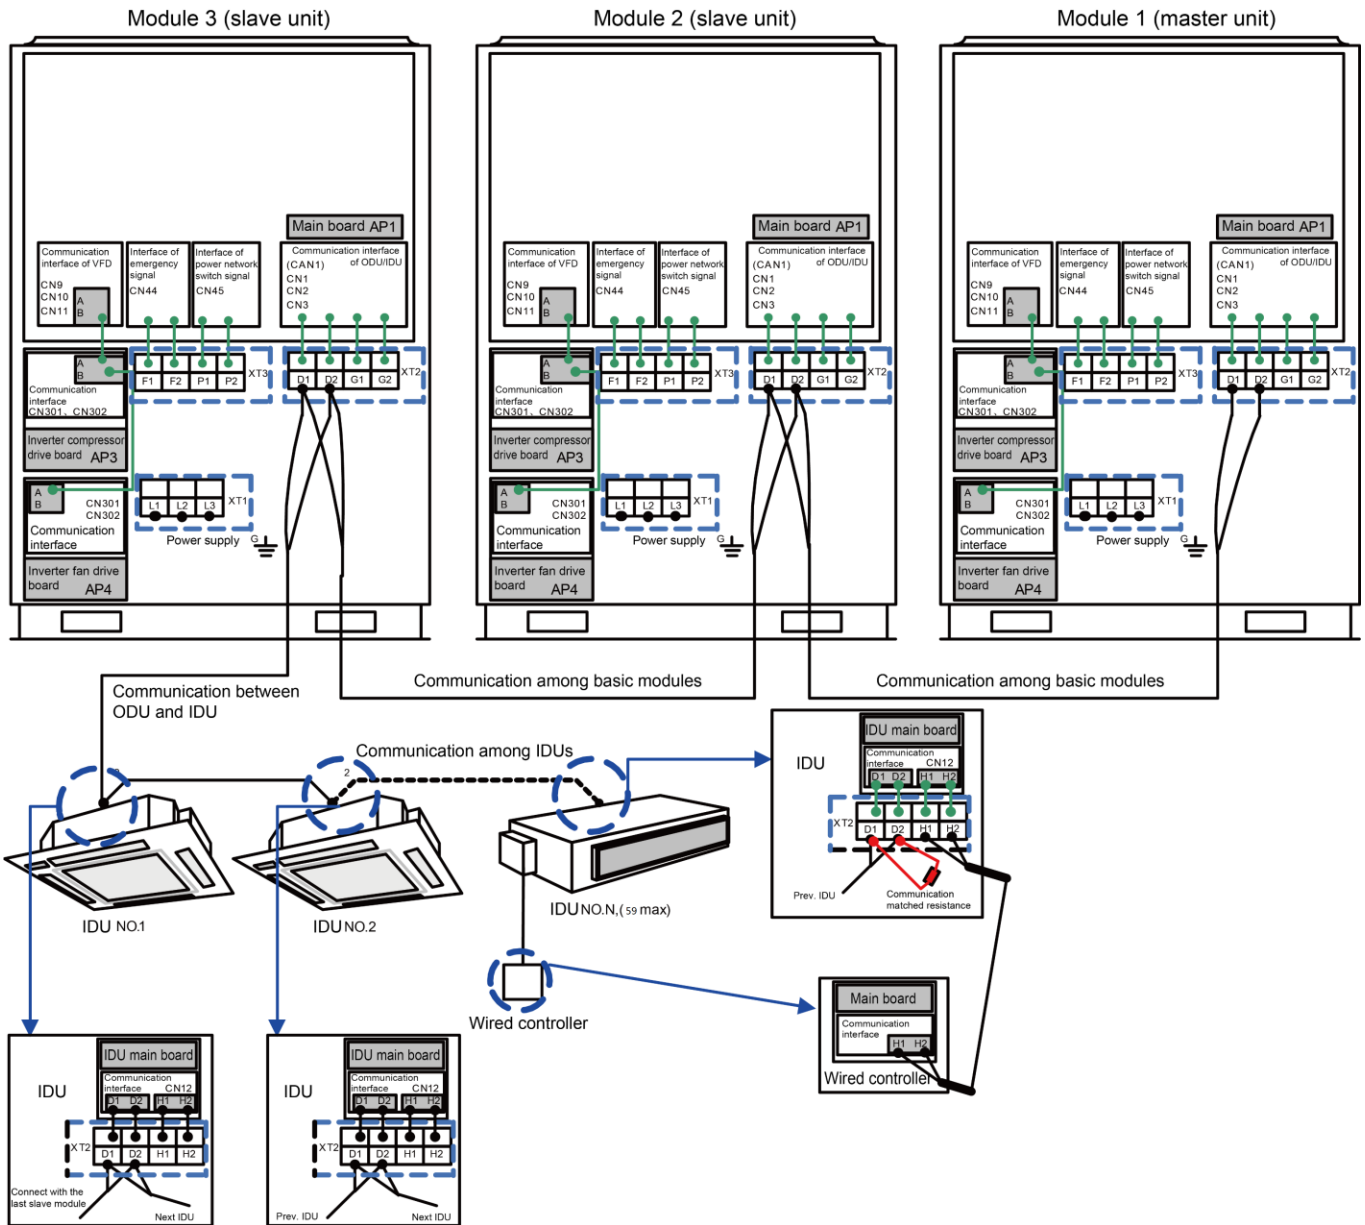


Fig.4.5.2

4.6.2 Communication mode of GMV DC Inverter Units

CAN bus mode is taken for communication between IDU and ODU and communication among IDUs.

4.6.3 Selection and connection model

4.6.3.1 Select communication material

NOTICE! If air conditioners are installed at places where there's strong electromagnetic interference, the communication wire of IDU and wired controller must use shielded wire and the communication wire between IDU and IDU/ODU must use shielded twisted pair.

(1) Select communication wire between IDU and wired controller

| Material type | Total length of communication line between IDU unit and wired controller L m (ft.) | Wire size | Remarks |
|--|--|-----------------|--|
| Light/Ordinary polyvinyl chloride sheathed cord. | $L \leq 250(820-1/5)$ | 2×AWG18~2×AWG16 | 1. Total length of communication line can't exceed 250m(820-1/5ft.). 2. The cord shall be Circular cord (the cores shall be twisted together). 3. If unit is installed in places with intense magnetic field or strong interference, it is necessary to use shielded wire. |

Graphic of connection between IDU and wired controller

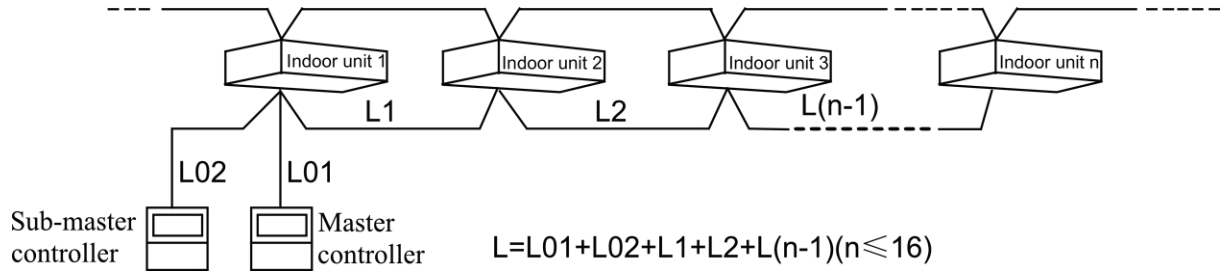


Fig.4.6.1

(2) Select communication wire between ODU and IDU

| Material Type | Total Length L(m) of Communication Cable between IDU Unit and IDU (ODU) Unit m(ft.) | Wire size | Remarks |
|--|--|------------------------------|--|
| Light/Ordinary polyvinyl chloride sheathed cord. | $L \leq 1000(3280-5/6)$ | $\geq 2 \times \text{AWG}18$ | 1. If the wire diameter is enlarged to 2×AWG16, the total communication length can reach 1500m(4921-1/4ft.). 2. The cord shall be Circular cord (the cores shall be twisted together). 3. If unit is installed in places with intense magnetic field or strong interference, it is necessary to use shielded wire. |

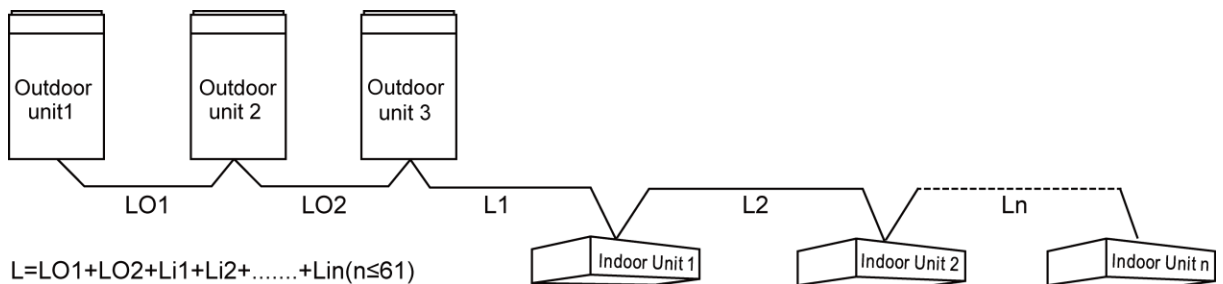


Fig.4.6.2

NOTICE! All of the selected communication wire must be consistent with local laws and regulations.

4.6.3.2 Connection mode of communication

(1) All communication wires of GMV5 must be connected in series rather than in star.

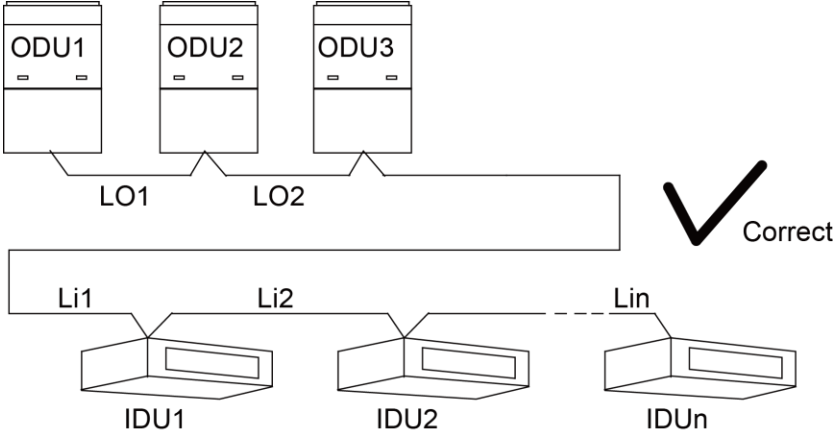


Fig.4.6.3

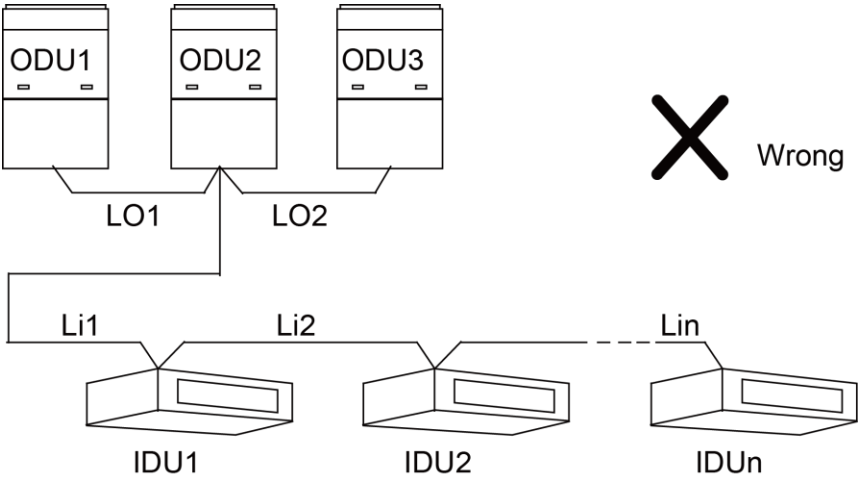


Fig.4.6.4

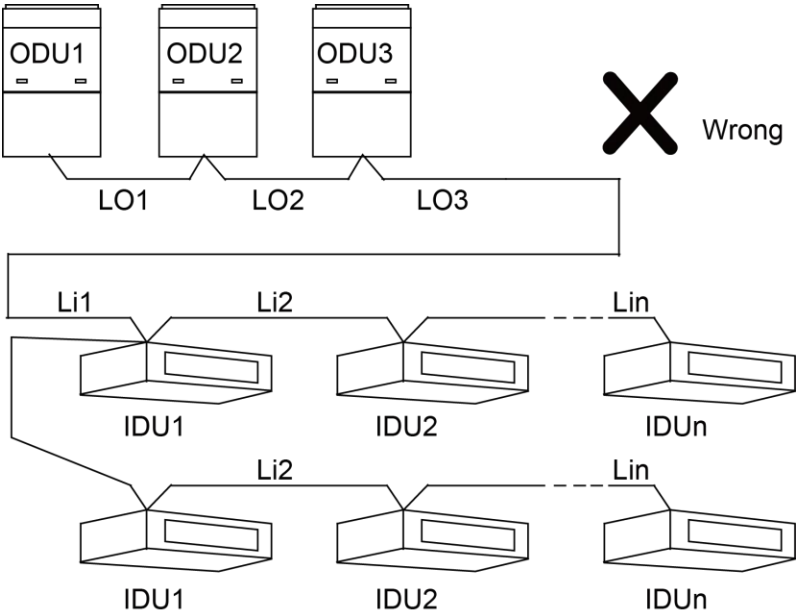


Fig.4.6.5

(2) All communication wires are connected by screws.

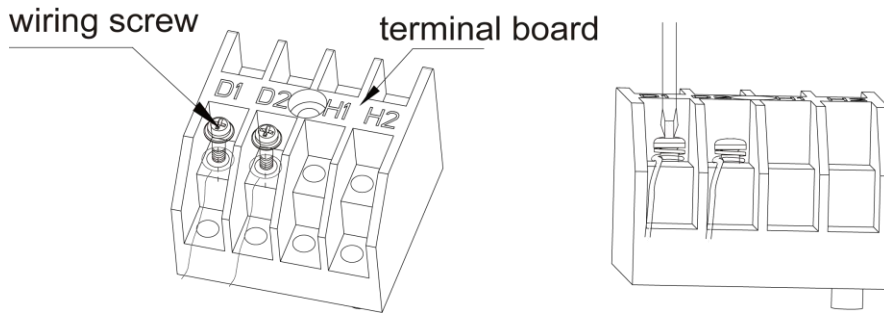


Fig.4.6.6

(3) If a single communication wire is not long enough and needs to be connected, the connected joint must be welded or pressure-welded. Do not simply twist the wires together.

4.6.4 Communication address

Auto addressing technology is adopted for Gree Photovoltaic Direct-driven Inverter VRF System IDU and ODU. No need to set address codes manually. Only the addresses of master unit and central control are needed to be set (address of central control is only needed when there are multiple refrigeration systems).

NOTICE! When installing remote monitor or central controller, displacement on indoor units' project codes must be made. Otherwise, there will be collision malfunction of the project codes. For detail operation methods, please refer to the *Photovoltaic Multi VRF Installation and Maintenance Manual*.

4.7 Connection Method and Steps for System Communication

4.7.1 Communication connection between IDU and ODU

NOTICE! The centralized controller can be installed when it is necessary.

Connect IDU and ODU via terminal D1/D2 of wiring board XT2. Below are the connection graphics of single unit and modular units:

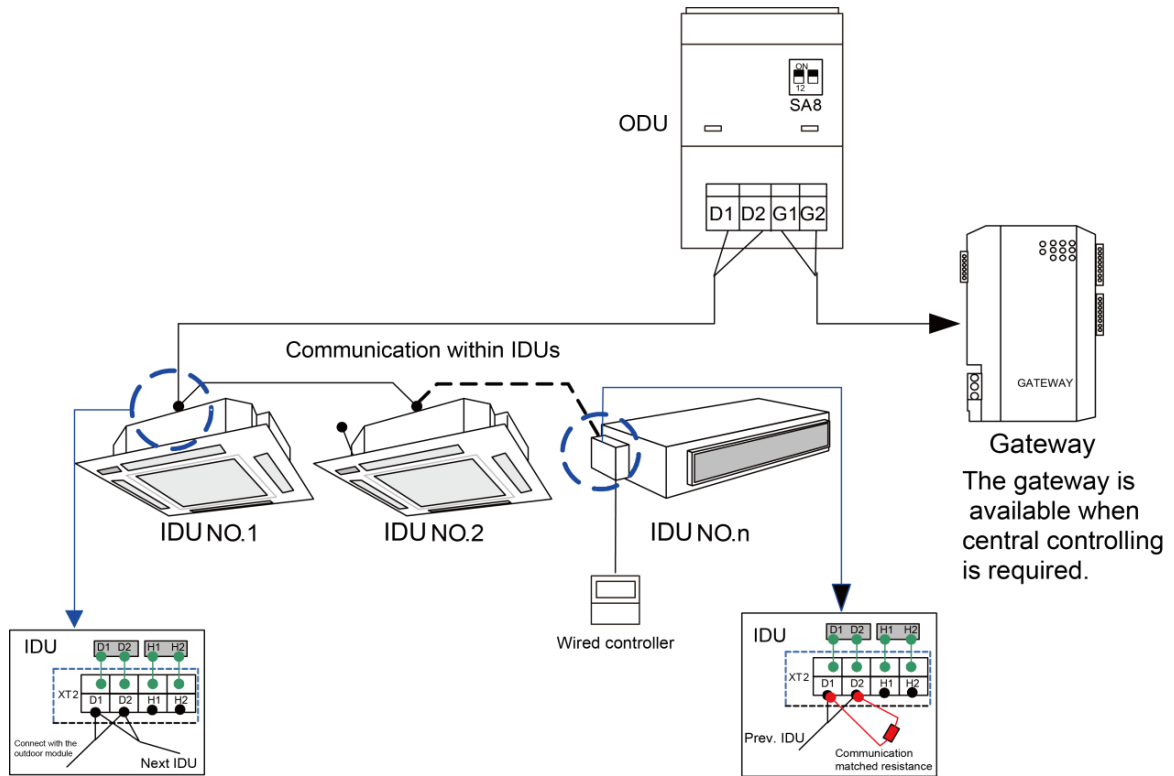


Fig.4.7.1 Connection of single unit

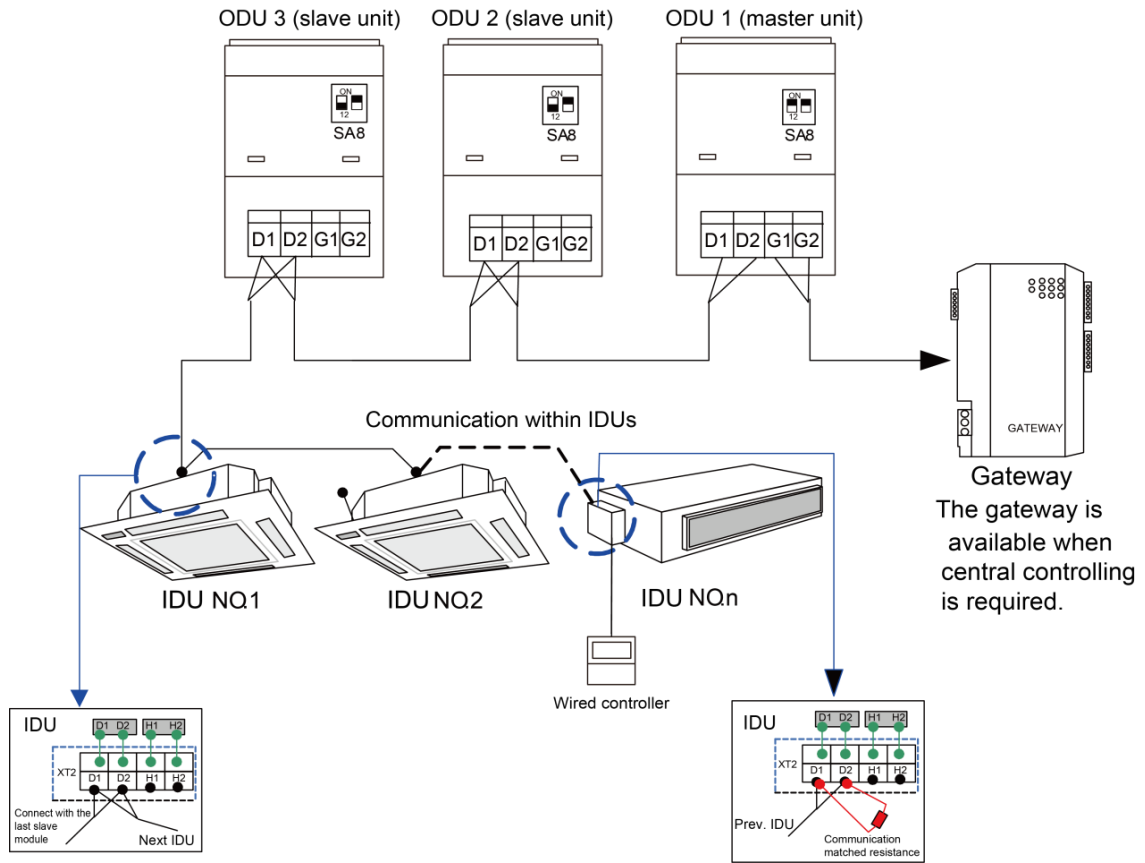


Fig.4.7.2 Connection of modular unit

NOTICE

- (1) For modular outdoor units, if there are multiple outdoor modules, then the master unit must be the first outdoor module on the communication wire and should not connect with IDU (master unit is set by SA8 of the outdoor main board).
- (2) For modular outdoor units, if there are multiple outdoor modules, then indoor units must be connected with the last slave module of ODU (slave module is set by SA8 of the outdoor main board).
- (3) Communication wire and power cord must be separated.
- (4) Communication wire must be of proper length. Extension is not allowed.
- (5) IDUs must be connected in series. The last IDU must be connected with the communication matched resistance (supplied in the list of ODU spare parts).

4.7.2 Communication connection between IDU and wired controller

There are 4 kinds of connection between IDU and wired controller, as shown below:

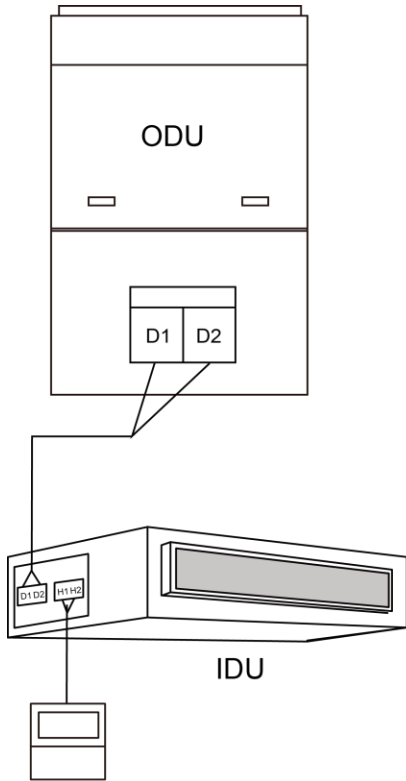


Fig.4.7.3 One wired controller controls one IDU

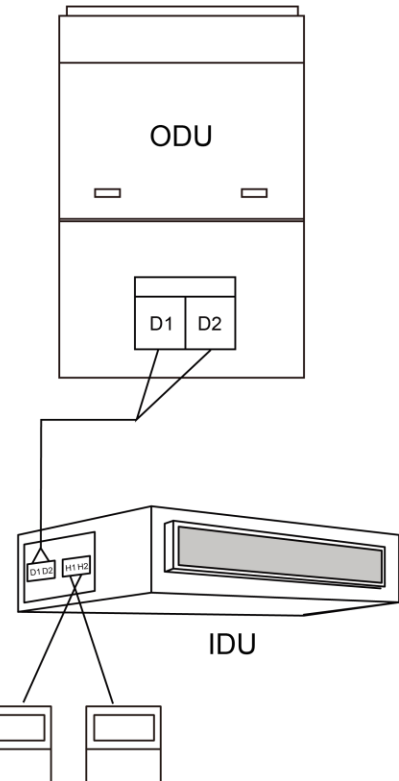


Fig.4.7.4 Two wired controllers controls one IDU

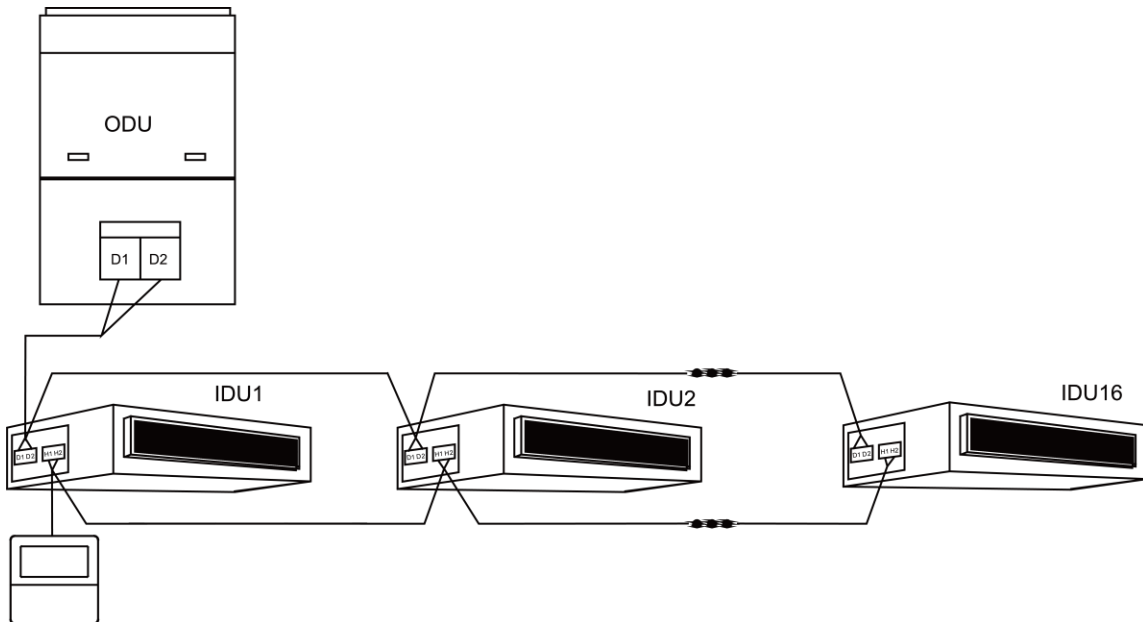


Fig.4.7.5 One wired controller controls multiple IDUs

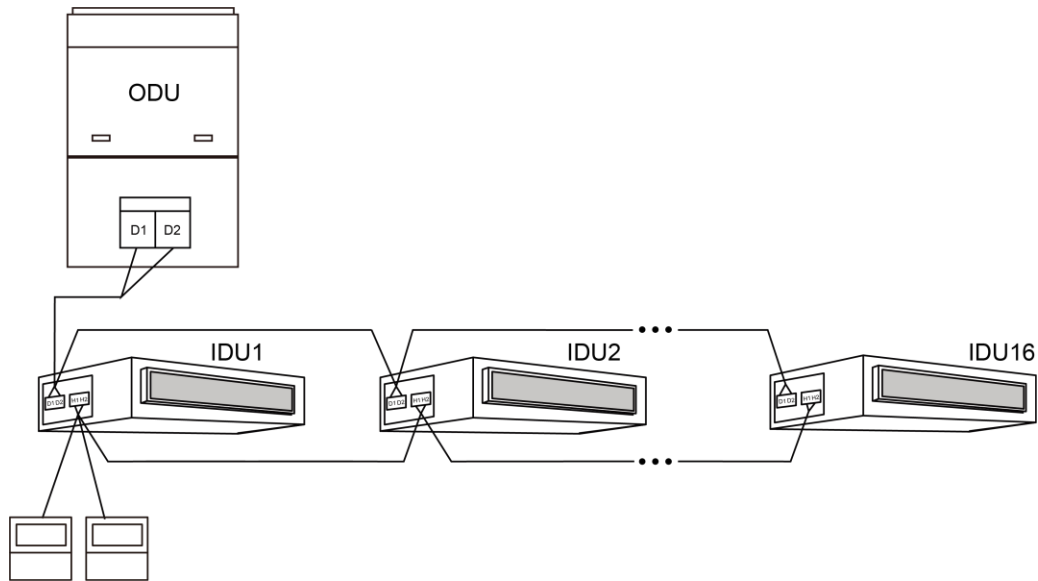


Fig.4.7.6 Two wired controllers control multiple IDUs

When two wired controllers control multiple IDUs, the wired controller can be connected to any one IDU, provided that the connected IDU is of the same series. Meanwhile, one and only one of the wired controllers must be set as a slave controller. At most 16 IDUs can be controlled by wired controllers and the connected IDUs shall be within a same IDU network.

No matter when unit is turned on or off, slave controller can be set.

How to set a slave controller: hold “function” button on the designated controller for 5s, and temperature zone displays C00. Continue holding “function” button for 5s and setting screen of controller parameter will come out. Default temperature zone displays P00.

Press ▲ button or ▼ button to select parameter code P13. Press “mode” button to switch to setup of parameter values. Then the parameter value will blink. Press ▲ button or ▼ button to select code 02. And then press “confirm/cancel” to finish setting.

Press “confirm/cancel” to return to the previous display until you exit from the setup of parameter values.

Below are user’s parameter settings:

| Parameter code | Parameter name | Parameter scope | Default value | Remark |
|----------------|-------------------------------------|---|---------------|--|
| P13 | Set up address for wired controller | 01: master wired controller 02: slave wired controller | 01 | When 2 wired controllers control one or more IDUs, they shall have different addresses. Slave wired controller (02) can’t set up units’ parameters except its own address. |

4.7.3 Communication connection of central controlling units

NOTICE! The centralized controller can be installed when it is necessary.

Port connection G1 and G2 on the wiring board XT2 of master unit among each multi VRF system (see below)

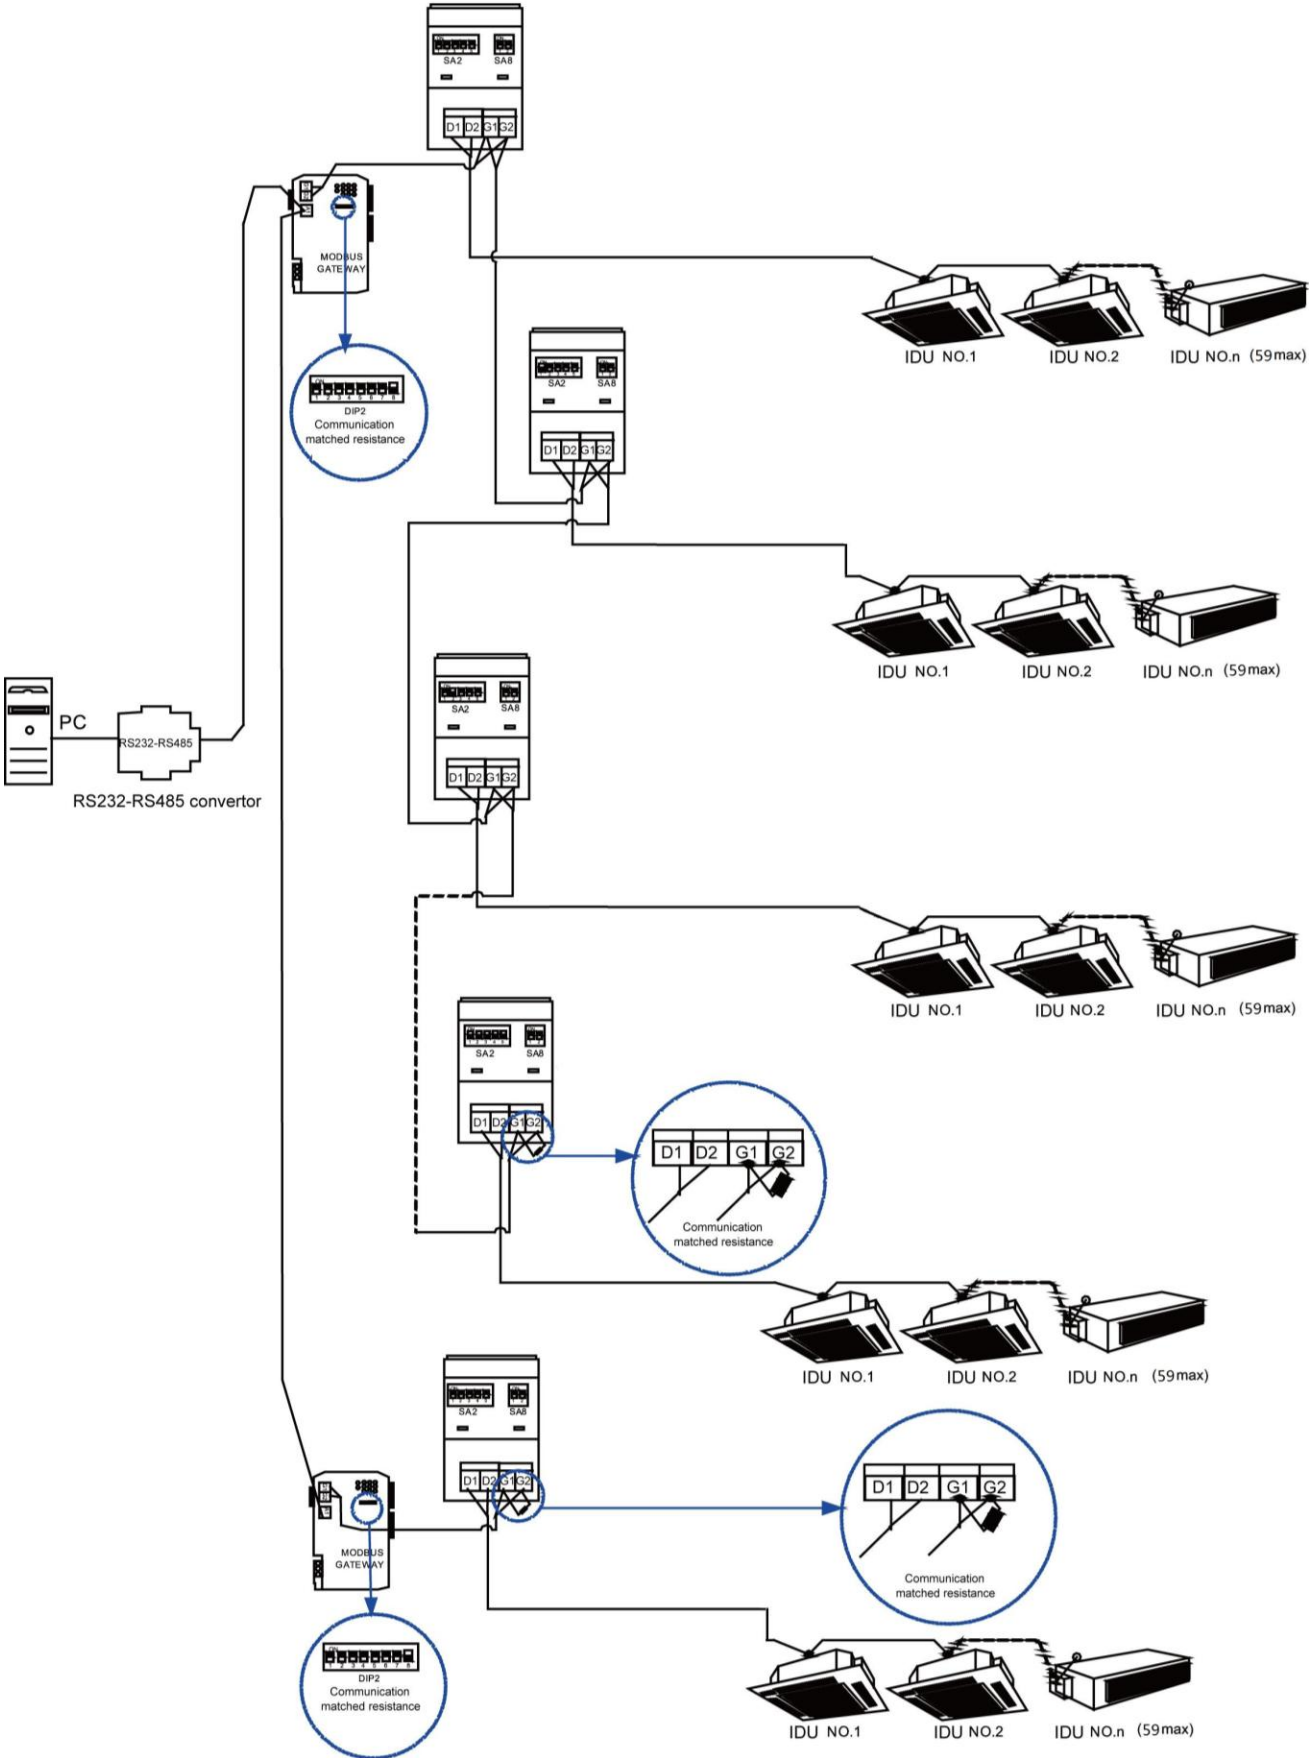


Fig.4.7.7

4.8 External Electrical Wiring Diagram

| |
|--|
| ⚠WARNING |
| (1) Every unit should be equipped with a circuit breaker for short-circuit and overload protection. In general, circuit breaker is at OFF status. |
| (2) During operation, all indoor units and outdoor units belonging to the same system must be kept energized status. Otherwise, the unit can't operate normally. |

4.8.1 External wiring diagram of a single unit

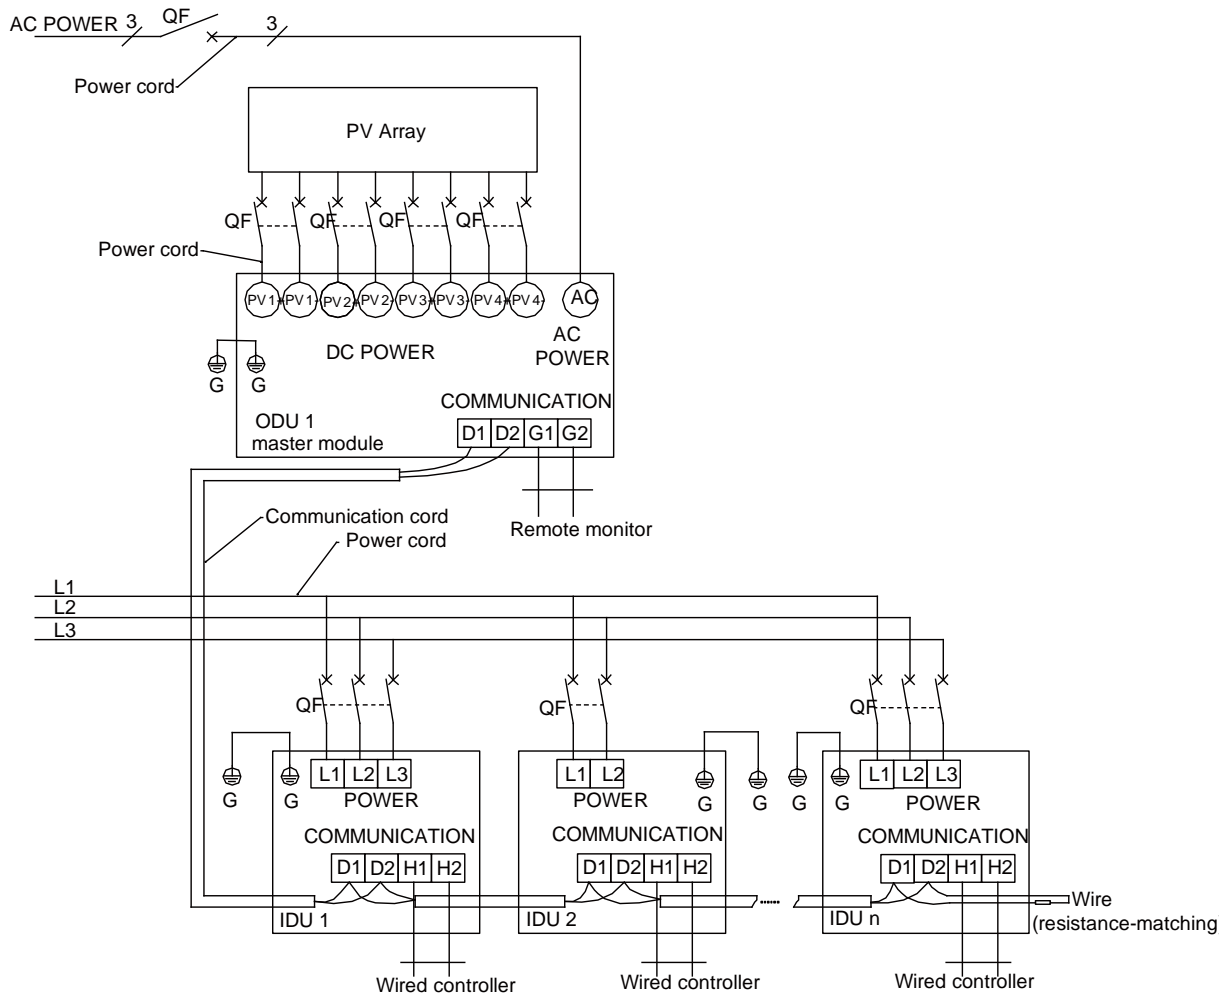


Fig.4.8.1

NOTICE! Maximum number of IDU is based upon ODU capacity. For details, please refer to the introduction of units' combination.

4.8.2 External wiring diagram of modular connection

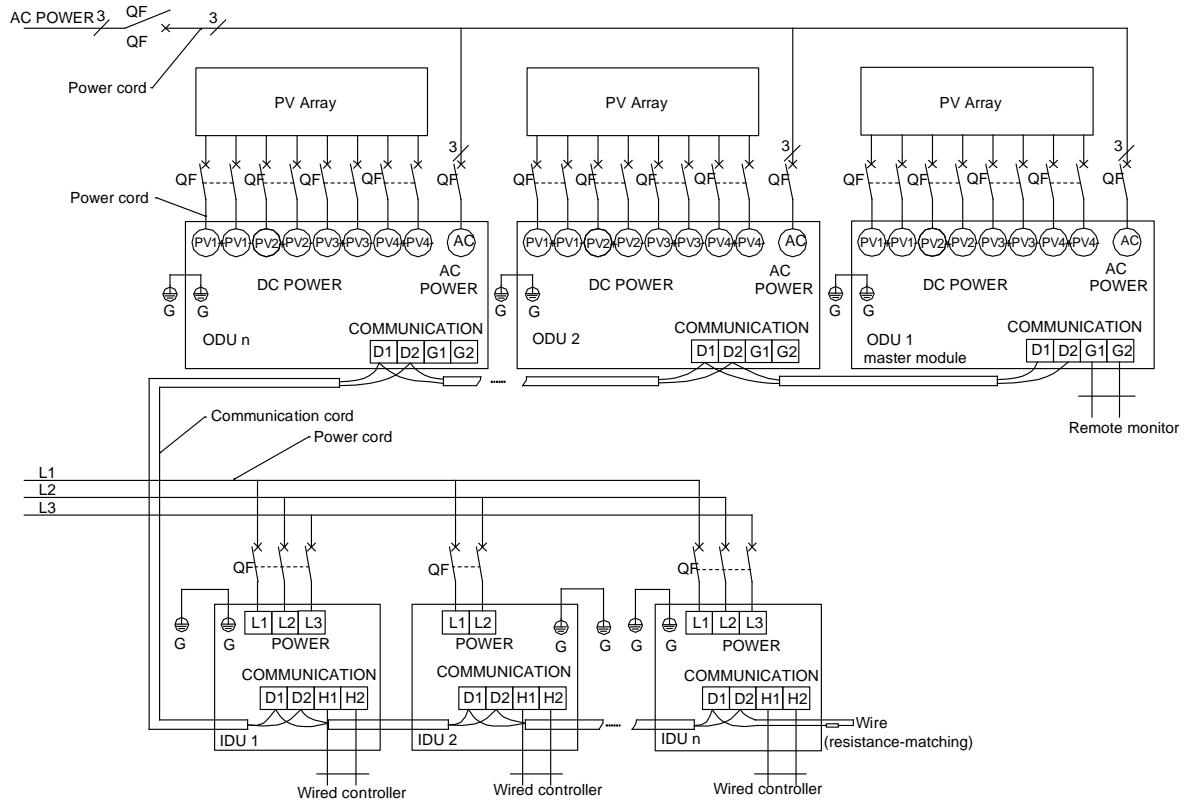


Fig.4.8.2

NOTICE! Maximum number of ODU (N) and maximum number of IDU (n) are based upon the combination type of ODU. For details, please refer to the introduction of units' combination.


4.9 Installation of Photovoltaic System

4.9.1 Notice for installation

Improper operation or not following operation instruction may cause safety hazards and serious damage to hardware, or even property loss or personal injury. Please read this manual carefully and follow all safety instructions listed below.

- (1) Before installation, please cut off all connections between air conditioner, electric network and photovoltaic. Use the specialized tool (packing materials in the unit) to remove the positive pole and negative pole of photovoltaic input cable; pay attention to the removed photovoltaic input cable terminal to avoid electric shock; do not touch the terminal or conductor connected with the grid and photovoltaic input circuit; any connection point between air conditioner and grid may cause fire hazard or electric shock.
- (2) The air conditioner may have unrecoverable damage due to electric discharge of internal component. When operating this device, please follow the static power protection regulation.
- (3) Electric shock and fire hazard may cause electric leakage hazard. Before connecting the photovoltaic and grid, please ensure the air conditioner is reliably grounded.

- (4) Any operation for this device must be done by relevant professionals; if maintenance of the system is needed, please contact related professionals; pay attention to the safety notice listed in all safety instructions and installation documents.
- (5) Grid parameter configuration

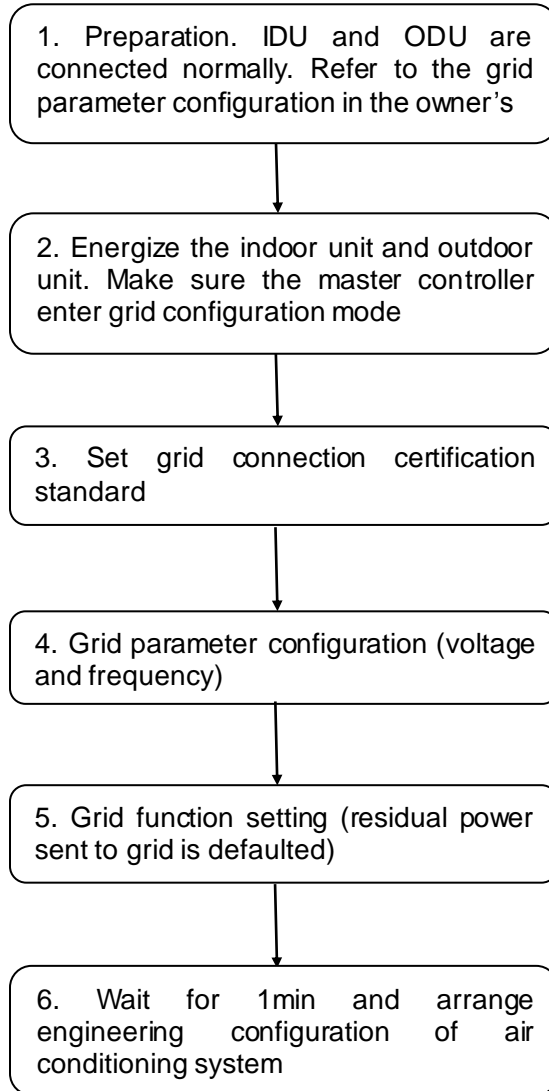

Detailed instructions:

- Step 1: make sure the engineering connection of air conditioning system is normal. Refer to the grid parameter configuration in the owner's manual;
- Step 2: Energize the indoor unit and outdoor unit for the first time. The master controller enters grid configuration selection mode (LED1 function code qp, on);
- Step 3: Under LED1 function code qp status, set grid connection standard;
- Step 4: Under LED1 function code qU status, set grid voltage type (voltage and frequency);
- Step 5: Under LED1 function code qn status, set the function for residual power sending to the grid (residual power sent to grid is defaulted);
- Step 6: setting is done; wait for 1min and arrange configuration and debugging of air conditioning system.

NOTICE!

- ① If configuration is not done in initial energization, the unit will stay in standby status and cannot operate normally. For detailed configuration procedures, please refer to related instructions in the owner's manual.
- ② Above configuration shall be done by the professional engineering personnel who is accredited by Gree. Customer shall not change the configuration; otherwise unit malfunction may be caused.

4.9.2 Installation project of photovoltaic system

The system construction is as below. The installation of photovoltaic system mainly includes the installation of Photovoltaic Array and GMV, the lay-out of cable and power device.

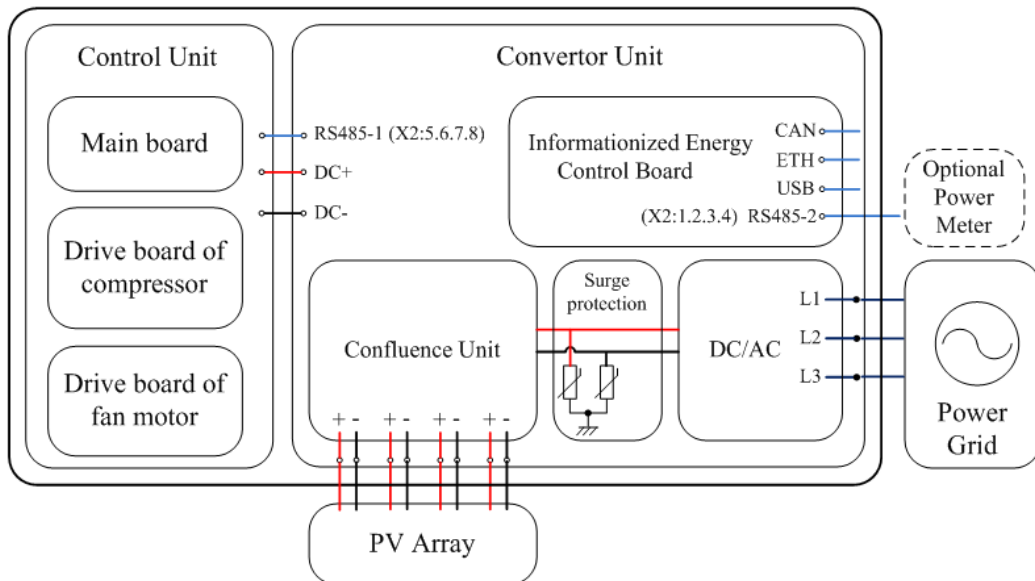


Fig.4.9.1

4.9.2.1 Installation of photovoltaic sub-assy support

The support of photovoltaic sub-assy shall be inspected by Party A and professional supervision unit before installation. The material of support shall be aluminium alloy or hot galvanizing steel. During installation, please avoid scratching to the aluminium alloy surface or galvanizing layer.

During installation, please place the transition unit (connected with house panel), main keel, subaltern keel (if needed) and other parts separately, and then hang them uniformly. Calculate the correct quantity of each row according to the quantity of photovoltaic sub-assy of each row, including the quantity of bolt and other accessories. Firstly, fix the transition unit in the house panel. Secondly, fix the corresponding main keel and subaltern keel (if needed) on it. Then connect each part together with bolt. Tighten the bolt by hand and then tighten it by manual spanner or electric spanner. Meanwhile, check and adjust the straight degree with nylon wire.

After finishing installation, clear the installation site.

4.9.2.2 Installation of photovoltaic battery sub-assy

The photovoltaic battery sub-assy shall be checked by related department of Party A

before using. Common photovoltaic battery sub-assy is shown as below.

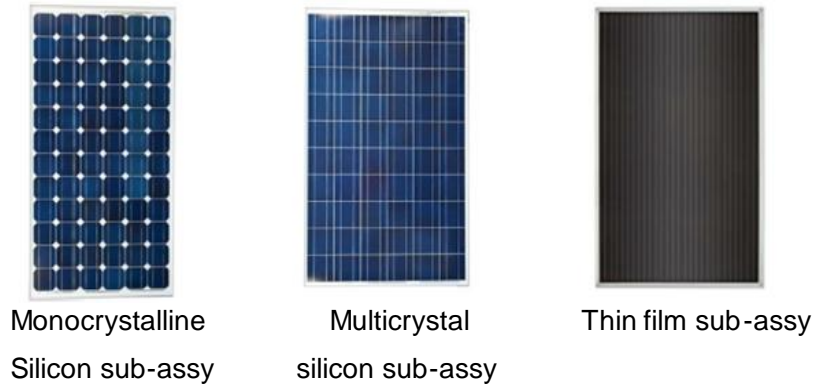


Fig.4.9.2

Place it carefully during transportation to avoid collision among photovoltaic sub-accessories and among photovoltaic sub-accessories and supports. The photovoltaic sub-accessories shall be placed on the keel and fixed by pressing. Press them properly in order to avoid strong wind and earthquake. Meanwhile, avoid damage to the glass due to pressing. Place the photovoltaic sub-accessories orderly and the wiring box shall be placed on the upper end.

4.9.2.3 Lay-out of cables

The cables shall be laid orderly. Roll the cable shaft for short distance transportation. The cable educing end shall be at the top of shaft. Reduce attrition with the floor during traction. Install corresponding cable bridge support. Each wire must be straight and cannot be curved.

The cable shall be reserved with sufficient wiring length at the two ends in junction case and DC power cabinet, and stuck with label at the end. The cable shall be protected by steel pipe when crossing the road. The pipe port shall be deburred to avoid cutting the cable during pulling.

During laying wire, make sure the wire size according to the diagram. Before laying, check if the insulation resistance is in normative range with megameter.

The cable shall be protected by HDPE plastic pipe when passing through the photovoltaic sub-assy and junction case. The cable shall be protected by steel pipe when crossing the road. The pipe port shall be deburred to avoid cutting the cable. The bridge support in vertical installation shall be firm with straight line deviation within 0.5cm and cannot damage the inner wall structure.

4.9.2.4 Installation and wiring of power devices

Check the power devices according to devices list, engineering diagram and technical document before installation, in order to check if the devices, their accessories, certificate of qualification, technical document and instruction manual are completed. Please tighten the screw used in installation and check the installation strength.

Installation of : Install it according to the engineering diagram. The cabinet shall be grounded and each cabinet shall be connected with the base separately. Check if all electronic components in the cabinet are in accordance with the principle diagram. Check if the rated voltage and control and operation power voltage are in accordance with the related

requirement. Finally, adjust the overcurrent circuit breaker of cabinet, relays and mechanical linkage.

5 Check Items after Installation and Trial Run

5.1 Check Items after Installation

| Check Items | Conditions Might Happen | Check |
|---|---|-------|
| Has the unit been fixed firmly? | The unit may drop, shake or emit noise. | |
| Have you done the gas leakage test? | It may cause insufficient cooling/heating capacity. | |
| Is the unit get proper thermal insulation? | It may cause condensation and dripping. | |
| Does the unit drain well? | It may cause condensation and dripping. | |
| Is the voltage in accordance with the rated voltage specified on the nameplate? | It may cause malfunction or damage the part. | |
| Is the electric wiring and piping connection installed correctly and securely? | It may cause malfunction or damage the part. | |
| Has the unit been earthed securely? | It may cause electrical leakage. | |
| Is the power cord specified? | It may cause malfunction or damage the part. | |
| Has the inlet and outlet been blocked? | It may cause insufficient cooling/heating capacity. | |
| Has the pipe length and refrigerant charging amount been recorded? | The refrigerant charging amount is not accurate. | |
| Is the address code of outdoor modules correct? | The unit cannot run normally. Communication malfunction might happen. | |
| Is the address code of indoor units and wired controller correct? | The unit cannot run normally. Communication malfunction might happen. | |
| Has the communication line been connected correct? | The unit cannot run normally. Communication malfunction might happen. | |
| Is the piping connection and valve status right? | The unit cannot run normally. | |
| Whether phase sequence of external power cord is correct or not? | Operation failure occurs or unit is damaged. | |
| Whether the engineering piping work and wiring holes are sealed? | Maybe there are mice biting the wires, which is the cause of malfunction. | |

5.2 Trial Run

NOTICE! During debugging, one and only one module must be set as a master module.

During debugging, one and only one IDU must be set as a master IDU.

Before debugging, grid parameter must be configured firstly.

When no special requirement is needed, no need to set other functions. Unit can operate according to ex-factory settings. When special requirement is needed, please read the Service Manual or Debugging and Maintenance Manual.

5.2.1 Preparation before trial run

- (1) The power supply should be turned on only after finishing all the installation.
- (2) All the control wires and cables are connected correctly and safely. Completely open the gas and liquid valves.
- (3) All the objects like metal filing, thrum and clip should be cleared after installation.
- (4) Check if the unit appearance and piping system is damaged or not due to

transportation.

- (5) Check if the terminals of electrical element is loose and the phase sequence is correct or not.
- (6) Check the valve: For single-module unit, fully open the gas and liquid valve and close oil balance valve; For dual/three module unit, fully open the gas, liquid valve and oil balance valve.

5.2.2 Trial run

5.2.2.1 Notices

- (1) Before test operation, make sure unit is power on and compressor has been preheated for more than 8 hours. Touch the unit to check whether it's normally preheated. Start test operation after unit is normally preheated, otherwise compressor might be damaged. Debugging must be performed by professional technicians or under the guide of professional technicians.
- (2) When debugging starts, system will operate according to the ambient temperature.
 - 1) When outdoor temperature is above 20°C(68°F), debugging shall be in cooling mode.
 - 2) When outdoor temperature is below 20°C(68°F), debugging shall be in heating mode.
- (3) Before debugging, confirm again whether the cut-off valve of each basic module is fully turned on.
- (4) During debugging, front panel of the outdoor unit must be fully closed; otherwise, debugging accuracy will be affected.
- (5) Before debugging, make sure the needed amount of refrigerant has been added to the pipe or at least 70% of the needed refrigerant has been added.

5.2.2.2 Description of each stage of debugging progress

Grid parameter configuration must be done before debugging (grid connection certification standard setting, grid parameter configuration and setting of residual power sending to the grid); otherwise, debugging is allowed. Detailed operation is as below:

Instruction:

- ①No setting is defaulted before ex-factory, which is 0 (except the setting of residual power sending to the grid);
- ②After energization, if master controller hasn't detected no setting for the following configuration, it will enter the setting interface of grid connection certification directly.

| | | | | | | |
|----|---------|----|---------|----|---------|--|
| qP | Flicker | 00 | Flicker | 00 | Flicker | Grid connection certification standard setting |
| qU | Flicker | 00 | Flicker | 00 | Flicker | Grid parameter configuration |
| qn | Flicker | 00 | Flicker | 00 | Flicker | Setting of residual power sending to the grid |

After the photovoltaic unit enters the function, qp is defaulted.

Grid connection certification standard setting, grid parameter configuration and setting of residual power sending to the grid must be done before debugging or turning on the unit.

③ If it is in the interface not for setting function, press SW3 function button to enter function setting interface and select related function configuration to modify configuration.

④ Power failure memory is available, you don't need to set again; hold on pressing SW8 reset button to resume factory default settings.

(1) Grid connection certification standard setting:

After entering this function setting, default display of master unit is as below. Other basic modules will display according to normal operation mode:

| LED1 | | LED2 | | LED3 | |
|---------------|--------------|------------------|--------------|----------------|--------------|
| Function Code | Display Mode | Current Progress | Display Mode | Current Status | Display Mode |
| qP | On | 00 | Flicker | oC | Flicker |

Press SW1 ▲ button and SW2 ▼ button to select the following grid connection certification standard setting.

| LED1 | | LED2 | | LED3 | |
|---------------|--------------|-------------------------------|--------------|----------------|--------------|
| Function Code | Display Mode | Grid connection certification | Display Mode | Current Status | Display Mode |
| qP | On | 1~3 | Flicker | oC | Flicker |

After selecting corresponding grid connection certification standard setting, press SW7 to confirm the selected mode. Corresponding display of all modules are as below:

| LED1 | | LED2 | | LED3 | |
|---------------|--------------|-------------------------------|--------------|----------------|--------------|
| Function Code | Display Mode | Grid connection certification | Display Mode | Current Status | Display Mode |
| qP | On | 1~3 | On | oC | On |

Master unit will memorize this setting and the setting won't be cleared in power failure.

For the master unit in this case, press SW6 return button to return to the operation of last step.

For the master unit in this case, if no button is pressed for 5min continuously, it will exit automatically and the unit will resume the display of current status.

Note:

| No. | Standard | Applicable areas |
|-----|------------------|---|
| 1 | NB/T 32004 | China |
| 2 | IEC 61727 | Middle East, Southeast Asia, Europe, etc. |
| 3 | IEEE 1547.1(ETL) | North America, etc. |

(2) Grid parameter configuration:

After entering this function setting, default display of master unit is as below. Other basic modules will display according to normal operation mode:

| LED1 | | LED2 | | LED3 | |
|---------------|--------------|------------------|--------------|----------------|--------------|
| Function Code | Display Mode | Current Progress | Display Mode | Current Status | Display Mode |
| qU | On | 00 | Flicker | 00 | On |

Press SW1 ▲ button and SW2 ▼ button to select the voltage.

| LED1 | | LED2 | | LED3 | |
|---------------|--------------|-------------------|--------------|----------------|--------------|
| Function Code | Display Mode | Voltage selection | Display Mode | Current Status | Display Mode |
| qU | On | 1~7 | Flicker | 00 | On |

After selecting corresponding voltage, press SW7 to confirm the selected mode.

Meanwhile, LED3 display is flickering, which means entering frequency configuration.

Corresponding display of all modules are as below:

| LED1 | | LED2 | | LED3 | |
|---------------|--------------|-------------------|--------------|----------------|--------------|
| Function Code | Display Mode | Voltage selection | Display Mode | Current Status | Display Mode |
| qU | On | 1~7 | On | 00 | Flicker |

Press SW1 ▲ button and SW2 ▼ button to select the frequency.

| LED1 | | LED2 | | LED3 | |
|---------------|--------------|---------------------|--------------|----------------|--------------|
| Function Code | Display Mode | Frequency selection | Display Mode | Current Status | Display Mode |
| qU | On | 1~7 | On | 1~2 | Flicker |

After selecting corresponding frequency, press SW7 to confirm the selected mode.

Corresponding display of all modules are as below:

| LED1 | | LED2 | | LED3 | |
|---------------|--------------|---------------------|--------------|----------------|--------------|
| Function Code | Display Mode | Frequency selection | Display Mode | Current Status | Display Mode |
| qU | On | 1~7 | On | 1~2 | On |

Master unit will memorize this setting and the setting won't be cleared in power failure.

For the master unit in this case, press SW6 return button to return to the operation of last step.

For the master unit in this case, if no button is pressed for 5min continuously, it will exit automatically and the unit will resume the display of current status.

Note: grid voltage type configuration

Voltage selection

| No. | 3-phase voltage |
|-----|-----------------|
| 1 | 415 |
| 2 | 400 |
| 3 | 380 |
| 4 | 240 |
| 5 | 230 |
| 6 | 220 |
| 7 | 208 |

Frequency configuration

| No. | Grid frequency |
|-----|----------------|
| 1 | 50 |
| 2 | 60 |

(3) Setting of residual power sending to the grid

After entering this function setting, default display of master unit is as below. Other basic modules will display according to normal operation mode:

| LED1 | | LED2 | | LED3 | |
|---------------|--------------|------------------|--------------|----------------|--------------|
| Function Code | Display Mode | Current Progress | Display Mode | Current Status | Display Mode |
| qn | On | 00 | Flicker | oC | Flicker |

Press SW1 ▲ button and SW2 ▼ button to select the following setting of residual power sending to the grid

| LED1 | | LED2 | | LED3 | |
|---------------|--------------|---|--------------|----------------|--------------|
| Function Code | Display Mode | Setting of residual power sending to the grid | Display Mode | Current Status | Display Mode |
| qn | On | 1~2 | Flicker | oC | Flicker |

After selecting corresponding setting of residual power sending to the grid, press SW7 to confirm the selected mode. Corresponding display of all modules are as below:

| LED1 | | LED2 | | LED3 | |
|---------------|--------------|---|--------------|----------------|--------------|
| Function Code | Display Mode | Setting of residual power sending to the grid | Display Mode | Current Status | Display Mode |
| qn | On | 1~2 | On | oC | On |

Master unit will memorize this setting and the setting won't be cleared in power failure.

For the master unit in this case, press SW6 return button to return to the operation of last step.

For the master unit in this case, if no button is pressed for 5min continuously, it will exit automatically and the unit will resume the display of current status.

Note:

| No. | Grid connection function |
|-----|--|
| 1 | Residual power sending to the grid (defaulted) |
| 2 | Residual power no sending to the grid |

| Description of each stage of debugging progress | | | | | | | |
|---|----------------|----------------|---------------|----------------|-------------|----------------|---|
| — | Debugging code | | Progress code | | Status code | | Meaning |
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 01_Set up master unit | db | light | 01 | light | A0 | light | System is not debugged. |
| | db | light | 01 | light | CC | light | System doesn't have master unit. Reset master unit. |
| | db | light | 01 | light | CF | light | More than 2 master units are set. Reset master unit. |
| | db | light | 01 | light | OC | light | Master unit is successfully set. Start next progress. |

| Description of each stage of debugging progress | | | | | | | |
|---|----------------|----------------|---------------|----------------|------------------|----------------|---|
| — | Debugging code | | Progress code | | Status code | | Meaning |
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 02_Allocate addresses | db | light | 02 | light | Ad | blink | System is allocating addresses. |
| | db | light | 02 | light | L7 | blink | Master IDU is not set. Please set master IDU. If it's not set in 1min, system will set the master IDU randomly. |
| | db | light | 02 | light | OC | light | Allocation is finished. Start next progress. |
| 03_Confirm the quantity of modules | db | light | 03 | light | 01~04 | blink | LED3 displays the quantity of modules. Confirm the number manually. |
| | db | light | 03 | light | OC | light | System has confirmed the quantity of modules. Start next progress. |
| 04_Confirm the quantity of IDUs | db | light | 04 | light | 01~80 | blink | LED3 displays the quantity of IDUs. Confirm the number manually. |
| | db | light | 04 | light | OC | light | System has confirmed the quantity of IDUs. Start next progress. |
| 05_Detect internal communication | db | light | 05 | light | C2 | light | System detects "driven communication error between master unit and inverter compressor". |
| | db | light | 05 | light | C3 | light | System detects "driven communication error between master unit and inverter fan". |
| | db | light | 05 | light | CH | light | IDU/ODU "high proportion of rated capacity". |
| | db | light | 05 | light | CL | light | IDU/ODU "low proportion of rated capacity". |
| | db | light | 05 | light | OC | light | Detection is finished. Start next progress. |
| 06_Detect outdoor components | db | light | 06 | light | Error code | light | System detects error in outdoor components. |
| | db | light | 06 | light | OC | light | No error in outdoor components. Start next progress. |
| 07_Detect indoor components | db | light | 07 | light | XXXX /Error code | light | System detects error in indoor components. XXXX is the project no. of the faulted IDU. 3s later, relevant error code is displayed. For example, IDU no. 100 has d5 error, then LED3 displays like this: 01 (2s later) 00 (2s later) d5, and repeat again. |
| | db | light | 07 | light | OC | light | No error in indoor components. Start next progress. |
| 08_Confirm preheated compressor | db | light | 08 | light | U0 | light | Preheat time for compressor is less than 8h. |
| | db | light | 08 | light | OC | light | Preheat time for compressor is 8h. Start next progress. |

| Description of each stage of debugging progress | | | | | | | |
|--|----------------|----------------|---------------|----------------|-------------|----------------|---|
| — | Debugging code | | Progress code | | Status code | | Meaning |
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 09_Refrigerant judgments before startup | db | light | 09 | light | U4 | light | System refrigerant is not enough. System downtime equilibrium pressure is lower than 0.3MPa(4-2/5psig). |
| | db | light | 09 | light | OC | light | System refrigerant is normal. Start next progress. |
| 10_Status judgments of outdoor valves before startup | db | light | 10 | light | ON | light | Outdoor valves are being turned on. |
| | db | light | 10 | light | U6 | light | Outdoor valves are not fully turned on. |
| | db | light | 10 | light | OC | light | Outdoor valves are turned on normally. |
| 11_Calculate refrigerant quantity manually | db | light | 11 | light | AE | light | Calculate the refrigerant quantity manually and confirm the perfusion status of refrigerant (the quantity of refrigerant added into the system must be recorded accurately). |
| 12_Confirm debugging startup | db | light | 12 | light | AP | blink | Ready for units to start debugging. |
| | db | light | 12 | light | AE | light | Manual calculation of refrigerant quantity is set up. |
| 13_ | — | — | — | — | — | — | no meaning. |
| 14_ | — | — | — | — | — | — | no meaning. |
| 15_Cooling debugging | db | light | 15 | light | AC | light | Debugging is enabled in cooling mode (debugging mode, auto-selected by system). |
| | db | light | 15 | light | Error code | light | Error occurs during debugging in cooling mode. |
| | db | light | 15 | light | J0 | light | Error of other modules occurs during debugging in cooling mode. |
| | db | light | 15 | light | U9 | light | Outdoor pipeline and valves are not normal. |
| | db | light | 15 | light | XXXX/ U8 | light | System detects error in indoor pipeline. XXXX is the project no. of the faulted IDU. 3s later, error code U8 is displayed. For example, IDU no. 100 has U8 error, then LED3 displays like this: 01 (2s later) 00 (2s later) U8, and repeat again. |

| Description of each stage of debugging progress | | | | | | | |
|---|----------------|----------------|---------------|----------------|-------------|----------------|---|
| — | Debugging code | | Progress code | | Status code | | Meaning |
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 16_Heating debugging | db | light | 16 | light | AH | light | Debugging is enabled in heating mode (debugging mode, auto-selected by system). |
| | db | light | 16 | light | Error code | light | Error occurs during debugging in heating mode. |
| | db | light | 16 | light | J0 | light | Error of other modules occurs during debugging in heating mode. |
| | db | light | 16 | light | U9 | light | Outdoor pipeline and valves are not normal. |
| | db | light | 16 | light | XXXX/ U8 | light | System detects error in indoor pipeline. XXXX is the project no. of the faulted IDU. 3s later, error code U8 is displayed. For example, IDU no. 100 has U8 error, then LED3 displays like this: 01 (2s later) 00 (2s later) U8, and repeat again. |
| 17_Debugging finished | 01~04 | light | OF | light | OF | light | Debugging is finished. System is on standby condition. LED1 displays module address. LED2 and LED3 display "OF". |

5.2.2.3 Debugging operation mode

Gree Photovoltaic Direct-driven Inverter VRF System has two debugging modes: one is direct operation on main board of outdoor units while the other is PC operation via special software. In PC software debugging, indoor/outdoor parameters can be displayed and historical data can be recorded and inquired. (Operation details can be found in relevant instruction manuals)

(1) Debugging through operation on main board of outdoor units

In this debugging mode, following debugging functions are included on the main board:

Step 1: front panel of the outdoor units must be fully closed. Open the debugging window of each basic module;

Step 2: disconnect power for outdoor units. According to design requirements of external static pressure, set up corresponding static pressure mode for the units. Setting methods can be seen in Outdoor Fan Static Pressure Setup SA6_ESP_S;

Step 3: disconnect power for outdoor units and set one module as a master unit. Setting methods can be seen in Master Unit Setup SA8_MASTER_S;

Step 4: Connect power for all indoor units. Make sure all IDUs are power on. Then all outdoor modules will display "Debugging not enabled";

Step 5: Find the module with "01" module address to be the master module. Hold SW7

button on the master module for at least 5s to enable debugging;

Step 6: Wait. Unit will then start progress 01 and 02; in progress 01, if master unit is not correctly set, progress 01 will show the following errors:

| | Debugging Code | | Progress Code | | Status Code | | Meaning |
|---------------------------|----------------|----------------|---------------|----------------|-------------|----------------|---|
| Progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | Code | Display status | Code | Display status | |
| 01_01 Set up master unit: | db | light | 01 | light | CC | light | System doesn't have master unit. Reset master unit. |
| | db | light | 01 | light | CF | light | More than 2 master units are set. Reset master unit. |
| | db | light | 01 | light | OC | light | Master unit is successfully set. Start next progress. |

According to the above errors, reset the master unit as instructed in Master Unit Setup SA8_MASTER_S. After reset is finished, start debugging again.

In progress 02, if master IDU is not detected, then progress 02 will show the following errors:

| LED1 | | LED2 | | LED3 | |
|---------------|--------------|------------------|--------------|----------------|--------------|
| Function code | Display mode | Current progress | Display mode | Current status | Display mode |
| db | light | 02 | light | L7 | blink |

At this time, all buttons are ineffective. Set master IDU in 1min via debugging software. If master IDU is not set in 1min, system will set up a master IDU randomly. After that, system will start next progress.

Step 7: in progress 03, the quantity of modules needs to be confirmed manually. Main board of each module will display:

| | Debugging code | | Progress code | | Status code | |
|------------------------|----------------|----------------|---------------|----------------|---------------------|----------------|
| Progress | LED1 | | LED2 | | LED3 | |
| | Code | Display status | Code | Display status | Code | Display status |
| 03_Quantity of modules | db | light | 03 | light | Quantity of modules | blink |

If the quantity displayed is the same with actual quantity, then press SW7 confirmation button on the master unit to confirm it. Unit will start next progress:

| | Debugging code | | Progress code | | Status code | |
|------------------------------------|----------------|----------------|---------------|----------------|-------------|----------------|
| Progress | LED1 | | LED2 | | LED3 | |
| | Code | Display status | Code | Display status | Code | Display status |
| 03_Confirm the quantity of modules | db | light | 03 | light | OC | light |

If the quantity displayed is different from actual quantity, then disconnect power and check whether communication wire among each module is correctly connected. After the check, start

debugging again.

Step 8: in progress 04, the quantity of IDUs needs to be confirmed manually. Main board of each module will display:

| Progress | Debugging code | | Progress code | | Status code | |
|---------------------------------|----------------|----------------|---------------|----------------|----------------------------|----------------|
| | LED1 | | LED2 | | LED3 | |
| | Code | Display status | Code | Display status | Code | Display status |
| 04_Confirm the quantity of IDUs | db | Light | 04 | Light | Quantity of connected IDUs | blink |

If the quantity displayed is the same with actual quantity, then press SW7 confirmation button on the master unit to confirm it. Unit will start next progress:

| Progress | Debugging code | | Progress code | | Status code | |
|---------------------------------|----------------|----------------|---------------|----------------|-------------|----------------|
| | LED1 | | LED2 | | LED3 | |
| | Code | Display status | Code | Display status | Code | Display status |
| 04_Confirm the quantity of IDUs | db | Light | 04 | Light | OC | Light |

Step 9: progress 05 is “Detect internal communication”

If no error is detected, system will display as below and then start next progress.

| progress | Debugging code | | Progress code | | Status code | | Meaning |
|----------------------------------|----------------|----------------|---------------|----------------|-------------|----------------|---|
| | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 05_Detect internal communication | db | Light | 05 | Light | OC | Light | Detection is finished. Start next progress. |

If error is detected, system will stay at current progress. Error has to be solved manually.

Below are relevant errors:

| progress | Debugging code | | Progress code | | Status code | | Meaning |
|----------------------------------|----------------|----------------|---------------|----------------|-------------|----------------|--|
| | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 05_Detect internal communication | db | Light | 05 | Light | C2 | Light | System detects “driven communication error between master unit and inverter compressor”. |
| | db | Light | 05 | Light | C3 | Light | System detects “driven communication error between master unit and inverter fan”. |
| | db | Light | 05 | Light | CH | Light | IDU/ODU “high proportion of rated capacity”. |
| | db | Light | 05 | Light | CL | Light | IDU/ODU “low proportion of rated capacity”. |

Elimination methods of above errors can be found in Troubleshooting.

Step 10: progress 06 is “Detect outdoor components”

If no error is detected, system will display as below and then start next progress.

| — | Debugging code | | Progress code | | Status code | | Meaning |
|------------------------------|----------------|----------------|---------------|----------------|-------------|----------------|--|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 06_Detect outdoor components | db | Light | 06 | Light | OC | Light | No error is detected in outdoor components. Start next progress. |

If error is detected, system will stay at current progress. Error has to be solved manually.

Below is relevant error:

| — | Debugging code | | Progress code | | Status code | | Meaning |
|------------------------------|----------------|----------------|---------------|----------------|-------------|----------------|---|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 06_Detect outdoor components | db | Light | 06 | Light | Error code | Light | System detects error in outdoor components. |

Elimination methods of above error can be found in Troubleshooting.

Step11: progress 07 is “Detect indoor components”

If no error is detected, system will display as below and then start next progress.

| — | Debugging code | | Progress code | | Status code | | Meaning |
|-----------------------------|----------------|----------------|---------------|----------------|-------------|----------------|---|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 07_Detect indoor components | db | Light | 07 | Light | OC | Light | No error is detected in indoor components. Start next progress. |

If error is detected, system will stay at current progress. Error has to be solved manually.

Below is relevant error:

| — | Debugging code | | Progress code | | Status code | | Meaning |
|-----------------------------|----------------|----------------|---------------|----------------|--------------------|----------------|--|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 07_Detect indoor components | db | Light | 07 | Light | XXXX or Error code | Light | System detects error in indoor components. |

XXXX is the project no. of the faulted IDU. 3s later, relevant error code is displayed. For example, IDU no. 100 has d5 error, then LED3 displays like this: 01 (2s later) 00 (2s later) d5, and repeat again.

Elimination methods of above error can be found in Troubleshooting.

Step 12: progress 08 is “Confirm preheated compressor”

If more than 8h of preheat time is detected, system will display as below and start next progress.

| — | Debugging code | | Progress code | | Status code | | Meaning |
|---------------------------------|----------------|----------------|---------------|----------------|-------------|----------------|---|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 08_Confirm preheated compressor | db | Light | 08 | Light | OC | Light | Preheat time for compressor is 8h. Start next progress. |

If less than 8h of preheat time is detected, system will give error alarm and display as below. Then press SW7 confirmation button to skip the wait time and start next progress. But this will cause force start of the compressor, which may damage the compressor.

| — | Debugging code | | Progress code | | Status code | | Meaning |
|---------------------------------|----------------|----------------|---------------|----------------|-------------|----------------|--|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 08_Confirm preheated compressor | db | Light | 08 | Light | UO | Light | Preheat time for compressor is less than 8h. |

Step 13: progress 09 is “Refrigerant judgments before startup”

If the refrigerant quantity inside the system meets the requirement of operation startup, system will display as below and start next progress.

| — | Debugging code | | Progress code | | Status code | | Meaning |
|---|----------------|----------------|---------------|----------------|-------------|----------------|--|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 09_Refrigerant judgments before startup | db | Light | 09 | Light | OC | Light | System refrigerant is normal. Start next progress. |

If there’s no or not enough refrigerant in the system to meet the requirement of operation startup, system will display U4 “refrigerant shortage protection” and fails to start next progress. Then check if there’s any leakage or add refrigerant in side until error eliminated.

| — | Debugging code | | Progress code | | Status code | | Meaning |
|---|----------------|----------------|---------------|----------------|-------------|----------------|---|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 09_Refrigerant judgments before startup | db | Light | 09 | Light | O4 | Light | System refrigerant is not enough. System downtime equilibrium pressure is lower than 0.3MPa(4-2/5psig). |

Step 14: progress 10 is “Status judgments of outdoor valves before startup”

If master unit displays below, status judgments are enabled.

| — | Debugging code | | Progress code | | Status code | | Meaning |
|--|----------------|----------------|---------------|----------------|-------------|----------------|-------------------------------------|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 10_Status judgments of outdoor valves before startup | db | Light | 10 | Light | ON | Light | Outdoor valves are being turned on. |

If unit detects that valve status is not normal, it will display as below:

| — | Debugging code | | Progress code | | Status code | | Meaning |
|--|----------------|----------------|---------------|----------------|-------------|----------------|---|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 10_Status judgments of outdoor valves before startup | db | Light | 10 | Light | U6 | Light | Outdoor valves are not fully turned on. |

Then check the big and small valves whether they are fully turned on. After the check, press SW6 return button to restart the judgments.

If unit detects that valve status is normal, it will display as below and start next progress.

| — | Debugging code | | Progress code | | Status code | | Meaning |
|--|----------------|----------------|---------------|----------------|-------------|----------------|--|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 10_Status judgments of outdoor valves before startup | db | Light | 10 | Light | OC | Light | Outdoor valves are turned on normally. |

Step 15: progress 11 is “Calculate refrigerant quantity manually”

No need to operate. System will start next progress.

Step 16: progress 12 is “Confirm debugging startup”

In order to make sure all preparation work is done before startup, this step is designed for user to confirm the startup again. Operate as below:

If master unit displays as below, system is waiting for confirmation signal.

| — | Debugging code | | Progress code | | Status code | | Meaning |
|--|----------------|----------------|---------------|----------------|-------------|----------------|-------------------------------------|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 12_Status judgments of outdoor valves before startup | db | Light | 12 | Light | AP | Blink | Ready for units to start debugging. |

If it's confirmed, press SW7 confirmation button. Unit will display as below and start next progress.

| — | Debugging code | | Progress code | | Status code | | Meaning |
|--|----------------|----------------|---------------|----------------|-------------|----------------|---|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 12_Status judgments of outdoor valves before startup | db | Light | 12 | Light | AE | Light | Manual calculation of refrigerant quantity is set up. |

Step 17: after unit is confirmed to start debugging, system select cooling/heating mode

according to ambient temperature.

A If cooling mode is selected, relevant display is as below:

| — | Debugging code | | Progress code | | Status code | | Meaning |
|----------------------|----------------|----------------|---------------|----------------|-------------|----------------|---|
| | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 15_Cooling debugging | db | Light | 15 | Light | AC | Light | Debugging is enabled in cooling mode (debugging mode, auto-selected by system). |
| | db | Light | 15 | Light | Error code | Light | Error occurs during debugging in cooling mode. |
| | db | Light | 15 | Light | J0 | Light | Error of other modules occurs during debugging in cooling mode. |
| | db | Light | 15 | Light | U9 | Light | Outdoor pipeline and valves are not normal. |
| | db | Light | 15 | Light | XXXX /U8 | Light | System detects error in indoor pipeline. XXXX is the project no. of the faulted IDU. 3s later, error code U8 is displayed. For example, IDU no. 100 has U8 error, then LED3 displays like this: 01 (2s later) 00 (2s later) U8, and repeat again. |

B If heating mode is selected, relevant display is as below:

| — | Debugging code | | Progress code | | Status code | | Meaning |
|----------------------|----------------|----------------|---------------|----------------|-------------|----------------|---|
| | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 16_Heating debugging | db | Light | 16 | Light | AE | Light | Debugging is enabled in heating mode (debugging mode, auto-selected by system). |
| | db | Light | 16 | Light | Error code | Light | Error occurs during debugging in heating mode. |
| | db | Light | 16 | Light | J0 | Light | Error of other modules occurs during debugging in heating mode. |
| | db | Light | 16 | Light | U9 | Light | Outdoor pipeline and valves are not normal. |
| | db | Light | 16 | Light | XXXX /U8 | Light | System detects error in indoor pipeline. XXXX is the project no. of the faulted IDU. 3s later, error code U8 is displayed. For example, IDU no. 100 has U8 error, then LED3 displays like this: 01 (2s later) 00 (2s later) U8, and repeat again. |

Step 18: if there's no error during operation for about 40min, system will automatically confirm that debugging is finished and then stop. System resumes standby condition and displays as below:

| — | Debugging code | | Progress code | | Status code | | Meaning |
|-----------------------|----------------|----------------|---------------|----------------|-------------|----------------|--|
| progress | LED1 | | LED2 | | LED3 | | |
| | Code | Display status | code | Display status | Code | Display status | |
| 17_Debugging finished | 01-04 | Light | OF | Light | OF | Light | Debugging is finished. System is on standby condition. LED1 displays module address. LED2 and LED3 display "OF". |

Step 19: after debugging is finished, some functions can be set up according to project's actual needs. For specific details, please refer to System Functions Setup. If no special requirements, skip this step.

Step 20: deliver the product to user and inform user about usage precautions.

5.2.3 Appendix: judgment reference of normal operational parameters

| Reference of Debug Parameters of photovoltaic multi VRF System | | | | | |
|--|-------------------|----------------|--|-----------|--|
| No. | Debug item | Parameter name | Unit | Reference | |
| 1 | System parameters | ODU | Outdoor ambient temp | °C(°F) | — |
| 2 | | | Discharge tube temp of inverter compressor 1 | °C(°F) | <ul style="list-style-type: none"> When system compressor starts up, temp of discharge tube or casing top in cooling mode is within 70~95°C (158~203°F), and at least 10°C(50°F) higher than system high pressure saturation temp; Temp in heating mode is within 65~80°C(149~176°F), and at least 10°C(50°F) higher than system high pressure saturation temp. When inverter compressor starts but inverter compressor 2 stops, the discharge tube temperature of inverter compressor 2 is almost the same with ambient temp. |
| 3 | | | Casing top temp of inverter compressor 1 | °C(°F) | |
| 4 | | | Discharge tube temp of inverter compressor 2 | °C(°F) | |
| 5 | | | Casing top temp of inverter compressor 2 | °C(°F) | |
| 6 | | | Defrost temp 1 | °C(°F) | |
| 7 | | | System high pressure | °C(°F) | <ul style="list-style-type: none"> System's normal high pressure value is within 20~25°C(68~77°F) According to the change in ambient temp and system operational capacity, system's high pressure value is 10~40°C(50~104°F) higher than ambient temp The higher ambient temp is, the smaller temp difference is. When ambient temp is 25~35°C(77~95°F), system's high pressure value in cooling mode is 44~53°C(111.2~127.4°F). When ambient temp is -5~10°C(23~50°F), system's high pressure value in heating mode is 40~52°C(104~125.6°F). |
| 8 | | | System low pressure | °C(°F) | <ul style="list-style-type: none"> When ambient temp is 25~35°C(77~95°F), system's low pressure value in cooling mode is 0~8°C(32~46.4°F). When ambient temp is -5~10°C(23~50°F), system's low pressure value in heating mode is -15~5°C(5~41°F). |
| 9 | | | Opening angle of heating EXV | PLS | <ul style="list-style-type: none"> In cooling mode, heating electronic expansion valve remains 480PLS. In heating mode, the opening angle of adjustable electronic expansion valve varies within 120~480PLS. |

| Reference of Debug Parameters of photovoltaic multi VRF System | | | | | |
|--|-------------------|--|---|---|---|
| N o. | Debug item | Parameter name | Unit | Reference | |
| 10 | System parameters | Operating freq. of inverter compressor 1 | Hz | Varies from 20Hz to 95Hz | |
| 11 | | Current of inverter compressor 1 | A | According to different operating freq. and different load, current will vary from 7A to 40A. | |
| 12 | | IPM temp of inverter compressor 1 | °C(°F) | When ambient temp is lower than 35°C(95°F), IPM temp is below 85°C(185°F). Highest temp won't be above 95°C(203°F). | |
| 13 | | Inverter compressor 1 driven bus voltage | V | Normal bus voltage is 1.414 times of power voltage. For example, if 3-phase power voltage is 220V, then the bus voltage after rectification is: 220V X 1.414=311V. It's normal if actual voltage varies 15v from the calculated voltage. | |
| 14 | | Operating freq. of inverter compressor 2 | Hz | Varies from 30Hz to 100Hz | |
| 15 | | Current of inverter compressor 2 | A | According to different operating freq. and different load, current will vary from 7A to 25A. | |
| 16 | | IPM temp of inverter compressor 2 | °C(°F) | When ambient temp is lower than 35°C(95°F), IPM temp is below 80°C(176°F). Highest temp won't be above 95°C(203°F). | |
| 17 | | Inverter compressor 2 driven bus voltage | V | Normal bus voltage is 1.414 times of power voltage. For example, if 3-phase power voltage is 220V , then the bus voltage after rectification is: 220V X 1.414=311V. It's normal if actual voltage varies 15v from the calculated voltage. | |
| 18 | | ODU | Operating freq of fan motor 1 | Hz | Adjusts in 0~65Hz according to system pressure. |
| 19 | | | Current of fan motor 1 | A | |
| 20 | | | Operating freq of fan motor 2 | Hz | Adjusts in 0~65Hz according to system pressure. |
| 21 | | | Current of fan motor 2 | A | |
| 22 | | IDU | Ambient temp of IDU | °C(°F) | — |
| 23 | | | Inlet tube temp of indoor heat exchanger | °C(°F) | ● According to different ambient temp, for a same IDU under cooling mode, inlet tube temp will be 1~7°C(33.8~44.6°F) lower than outlet tube temp. |
| 24 | | | Outlet tube temp of indoor heat exchanger | °C(°F) | ● For a same IDU under heating mode, inlet tube temp will be 10~20°C(50~68°F) lower than outlet tube temp. |
| 25 | | | Opening angle of indoor EXV | PLS | Adjusts opening angle automatically in 200~2000PLS or 70~480PLS. |
| 26 | | Communication parameter | Communication data | — | Quantity of IDU and ODU detected by software is the same with actual quantity. No communication error. |
| 27 | Drainage system | — | — | IDU can drain water out completely and smoothly. Condensate pipe has no backward slope of water. Water of ODU can be drained completely through drainage pipe. No water drop from unit base. | |
| 28 | Others | — | °C(°F) | Compressor and indoor/outdoor fan motor has no strange noise. Unit operates normally. | |

6 Common Malfunction and Troubleshooting

Check the following items before contacting for repair.

| Phenomenon | Reason | Measure |
|--------------------------------|---|--|
| The unit doesn't run. | Without power supply | Connect to power supply |
| | Voltage is too low | Check if the voltage is within rating range |
| | Broken fuse or breaker trips off | Replace fuse or connect breaker |
| | Insufficient energy of remote controller | Replace new battery |
| | Remote controller is out of control scope | Control scope is within 8m |
| Unit runs but stop immediately | Air intake or outlet of indoor or outdoor unit is blocked | Remove obstruction |
| Abnormal cooling or heating | Air intake or outlet of indoor or outdoor unit is blocked | Remove obstruction |
| | Improper temperature setting | Adjust setting at wireless remote controller or wired controller |
| | Fan speed is set too low | Adjust setting at wireless remote controller or wired controller |
| | Wind direction is not correct | Adjust setting at wireless remote controller or wired controller |
| | Door or windows are opened | Close the door or windows |
| | Direct sunshine | Draw curtain or louver |
| | Too many people in the room | |
| | Too many heat resources in the room | Reduce heat resources |
| | Filter is blocked for dirt | Clean the filter |

NOTICE

(1) When installing remote monitor or central controller, displacement on indoor units' project codes must be made. Otherwise, there will be collision malfunction of the project codes. For detail operation methods, please refer to the Photovoltaic Multi VRF Installation and Maintenance Manual.

(2) If problem cannot be solved after checking the above items, please contact Gree service center and show phenomena and models.

Following circumstance are not malfunction.

| "Malfunction" | | Reason |
|---|---|---|
| Unit doesn't run | When unit is started immediately after it is just turned off | Overload protection switch makes it run after 3 minutes delay |
| | When power is turned on | Standby operating for about 1 minute |
| Mist comes from the unit | Under cooling | Indoor high humidity air is cooled rapidly |
| Noise is emitted | Slight cracking sound is heard when just turned on | It is noise when electronic expansion valve initialization |
| | There is consecutive sound when cooling | That's sound for gas refrigerant flowing in unit |
| | There is sound when unit starts or stops | That's sound for gas refrigerant stops to flow |
| | There is slight and consecutive sound when unit is running or after running | That's sound for operation of drainage system |
| | Cracking sound is heard when unit is operating and after operating | That's sound caused by expansion of panel and other parts due to temperature change |
| The unit blows out duct | When unit runs after no operation for a long period | Dust in indoor unit is blew out |
| The unit emits odor | Operating | The room odor absorbed by the unit is blew out again |
| Indoor unit still runs after switch off | After every indoor unit receive "stop" signal, fan will keep running | Indoor fan motor will keep running 20-70s so as to take good use of excess cooling and heating and prepare for next operation |
| Mode conflict | COOL or HEAT mode cannot be operated | When the indoor operating mode conflicts with that of outdoor unit, indoor fault indicator will flash and conflict will be shown on the wired controller after 5 minutes. Indoor unit stops to run and meanwhile change outdoor operating mode as the same as that of indoor unit, then the unit will go back to normal. COOL mode doesn't conflict with DRY mode. FAN mode doesn't conflict with any mode. |

7 Error Indication

Inquiry method of malfunction display: combine division number and content number to check the corresponding malfunction.

Indoor:

| Error Code | Content | Error Code | Content |
|------------|---|------------|--|
| L0 | Malfunction of IDU | d2 | Malfunction of lower water temperature sensor of water tank |
| L1 | Protection of indoor fan | d3 | Malfunction of ambient temperature sensor |
| L2 | Auxiliary heating protection | d4 | Malfunction of entry-tube temperature sensor |
| L3 | Water-full protection | d6 | Malfunction of exit-tube temperature sensor |
| L4 | Abnormal power supply for wired controller | d7 | Malfunction of humidity sensor |
| L5 | Freeze prevention protection | d8 | Malfunction of water temperature sensor |
| L7 | No main IDU | d9 | Malfunction of jumper cap |
| L8 | Power supply is insufficient | dA | Web address of IDU is abnormal |
| L9 | For single control over multiple units, number of IDU is inconsistent | dH | PCB of wired controller is abnormal |
| LA | For single control over multiple units, IDU series is inconsistent | dC | Setting capacity of DIP switch code is abnormal |
| LH | Alarm due to bad air quality | dL | Malfunction of air outlet temperature sensor |
| LC | IDU is not matching with outdoor unit | dE | Malfunction of indoor CO ₂ sensor |
| LL | Malfunction of water flow switch | dF | Malfunction of upper water temperature sensor of water tank |
| LE | Rotation speed of EC DC water pump is abnormal | dJ | Malfunction of backwater temperature sensor |
| LF | Malfunction of shunt valve setting | dP | Malfunction of inlet tube temperature sensor of generator |
| LJ | Setting of functional DIP switch code is wrong | dU | Malfunction of drainage pipe temperature sensor of generator |
| LP | Zero-crossing malfunction of PG motor | db | Debugging status |
| LU | Indoor unit's branch is not inconsistent for one-to-more unit of heat recovery system | dd | Malfunction of solar power temperature sensor |
| d1 | Indoor PCB is poor | dn | Malfunction of swing parts |

Outdoor:

| Error Code | Content | Error Code | Content |
|------------|---|------------|--|
| E0 | Malfunction of ODU | FC | Current sensor of compressor 2 is abnormal |
| E1 | High-pressure protection | FL | Current sensor of compressor 3 is abnormal |
| E2 | Discharge low-temperature protection | FE | Current sensor of compressor 4 is abnormal |
| E3 | Low-pressure protection | FF | Current sensor of compressor 5 is abnormal |
| E4 | High discharge temperature protection of compressor | FJ | Current sensor of compressor 6 is abnormal |
| J0 | Protection for other modules | FP | Malfunction of DC motor |

| Error Code | Content | Error Code | Content |
|------------|--|------------|--|
| J1 | Over-current protection of compressor 1 | FU | Malfunction of casing top temperature sensor of compressor 1 |
| J2 | Over-current protection of compressor 2 | Fb | Malfunction of casing top temperature sensor of compressor 2 |
| J3 | Over-current protection of compressor 3 | Fd | Malfunction of exit tube temperature sensor of mode exchanger |
| J4 | Over-current protection of compressor 4 | Fn | Malfunction of inlet tube temperature sensor of mode exchanger |
| J5 | Over-current protection of compressor 5 | b1 | Malfunction of outdoor ambient temperature sensor |
| J6 | Over-current protection for compressor 6 | b2 | Malfunction of defrosting temperature sensor 1 |
| J7 | Gas-mixing protection of 4-way valve | b3 | Malfunction of defrosting temperature sensor 2 |
| J8 | High pressure ratio protection of system | b4 | Malfunction of liquid temperature sensor of sub-cooler |
| J9 | Low pressure ratio protection of system | b5 | Malfunction of gas temperature sensor of sub-cooler |
| JA | Protection because of abnormal pressure | b6 | Malfunction of inlet tube temperature sensor of vapor liquid separator |
| JC | Water flow switch protection | b7 | Malfunction of exit tube temperature sensor of vapor liquid separator |
| JL | Protection because high pressure is too low | b8 | Malfunction of outdoor humidity sensor |
| JE | Oil-return pipe is blocked | b9 | Malfunction of gas temperature sensor of heat exchanger |
| JF | Oil-return pipe is leaking | bA | Malfunction of oil-return temperature sensor 1 |
| P0 | malfunction of driving board of compressor | bH | Clock of system is abnormal |
| P1 | Driving board of compressor operates abnormally | bE | Malfunction of inlet tube temperature sensor of condenser |
| P2 | Voltage protection of driving board power of compressor | bF | Malfunction of outlet tube temperature sensor of condenser |
| P3 | Reset protection of driving module of compressor | bJ | High-pressure sensor and low-pressure sensor are connected reversely |
| P4 | Drive PFC protection of compressor | bP | Malfunction of temperature sensor of oil-return 2 |
| P5 | Over-current protection of inverter compressor | bU | Malfunction of temperature sensor of oil return 3 |
| P6 | Drive IPM module protection of compressor | bb | Malfunction of temperature sensor of oil return 4 |
| P7 | Malfunction of drive temperature sensor of compressor | H0 | Malfunction of driving board of fan |
| P8 | Drive IPM high temperature protection of compressor | H1 | Driving board of fan operates abnormally |
| P9 | Desynchronizing protection of inverter compressor | H2 | Voltage protection of driving board power of fan |
| PA | Malfunction of drive storage chip of compressor | H3 | Reset protection of driving module of fan |
| PH | High-voltage protection of compressor's drive DC bus bar | H4 | Drive PFC protection of fan |
| PC | Malfunction of current detection circuit drive of compressor | H5 | Over-current protection of inverter fan |
| PL | Low voltage protection for DC bus bar of drive of compressor | H6 | Drive IPM module protection of fan |
| PE | Phase-lacking of inverter compressor | H7 | Malfunction of drive temperature sensor of fan |

| Error Code | Content | Error Code | Content |
|------------|---|------------|---|
| PF | Malfunction of charging loop of driven of compressor | H8 | Drive IPM high temperature protection of fan |
| PJ | Failure startup of inverter compressor | H9 | Desynchronizing protection of inverter fan |
| PP | AC current protection of inverter compressor | HA | Malfunction of drive storage chip of inverter outdoor fan |
| PU | AC input voltage of drive of inverter compressor | HH | High-voltage protection of fan's drive DC bus bar |
| F0 | Main board of ODU is poor | HC | Malfunction of current detection circuit of fan drive |
| F1 | Malfunction of high-pressure sensor | HL | Low voltage protection of bus bar of fan drive |
| F3 | Malfunction of low-pressure sensor | HE | Phase-lacking of inverter fan |
| F5 | Malfunction of discharge temperature sensor of compressor 1 | HF | Malfunction of charging loop of fan drive |
| F6 | Malfunction of exit-tube temperature sensor | HJ | Failure startup of inverter fan |
| F7 | Malfunction of humidity sensor | HP | AC current protection of inverter fan |
| F8 | Malfunction of water temperature sensor | HU | AC input voltage of drive of inverter fan |
| F9 | Malfunction of jumper cap | HJ | Failure startup of inverter fan |
| FA | Web address of IDU is abnormal | HP | AC current protection of inverter fan |
| FH | Current sensor of compressor 1 is abnormal | HU | AC input voltage of drive of inverter fan |
| G0 | PV reversed connection protection | GH | Photovoltaic DC\DC protection |
| G1 | PV Anti-islanding protection | GC | Photovoltaic DC hardware overcurrent protection |
| G2 | PV DC overcurrent protection | GL | Grid side hardware overcurrent protection |
| G3 | PV power generation overload | GE | High or low photovoltaic voltage protection |
| G4 | PV leakage current protection | Gb | Grid side relay protection |
| G5 | Phase-lacking protection at power grid side | Gn | Insulation resistance protection |
| G6 | Phase-lacking protection at power grid side | GF | DC bus neutral-point potential unbalance protection |
| G7 | PV LVRT | GJ | Grid side module high-temperature protection |
| G8 | Overcurrent protection at power grid side | GP | Grid side temperature sensor protection |
| G9 | Drive IPM module protection at power grid side | GU | Charging circuit protection |
| GA | Low/high input voltage protection at power grid side | Gb | Grid side relay protection |
| Gy | Power protection(PV) | Gd | Grid side current sensor protection |

Debugging:

| Error Code | Content | Error Code | Content |
|------------|---|------------|---|
| U0 | Preheat time of compressor is insufficient | C5 | Alarm because project code of IDU is inconsistent |
| U2 | Wrong setting of ODU's capacity code/jumper cap | C6 | Alarm because ODU quantity is inconsistent |
| U3 | Power supply phase sequence protection | C7 | Abnormal communication of converter |
| U4 | Refrigerant-lacking protection | C8 | Emergency status of compressor |
| U5 | Wrong address for driving board of compressor | C9 | Emergency status of fan |

| Error Code | Content | Error Code | Content |
|------------|---|------------|---|
| U6 | Alarm because valve is abnormal | CA | Emergency status of module |
| U8 | Malfunction of pipeline for IDU | CH | Rated capacity is too high |
| U9 | Malfunction of pipeline for ODU | CC | No main unit |
| UC | Setting of main IDU is succeeded | CL | The matching ratio of rated capacity for IDU and ODU is too low |
| UL | Emergency operation DIP switch code of compressor is wrong | CE | Communication malfunction between mode exchanger and IDU |
| UE | Charging of refrigerant is invalid | CF | Malfunction of multiple main control units |
| UF | Identification malfunction of IDU of mode exchanger | CJ | Address DIP switch code of system is shocking |
| Ud | Drive board of grid-connection is abnormal | CP | Malfunction of multiple wired controller |
| Un | Communication malfunction between the drive board of grid-connection and the main board | CU | Communication malfunction between IDU and the receiving lamp |
| C0 | Communication malfunction between IDU, ODU and IDU's wired controller | Cb | Overflow distribution of IP address |
| C1 | Communication malfunction between main control and DC-DC controller | Cd | Communication malfunction between mode exchanger and ODU |
| C2 | Communication malfunction between main control and inverter compressor driver | Cn | Malfunction of network for IDU and ODU of mode exchanger |
| C3 | Communication malfunction between main control and inverter fan driver | Cy | Communication malfunction of mode exchanger |
| C4 | Malfunction of lack of IDU | | |

Status:

| Error Code | Content | Error Code | Content |
|------------|--|------------|--|
| A0 | Unit waiting for debugging | Ay | Shielding status |
| A2 | Refrigerant recovery operation of after-sales | n0 | SE operation setting of system |
| A3 | Defrosting | n3 | Compulsory defrosting |
| A4 | Oil-return | n4 | Limit setting for max. capacity/output capacity |
| A6 | Heat pump function setting | n5 | Compulsory excursion of engineering code of IDU |
| A7 | Quiet mode setting | n6 | Inquiry of malfunction |
| A8 | Vacuum pump mode | n7 | Inquiry of parameters |
| AH | Heating | n8 | Inquiry of project code of IDU |
| AC | Cooling | n9 | Check quantity of IDU on line |
| AL | Charge refrigerant automatically | nA | Heat pump unit |
| AE | Charge refrigerant manually | nH | Heating only unit |
| AF | Fan | nC | Cooling only unit |
| AJ | Cleaning reminding of filter | nE | Negative code |
| AP | Debugging confirmation when starting up the unit | nF | Fan model |
| AU | Long-distance emergency stop | nJ | High temperature prevention when heating |
| Ab | Emergency stop of operation | nU | Eliminate the long-distance shielding command of IDU |
| Ad | Limit operation | nb | Bar code inquiry |
| An | Child lock status | nn | Length modification of connection pipe of ODU |

8 Maintenance and Care

Regular check, Maintenance and care should be performed every six months by professional personnel, which will prolong the unit life span. Disconnect the power supply before cleaning and maintenance.

8.1 Outdoor Heat Exchanger

Outdoor heat exchanger is required to be cleaned once every six months. Use vacuum cleaner with nylon brush to clean up dust and sundries on the surface of heat exchanger. Blow away dust by compressed air if it is available. Never use water to wash the heat exchanger.

8.2 Drain Pipe

Regularly check if the drain pipe is clogged in order to drain condensate smoothly.

8.3 Notice before Seasonal Use

- (1) Check if the inlet/outlet of the indoor/outdoor unit is clogged.
- (2) Check if the ground wire is earthed reliably.
- (3) Check if battery of remote wireless controller has been replaced.
- (4) Check if the filter screen has been set soundly.
- (5) After long period of shutdown, open the main power switch 8 hours before reoperating the unit so as to preheat the compressor crankcase.
- (6) Check if the outdoor unit is installed firmly. If there is something abnormal, please contact the GREE appointed service center.

8.4 Maintenance after Seasonal Use

- (1) Cut off main power supply of the unit.
- (2) Clean filter screen and indoor and outdoor units.
- (3) Clean the dust and sundries on the indoor and outdoor units.
- (4) In the event of rusting, use the anti-rust paint to stop spreading of rust.

8.5 Parts Replacement

Purchase parts from Gree appointed service center or dealer if necessary.


NOTICE! During airtight and leakage test, never mix oxygen, ethyne and other dangerous gas into refrigeration circuit. In case of hazard, it's better to use nitrogen or refrigerant to accomplish such test.

9 After-sales Service

In case the air-conditioning unit you bought has any quality problem or you have any inquiry, please contact the local after-sales service agency designated by Gree.

Warranty should meet the following requirements:

- (1) First run of the unit should be operated by professional personnel from Gree appointed service center.
- (2) Only Gree manufactured accessories can be used on the machine.
- (3) All the instructions listed in this manual should be followed.
- (4) Warranty will be automatically invalid if fails to obey any item mentioned above.

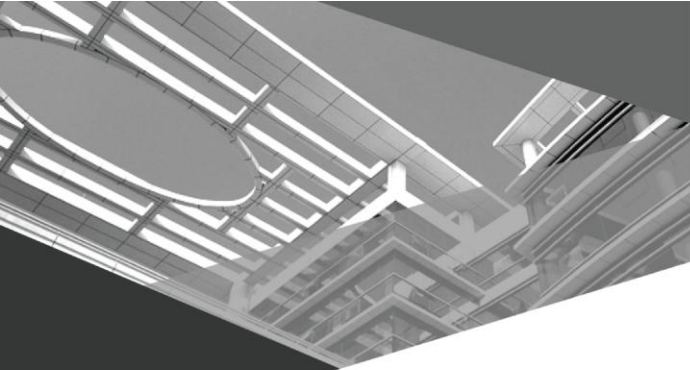

GREE ELECTRIC APPLIANCES, INC. OF ZHUHAI

Add: West Jinji Rd, Qianshan, Zhuhai,Guangdong, China, 519070

Tel: (+86-756) 8522218

Fax: (+86-756) 8669426

E-mail: gree@gree.com.cn www.gree.com



600005060726